



# TABLE OF CONTENTS

|                                                                 |              |
|-----------------------------------------------------------------|--------------|
| <b>Assembling Instructions - Base Cabinet</b>                   | <b>3-6</b>   |
| <b>Assembling Instructions - Lazy Susan Corner Base Cabinet</b> | <b>7-12</b>  |
| <b>Assembling Instructions - Blind Corner Base Cabinet</b>      | <b>13-18</b> |
| <b>Assembling Instructions - Base 3 Drawers Cabinet</b>         | <b>19-24</b> |
| <b>Assembling Instructions - Wall Cabinet</b>                   | <b>25-27</b> |
| <b>Assembling Instructions - Wall Diagonal Corner Cabinet</b>   | <b>28-32</b> |
| <b>Assembling Instructions - Pantry</b>                         | <b>33-38</b> |
| <b>Assembling Instructions - Oven Cabinet</b>                   | <b>39-45</b> |
| <b>Assembling Instructions - Vanity</b>                         | <b>46-51</b> |


# ASSEMBLING INSTRUCTIONS - BASE CABINET

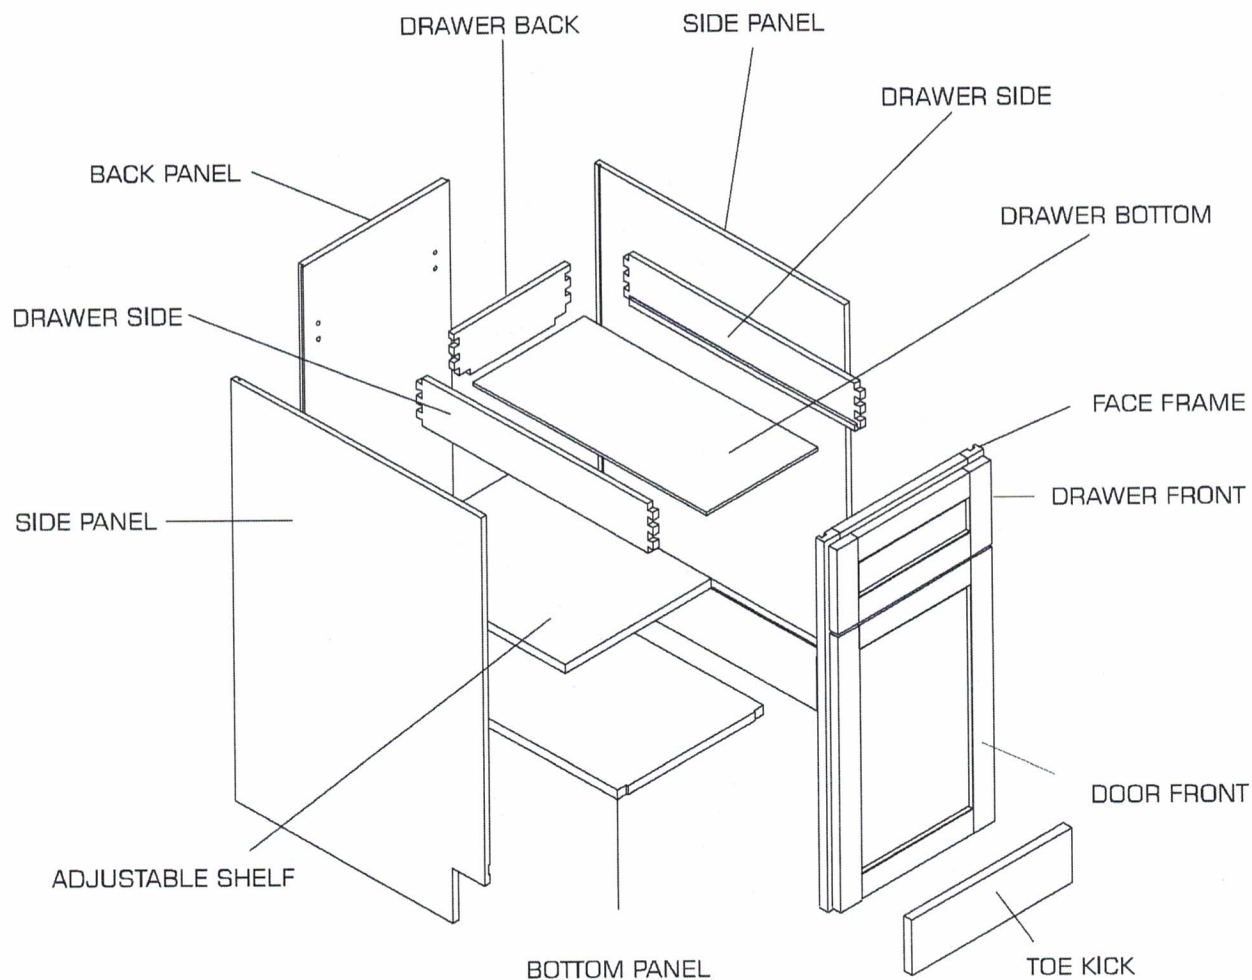


GLIDES

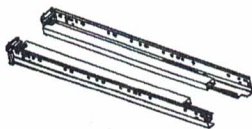


METAL BRACKETS




SCREWS




SHELF CLIPS



GLIDE SUPPORTS

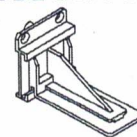

## TOOLS




WOOD  
GLUE




SCREW  
DRIVER



RUBBER  
Mallet

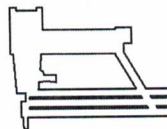

NAIL  
GUN

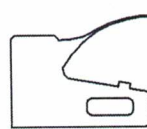


STAPLER




SPOTNAILS  
XC1008


**STEP 1**

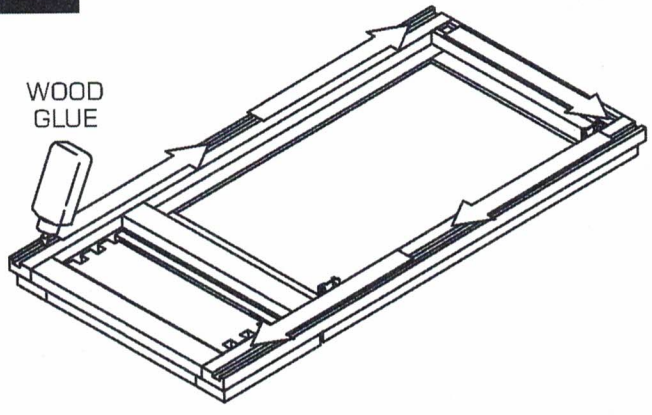


**STEP 2**

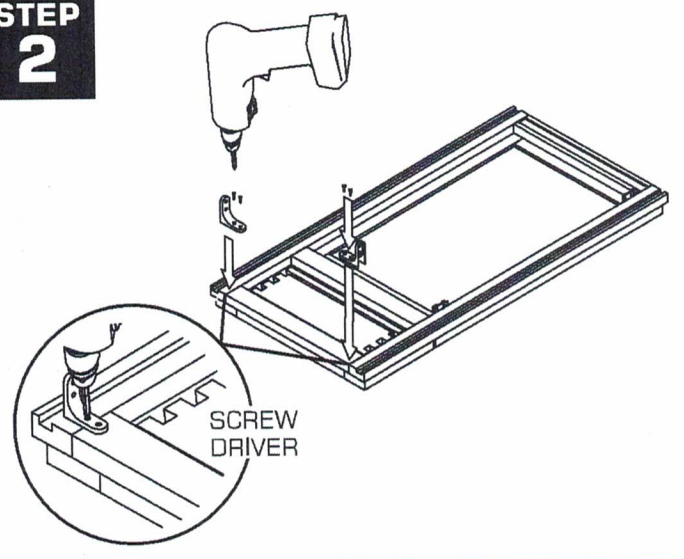


**STEP 3**

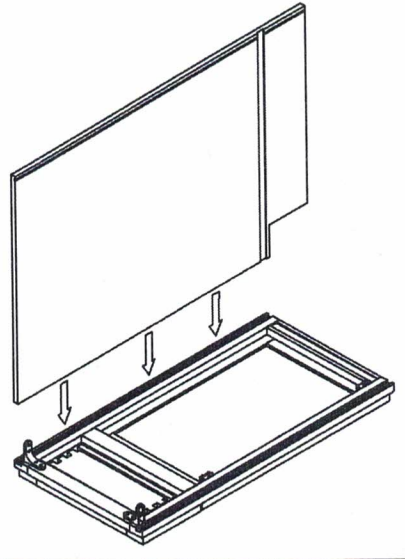


**STEP 4**

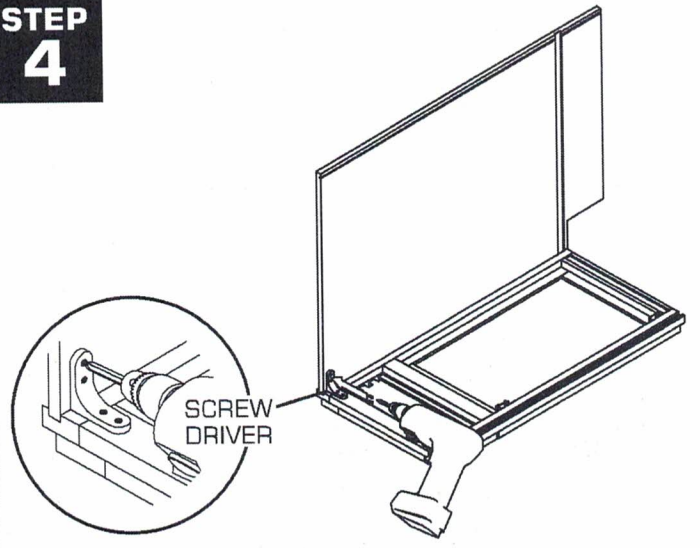

**STEP 5**

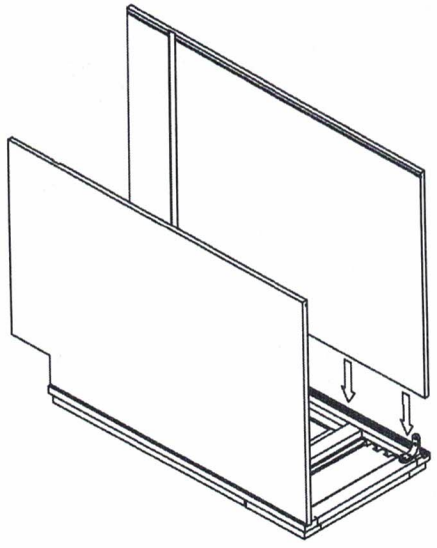


**STEP 6**

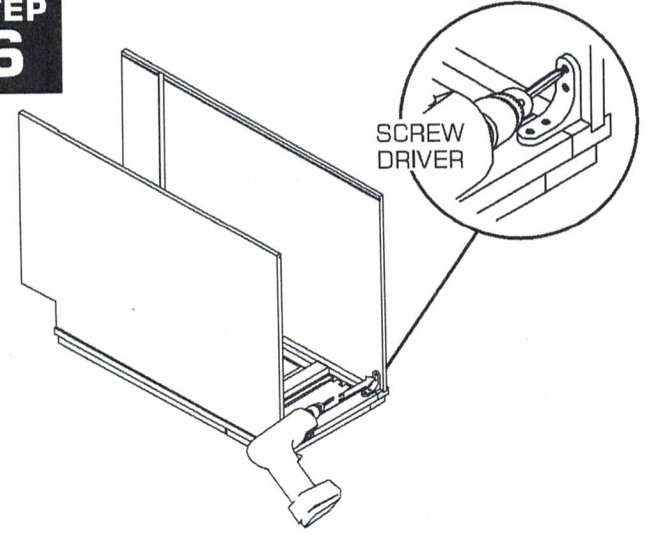





**STEP  
7**

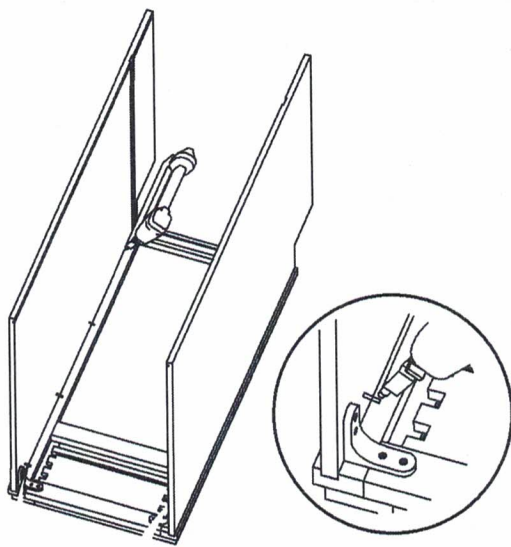


**STEP  
8**

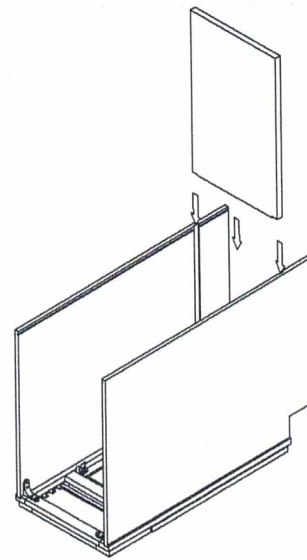


**STEP  
9**

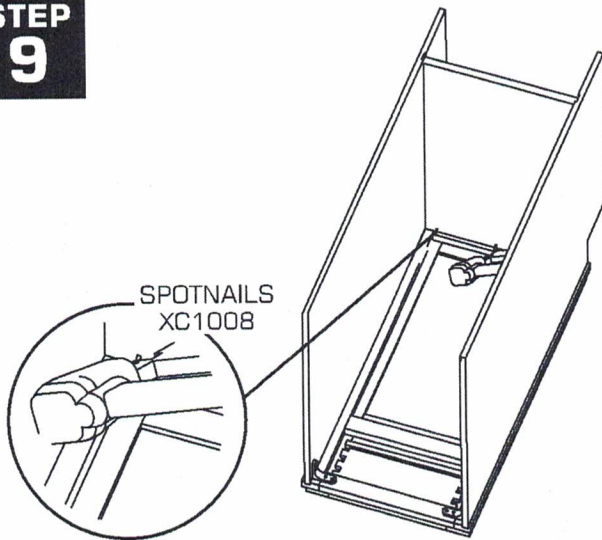

**STEP  
10**

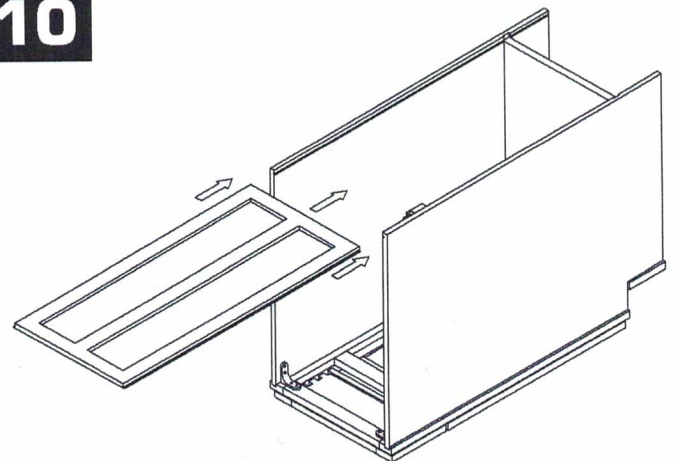


**STEP  
11**

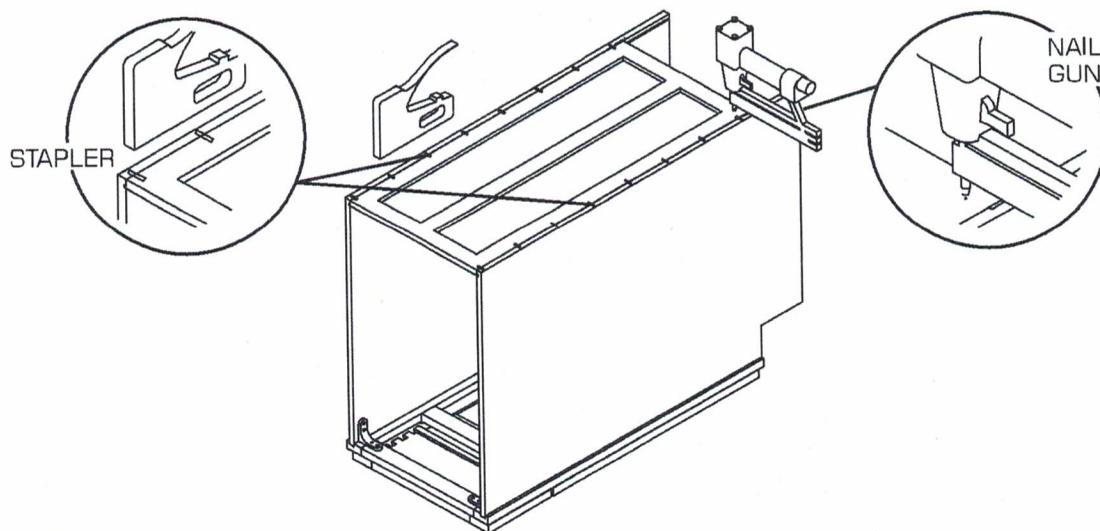





**STEP  
12**

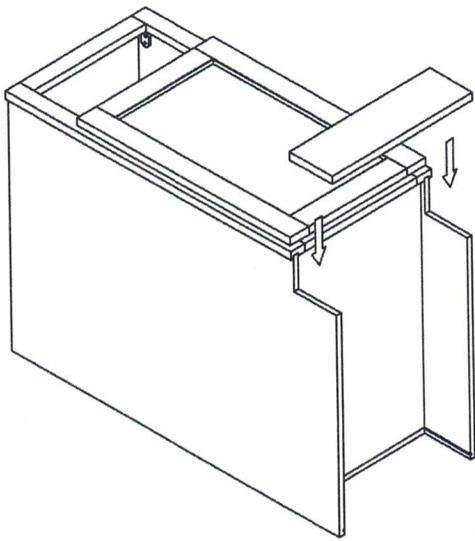


**STEP  
13**

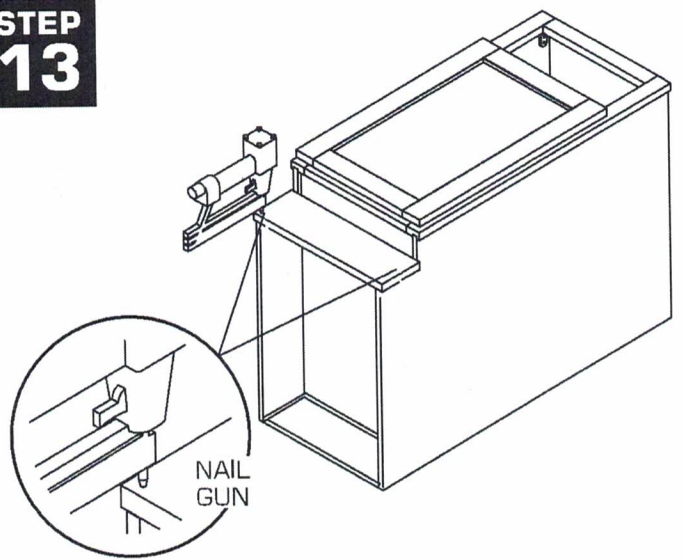


**STEP  
14**

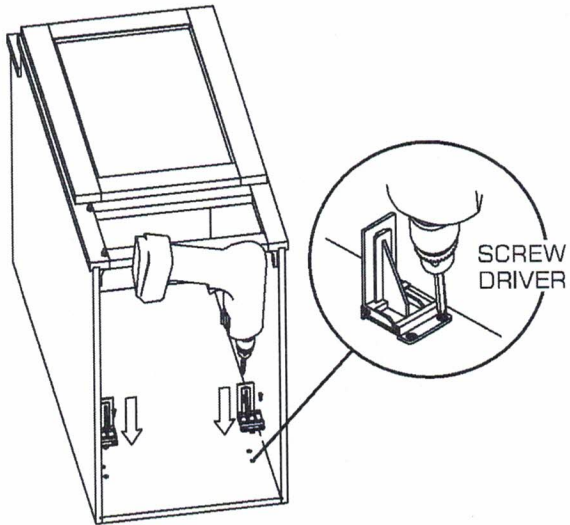


**STEP  
15**

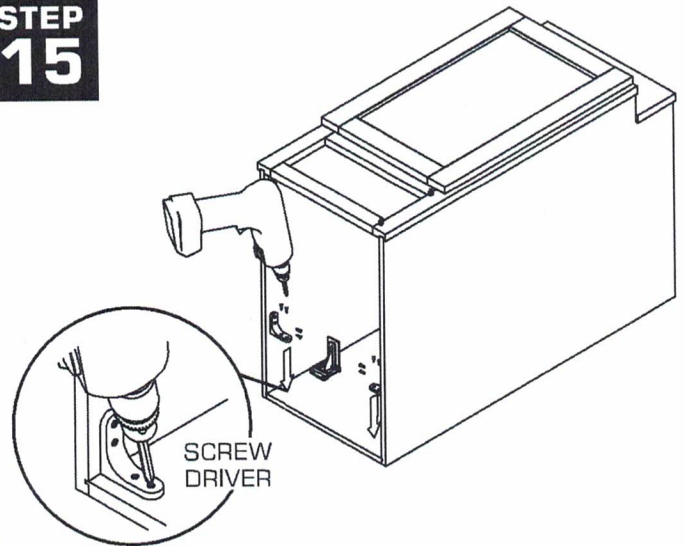


**STEP  
16**

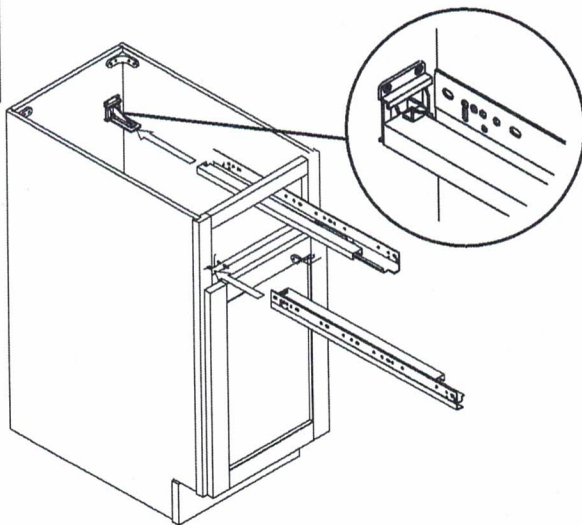


**STEP  
17**

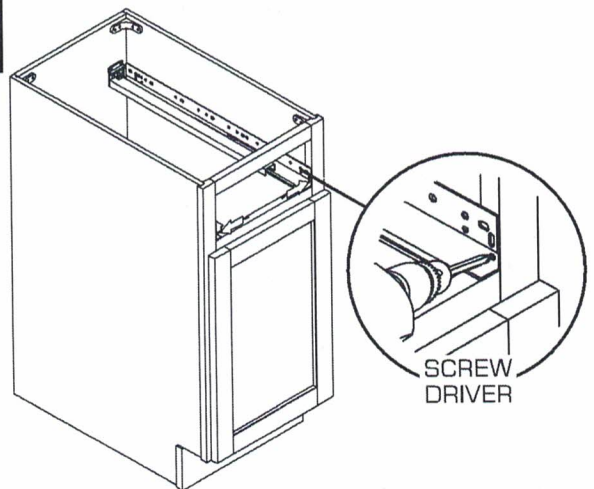


**STEP  
18**

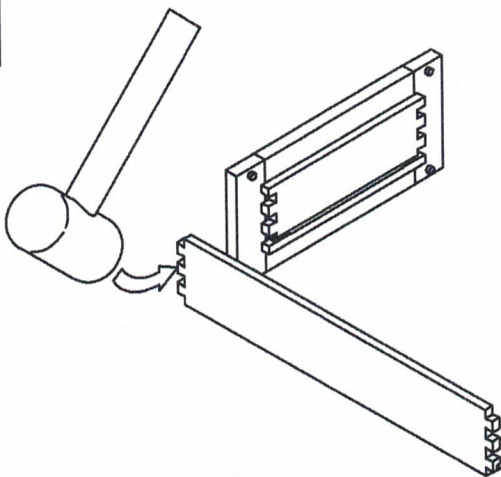


**STEP  
19**

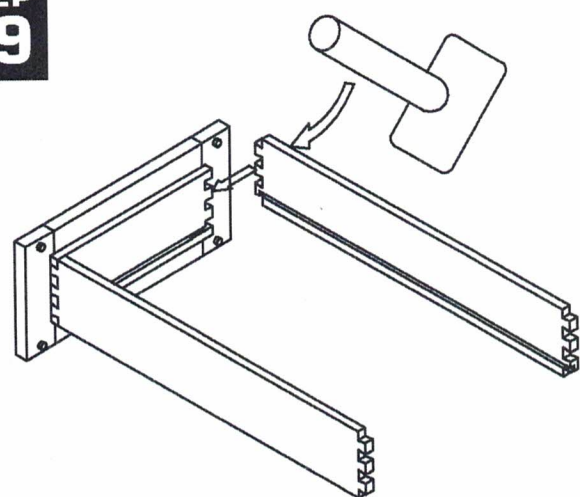


**STEP  
20**

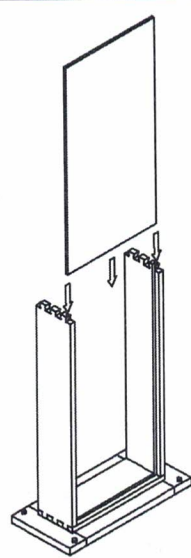


**STEP  
21**

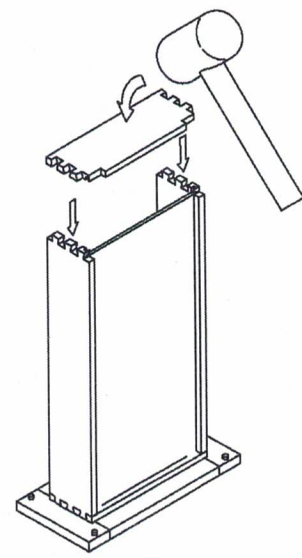


**STEP  
22**

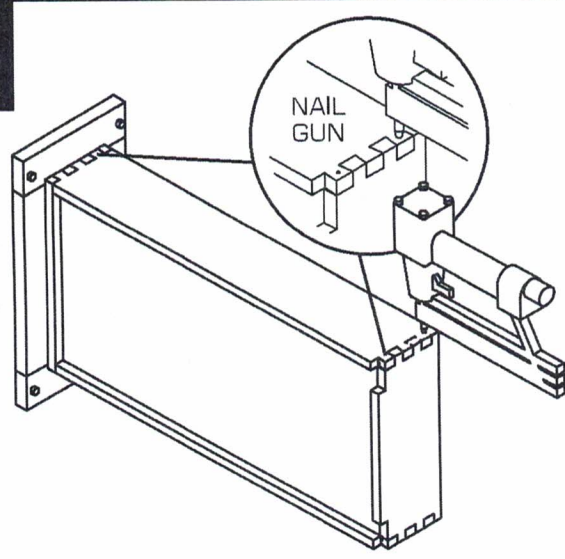


**STEP  
23**

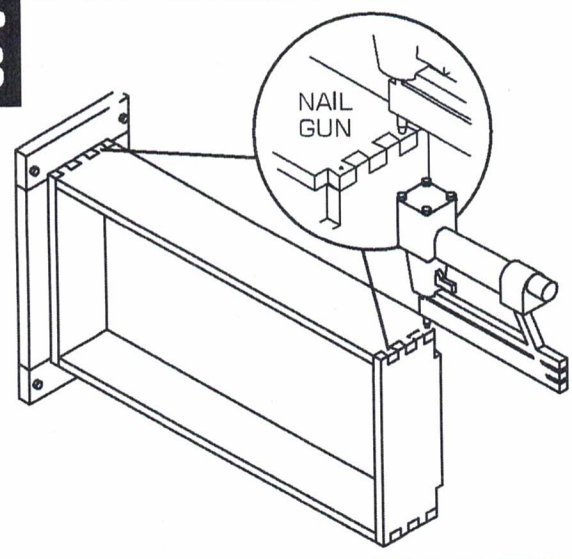


**STEP  
24**

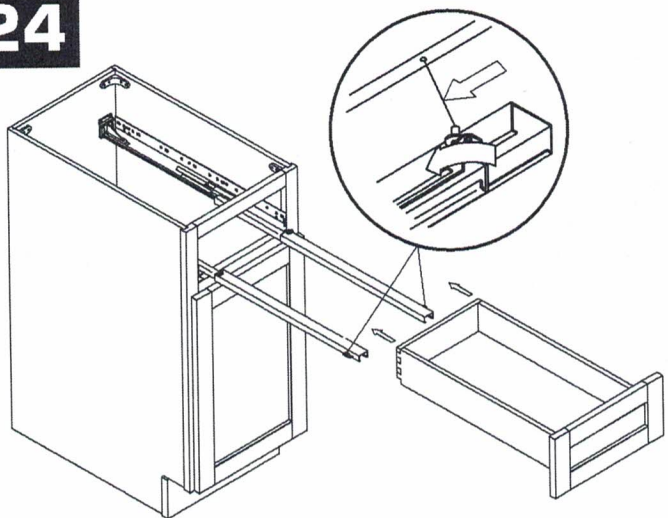


**STEP  
25**

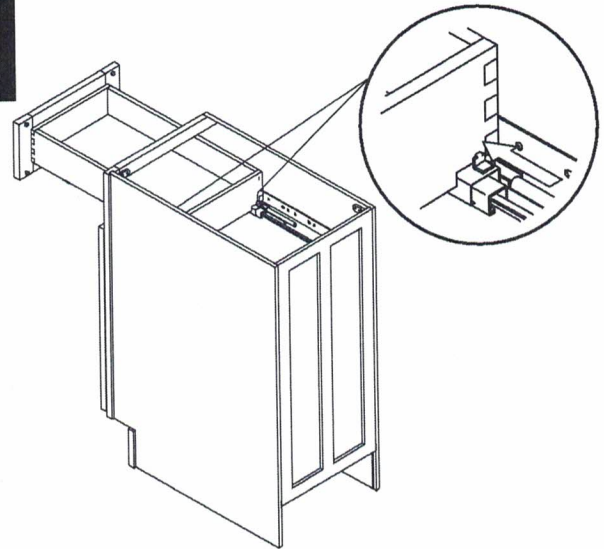

**STEP  
26**

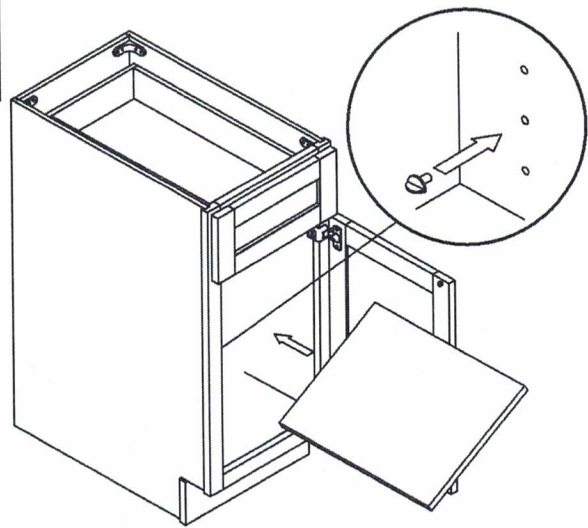



**STEP  
27**

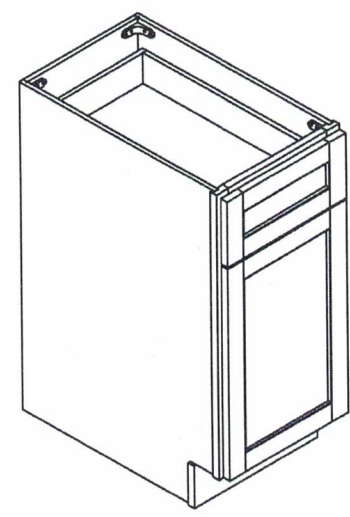


**BASE CABINET**




# ASSEMBLING INSTRUCTIONS - LAZY SUSAN CABINET

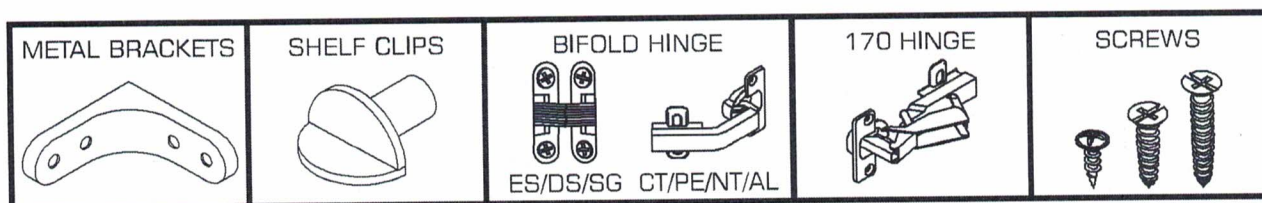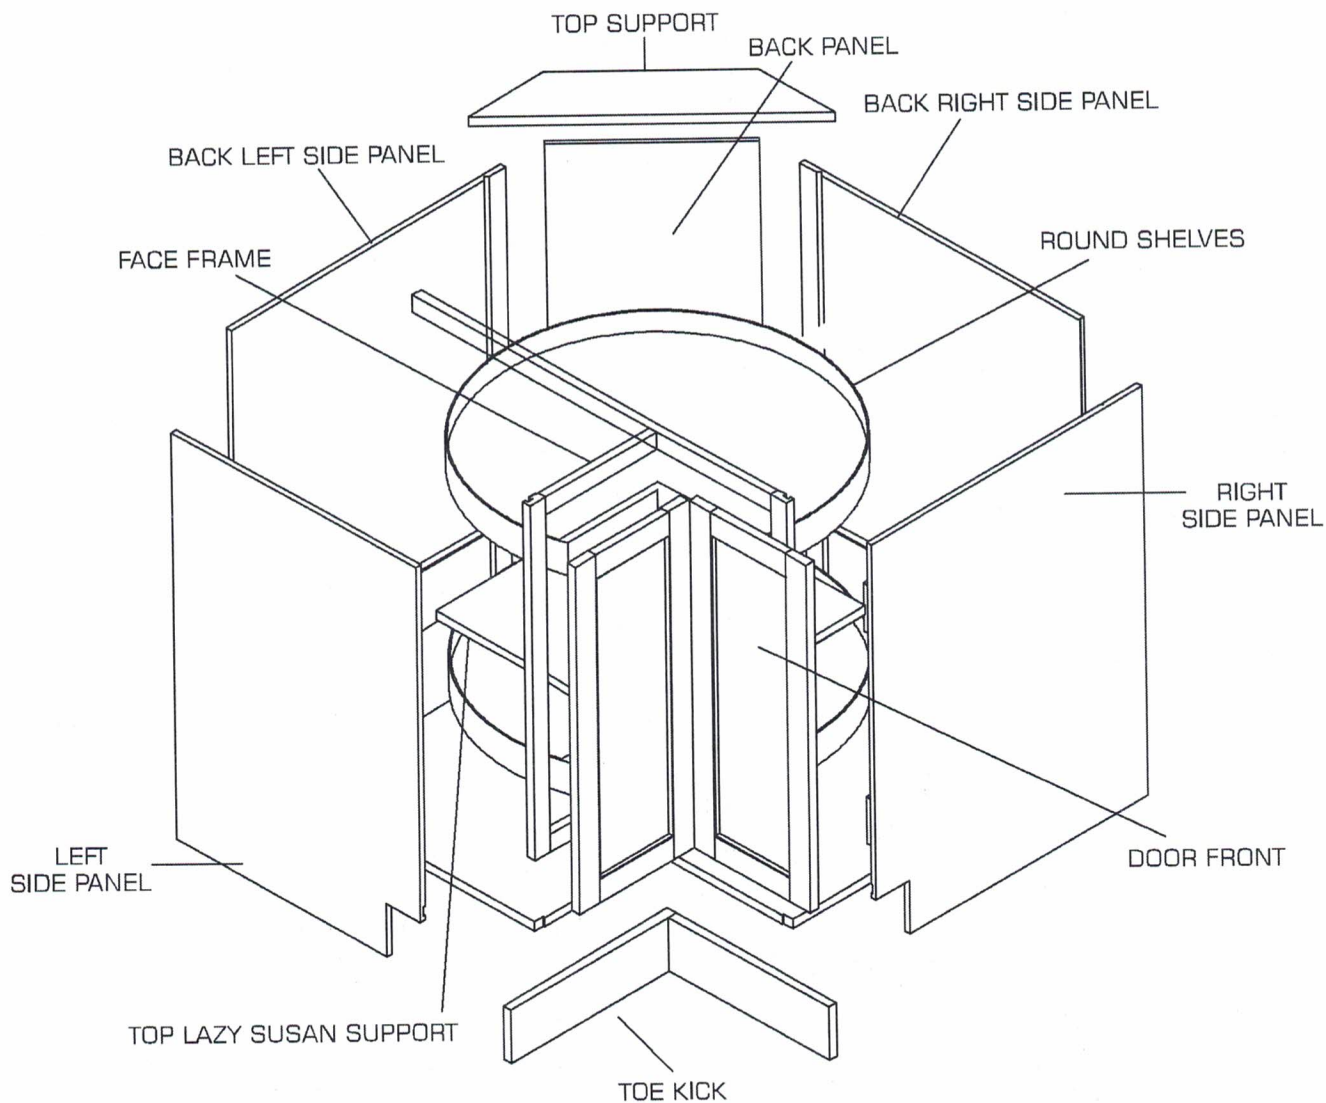


**STEP  
1**

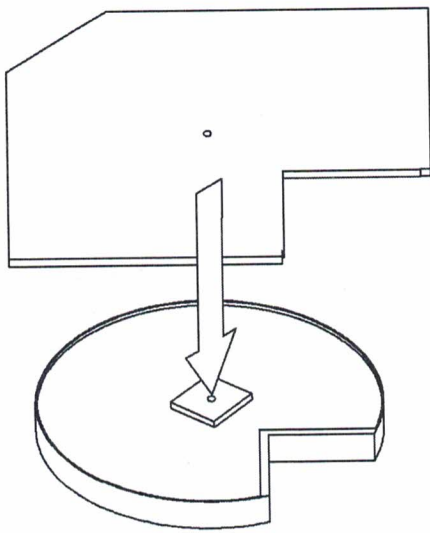


**STEP  
2**

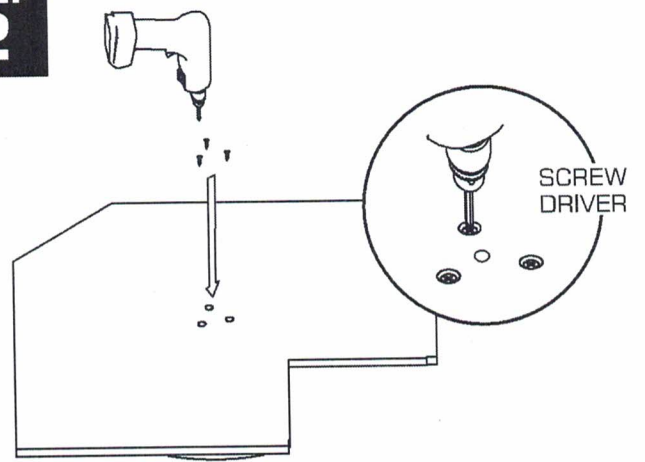


**STEP  
3**

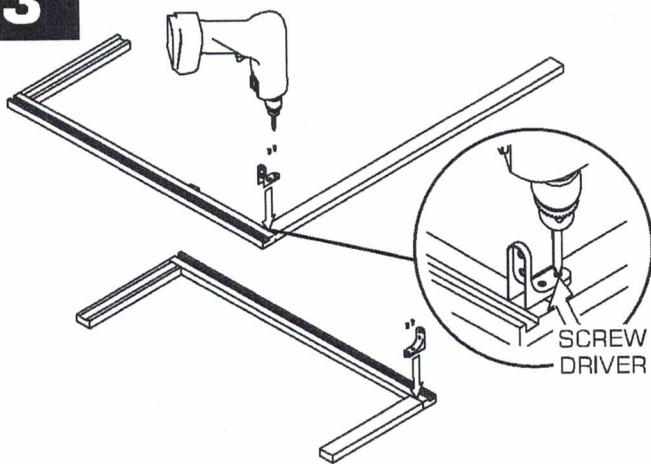


**STEP  
4**

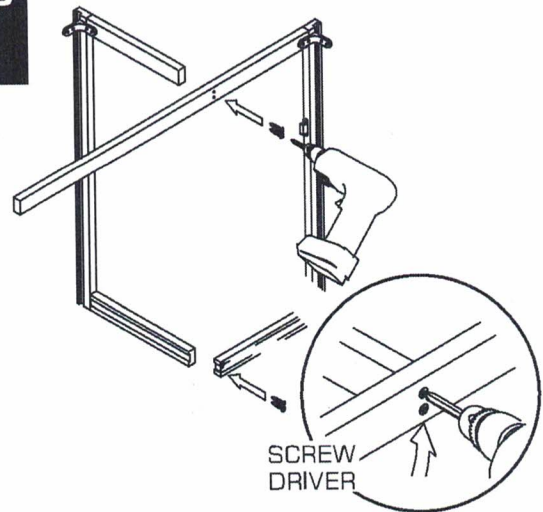


**STEP  
5**

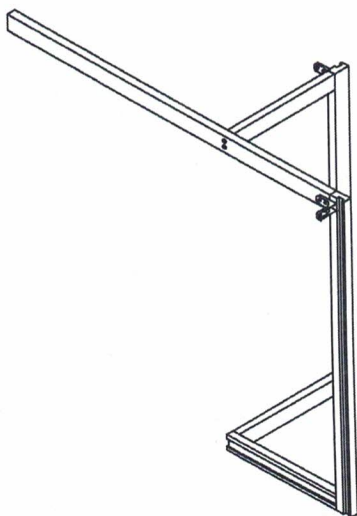


**STEP  
6**

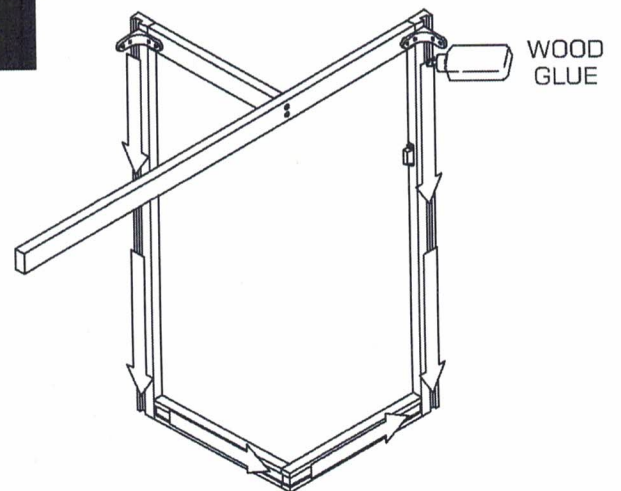


**STEP  
7**

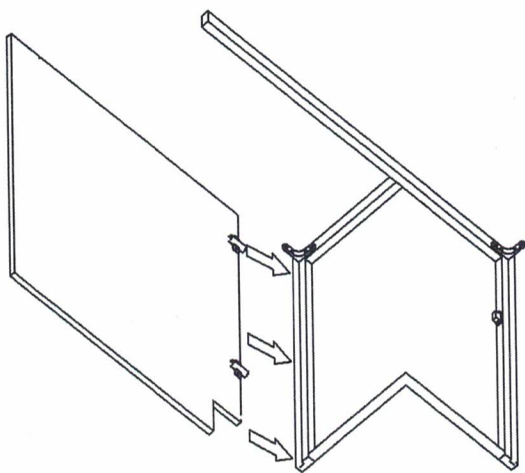


**STEP  
8**

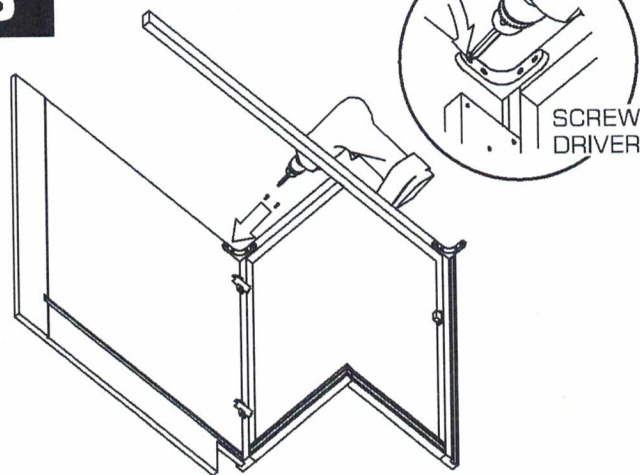


**STEP  
9**

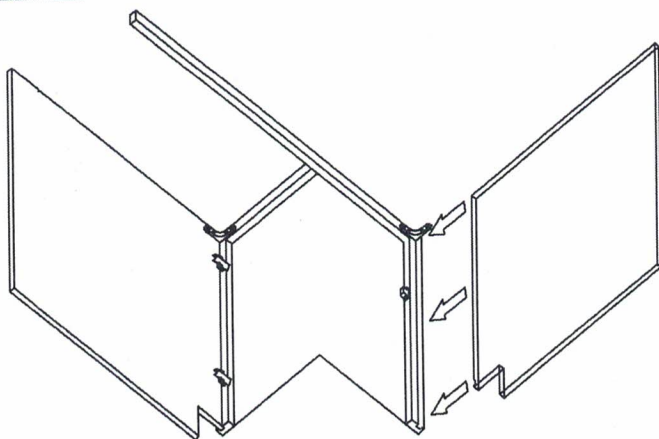


**STEP  
10**

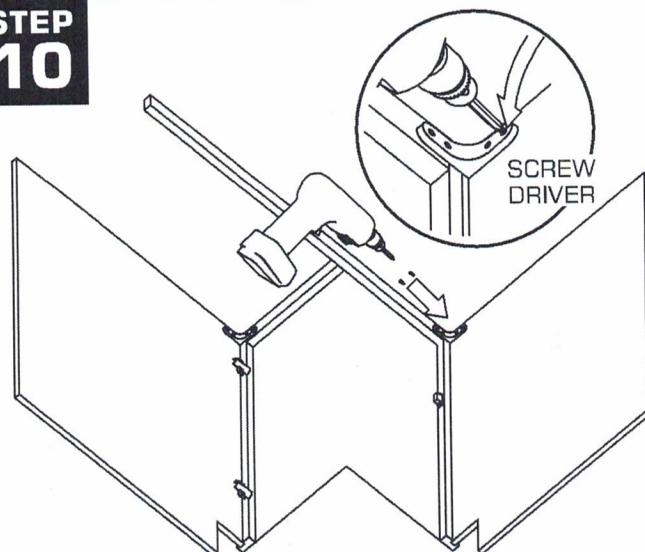

**STEP  
11**

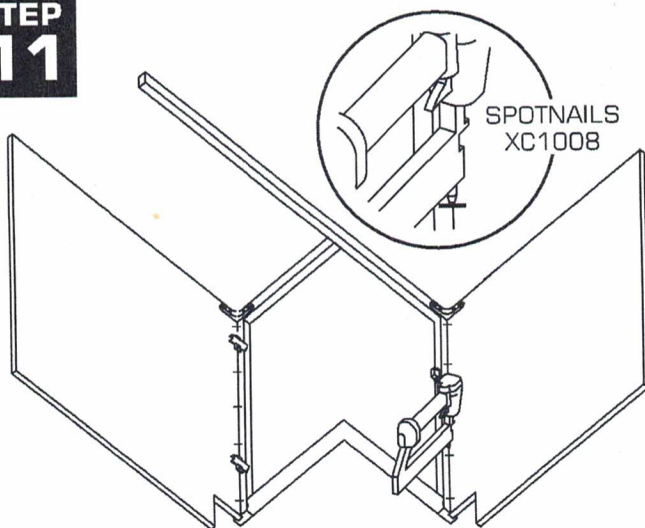


**STEP  
12**

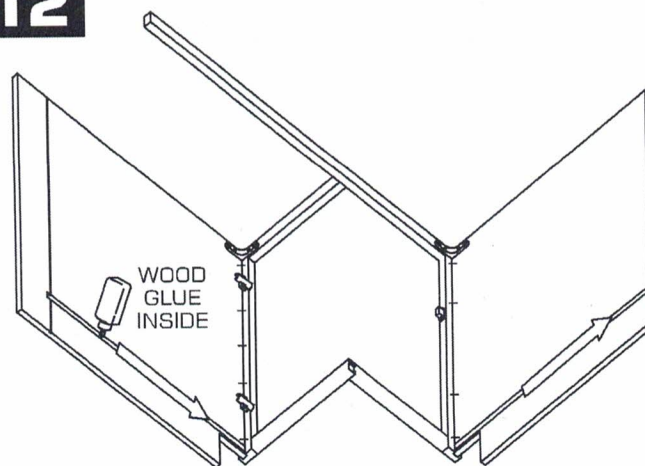





**STEP  
13**

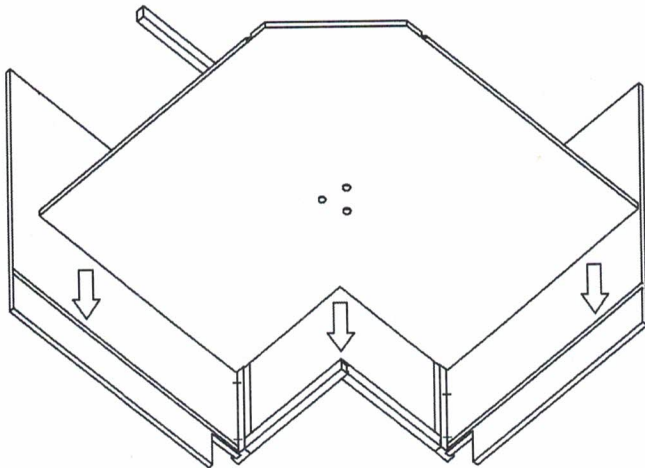


**STEP  
14**

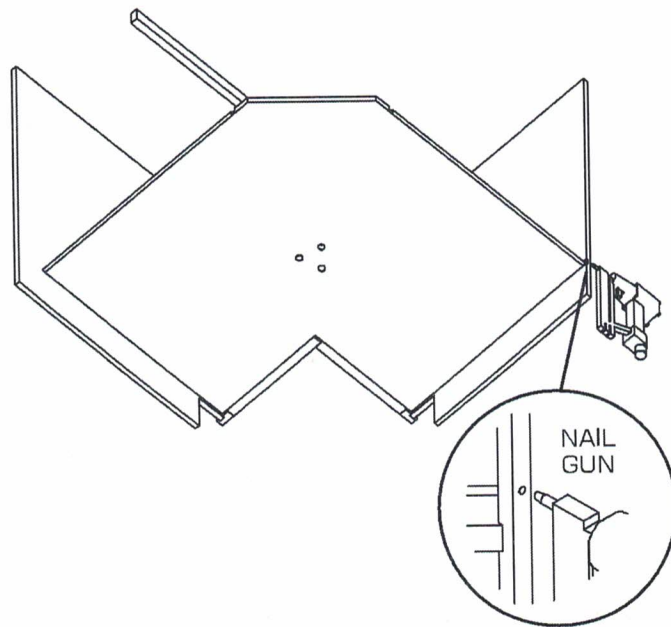


**STEP  
15**

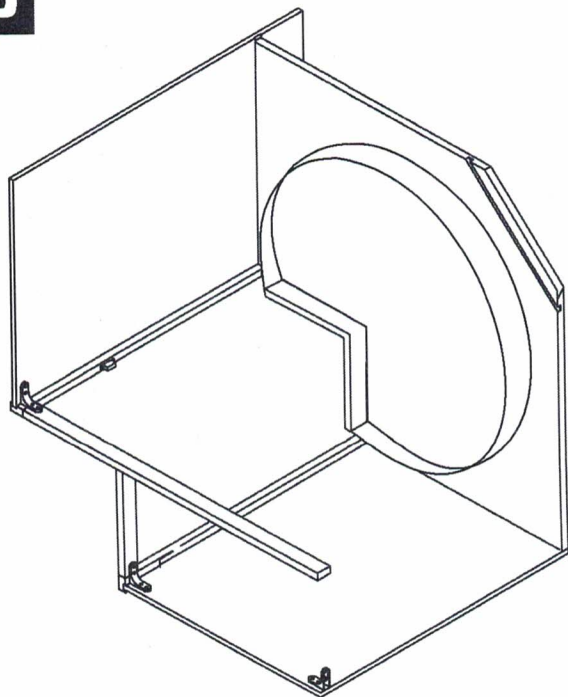


**STEP  
16**

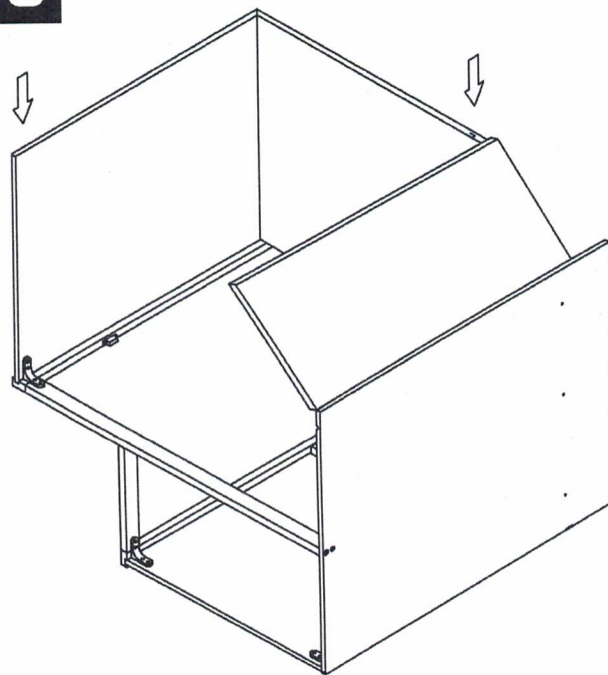


**STEP  
17**

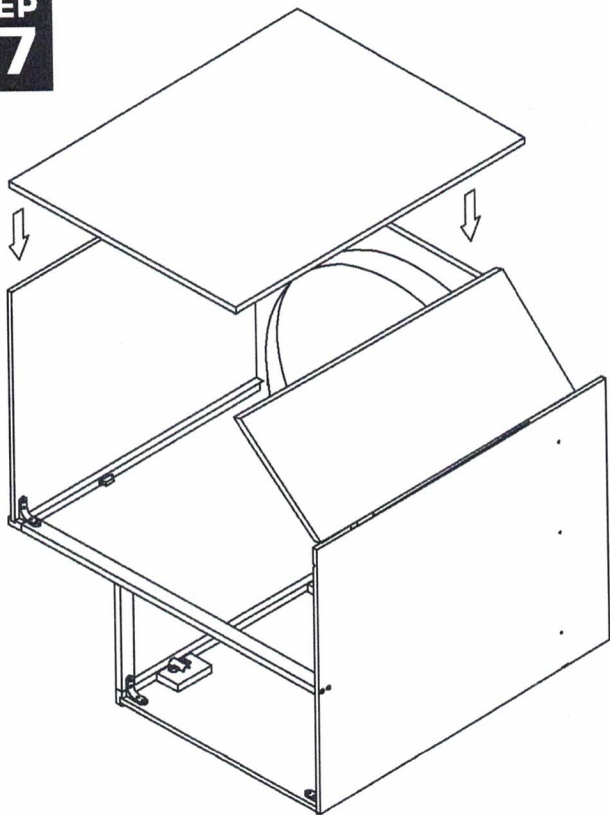

**STEP  
18**

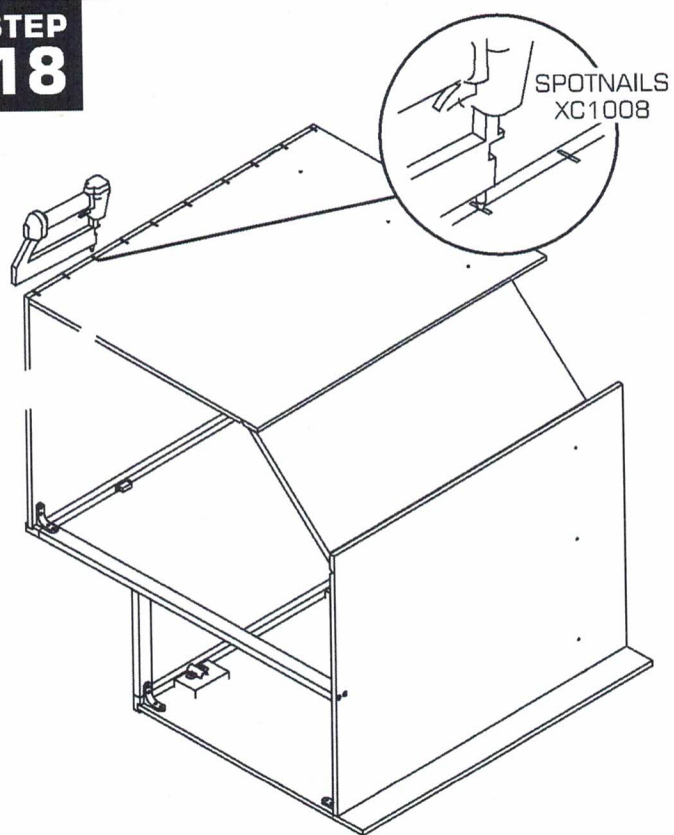


**STEP  
19**

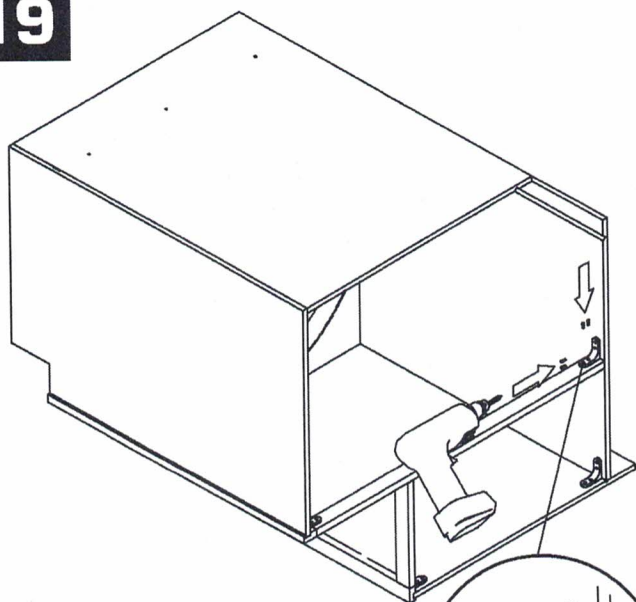


SCREW  
DRIVER


**STEP  
20**

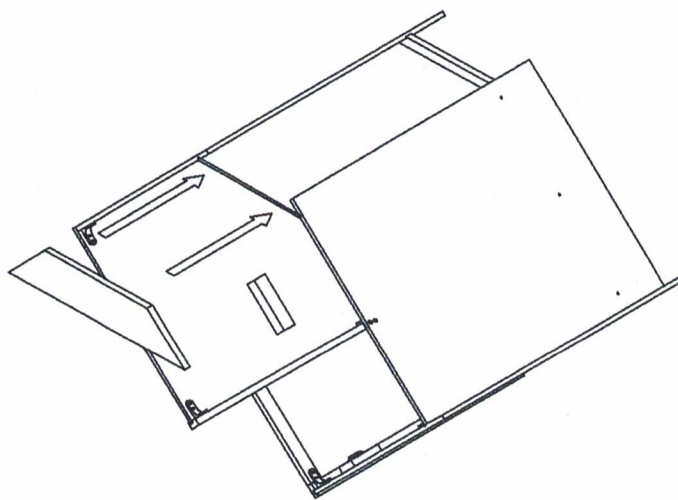


**STEP  
21**

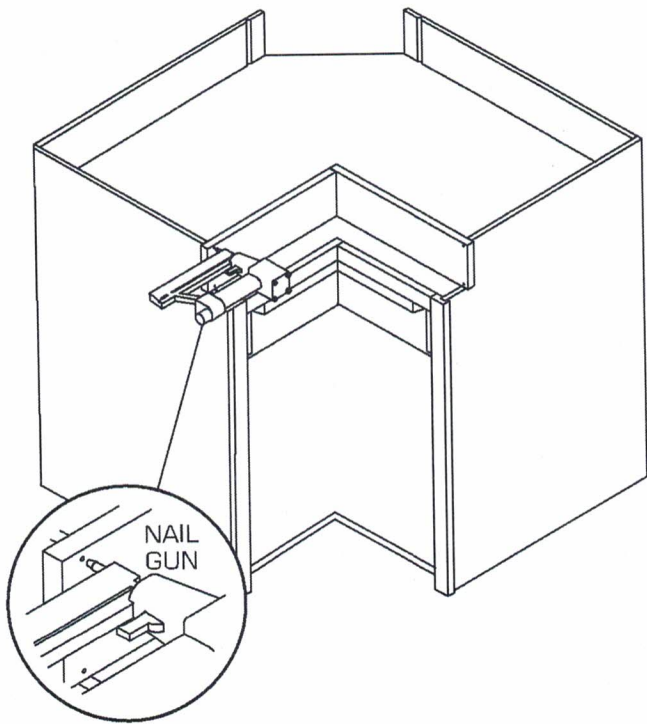


**STEP  
22**

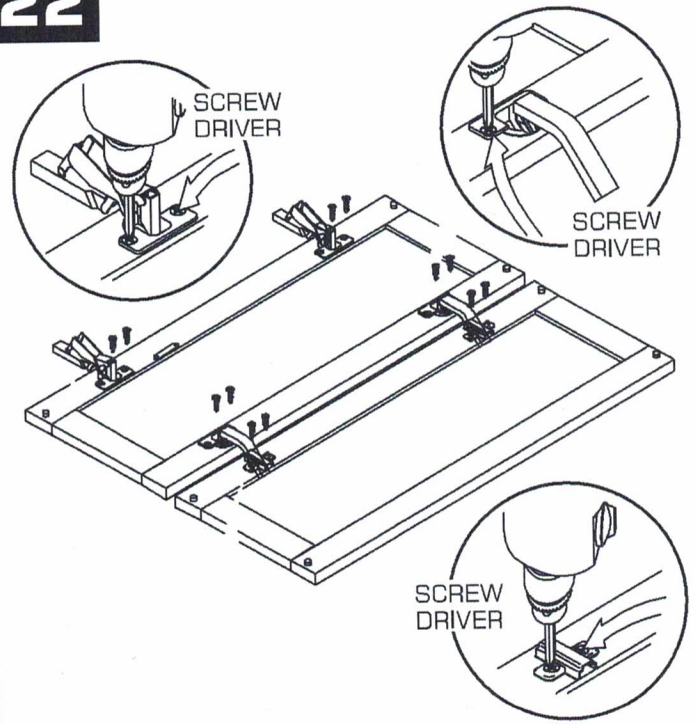

**STEP  
23**


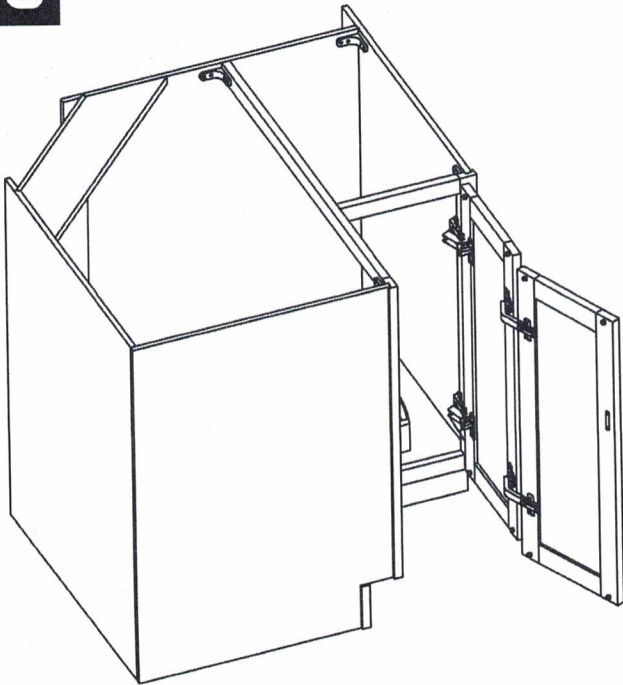


**STEP  
24**

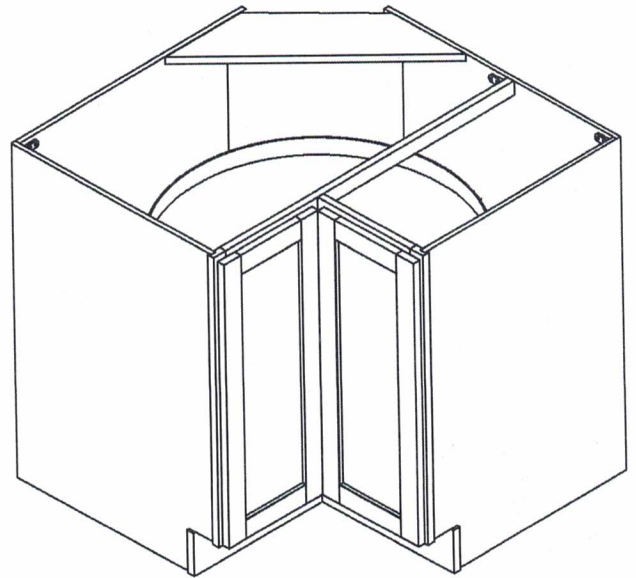




# ASSEMBLING INSTRUCTIONS - BLIND CORNER BASE CABINET

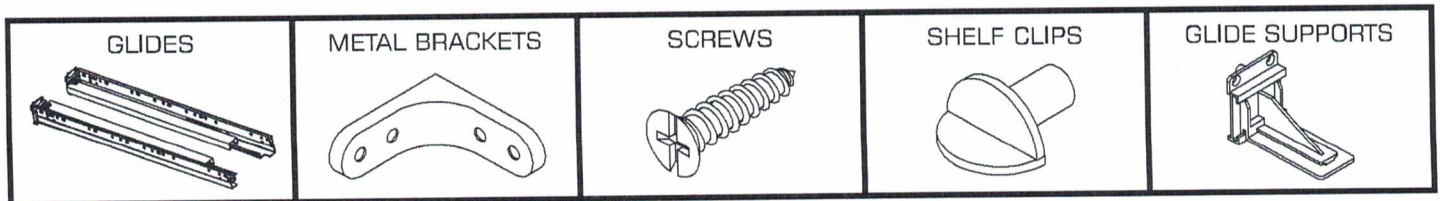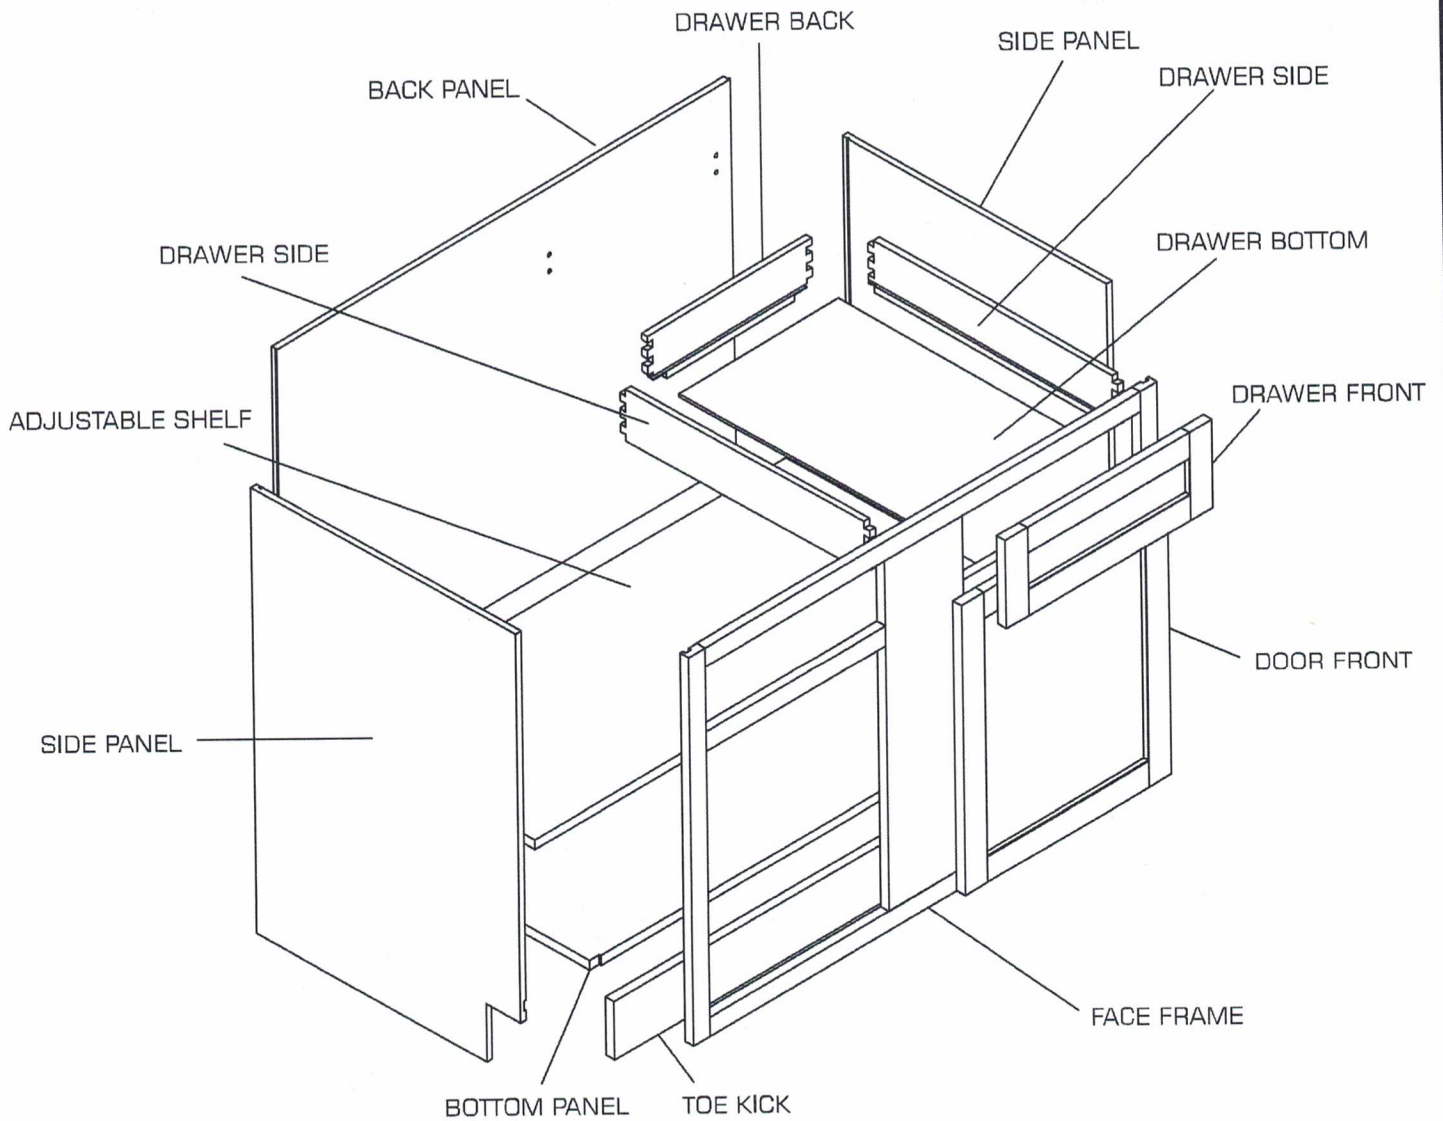


**STEP 1**

WOOD  
GLUE

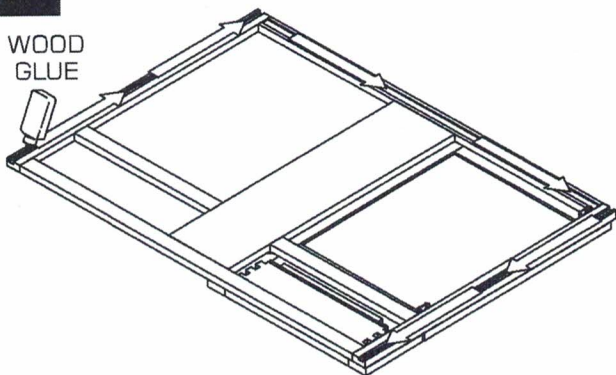


**STEP 2**

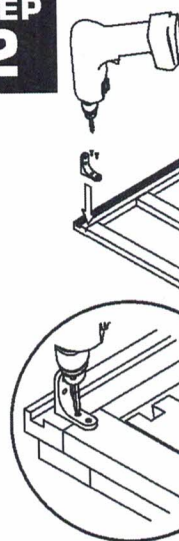


SCREW  
DRIVER

**STEP 3**

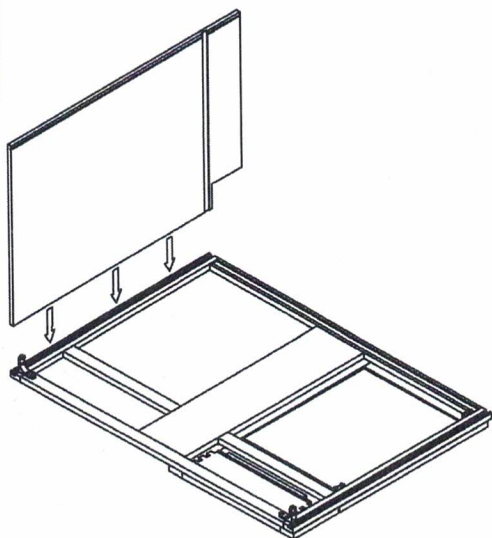


**STEP 4**

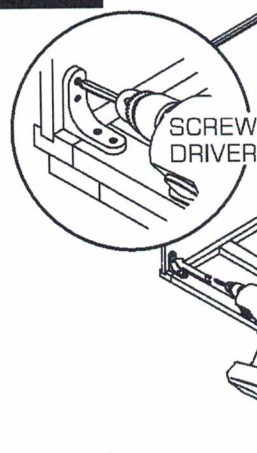


SCREW  
DRIVER

**STEP 5**

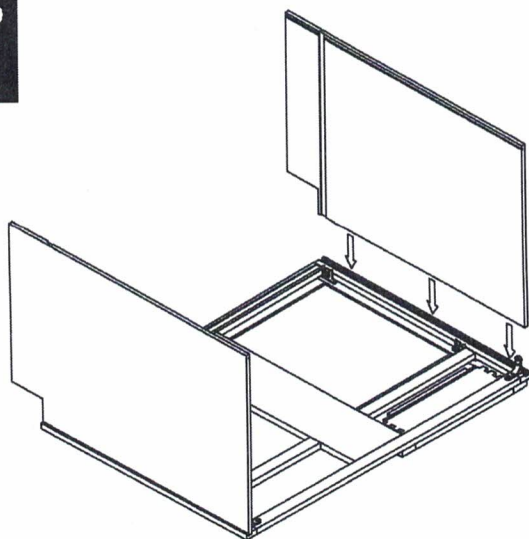


**STEP 6**

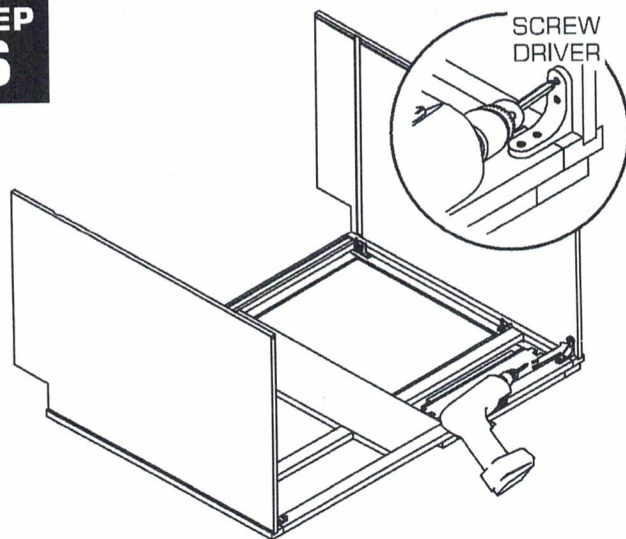


SCREW  
DRIVER




**STEP  
7**

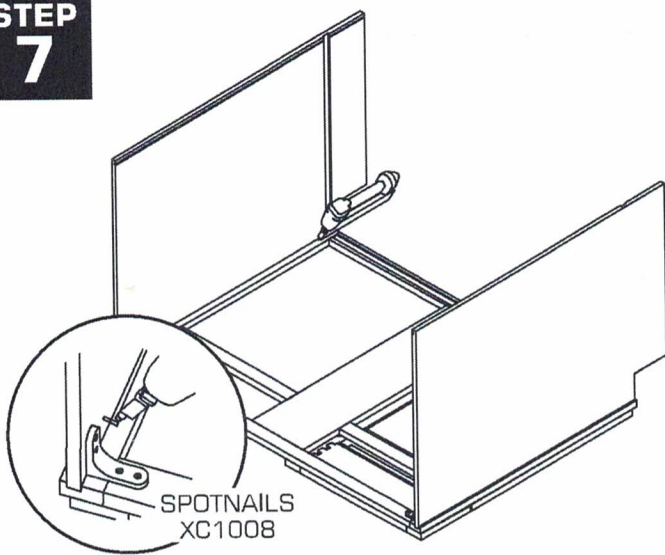


**STEP  
8**

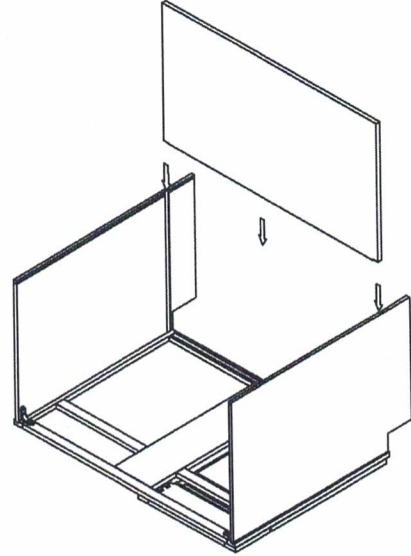


**STEP  
9**

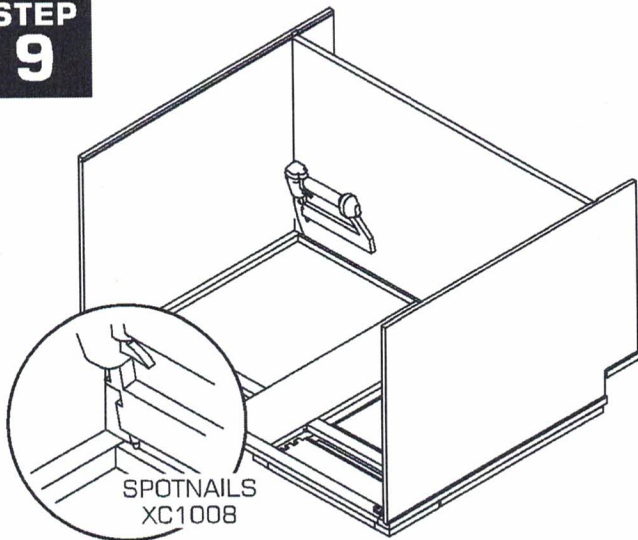

**STEP  
10**

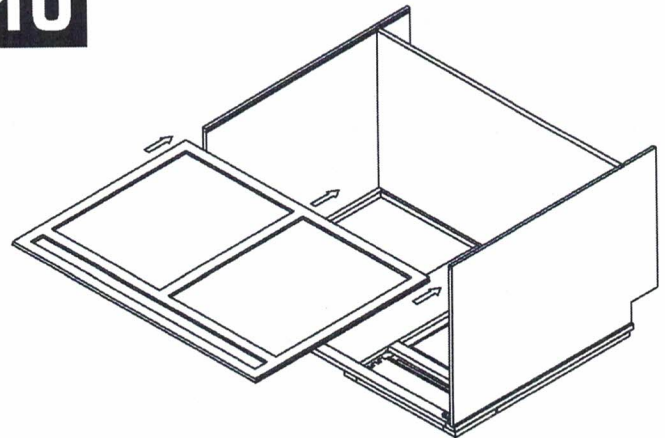


**STEP  
11**

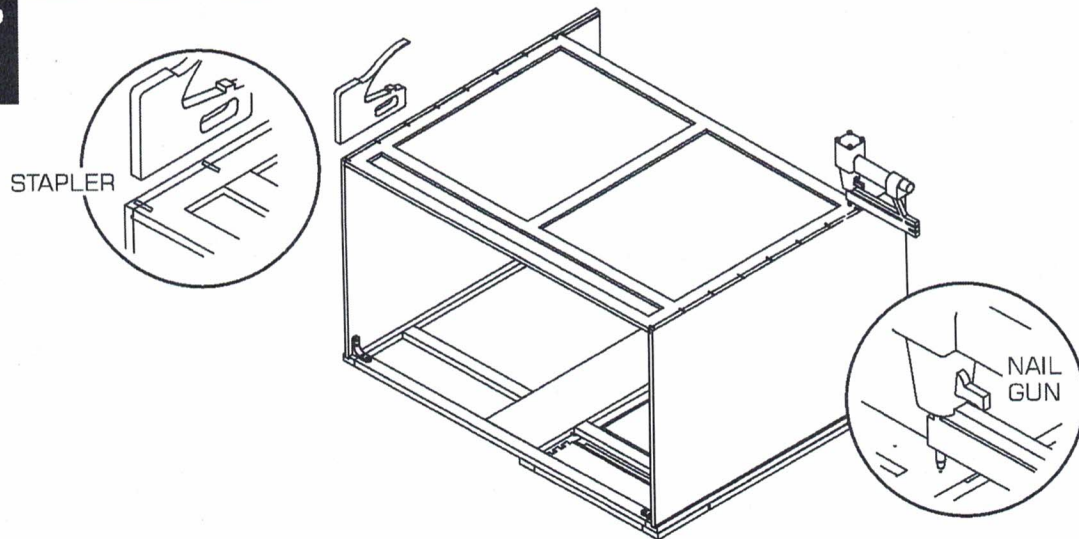





**STEP  
12**

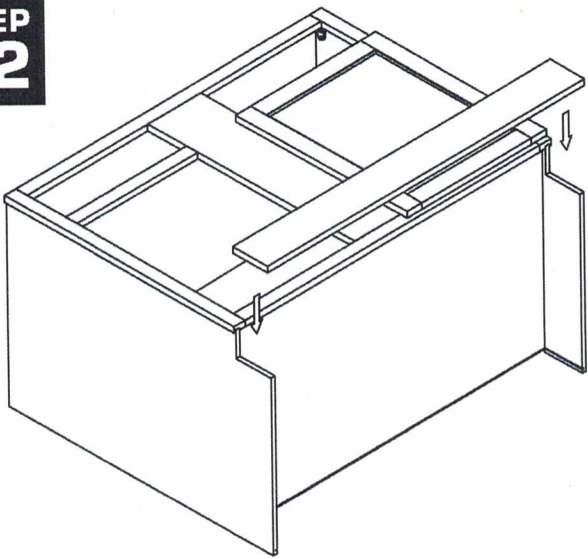


**STEP  
13**

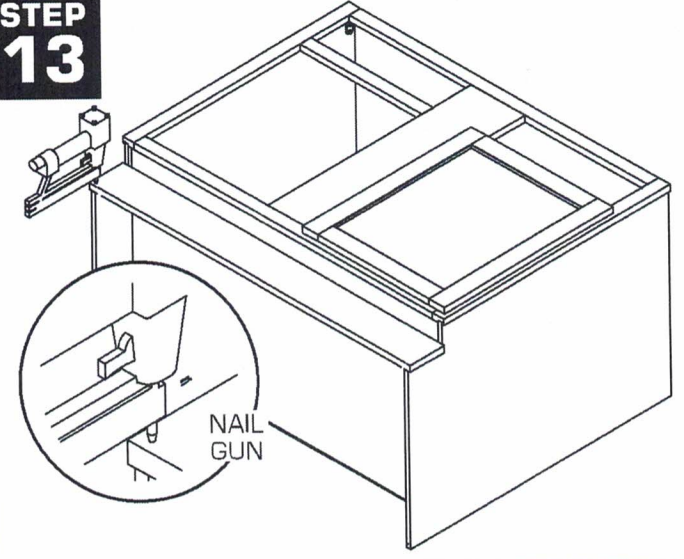


**STEP  
14**

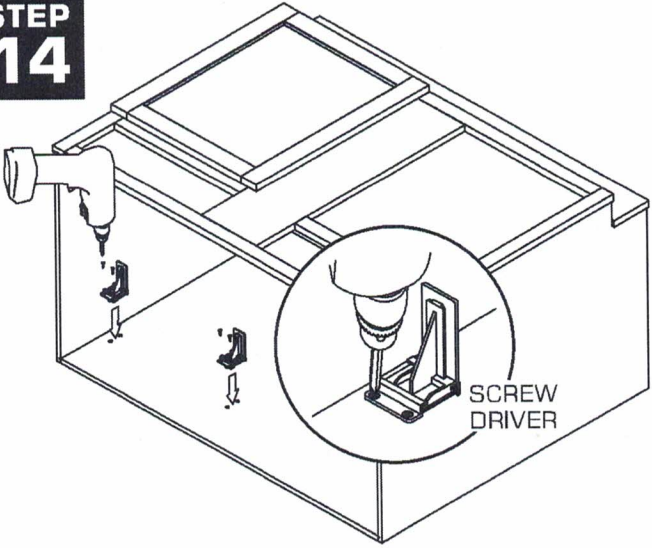


**STEP  
15**

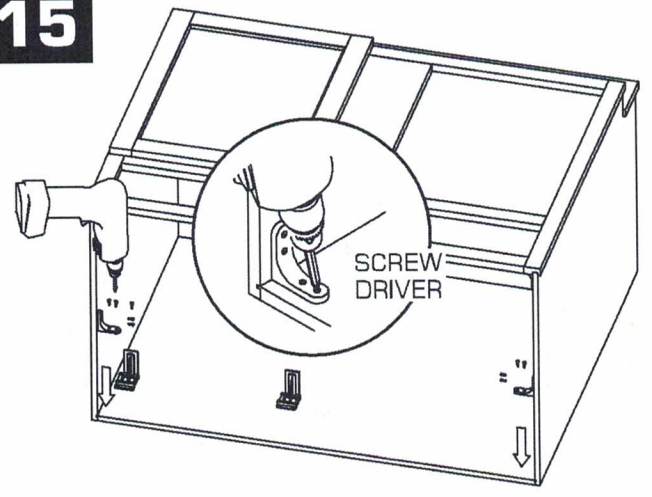

**STEP  
16**

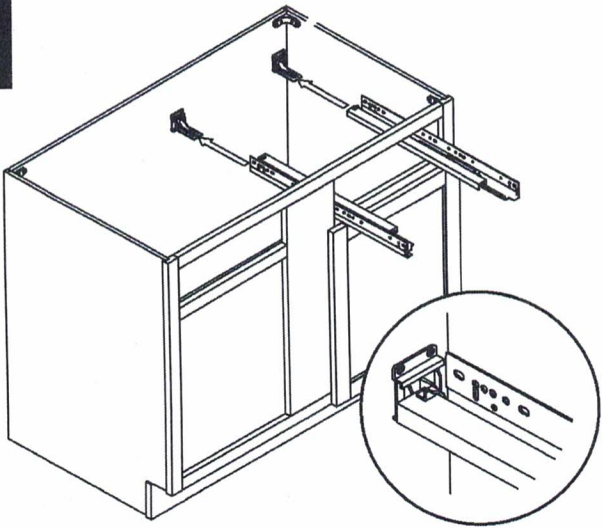


**STEP  
17**

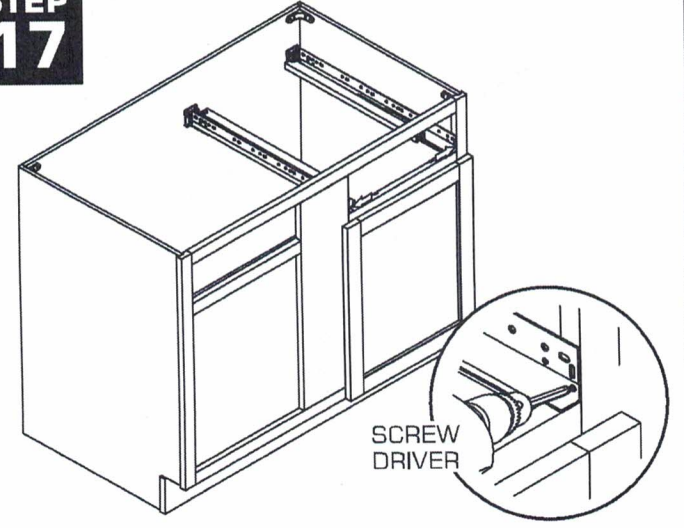


**BLIND CORNER BASE CABINET**


**STEP  
18**

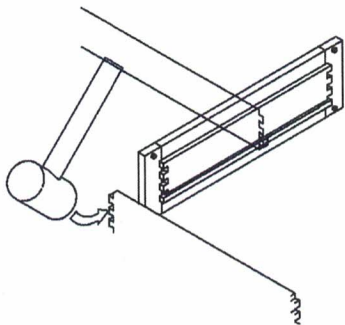


**STEP  
19**

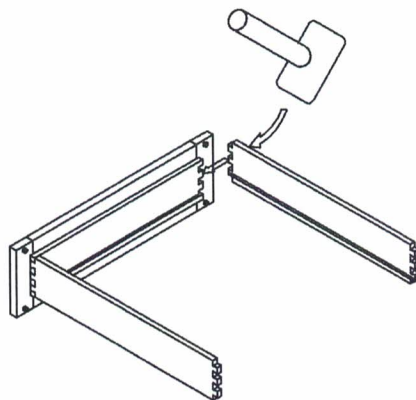


**STEP  
20**

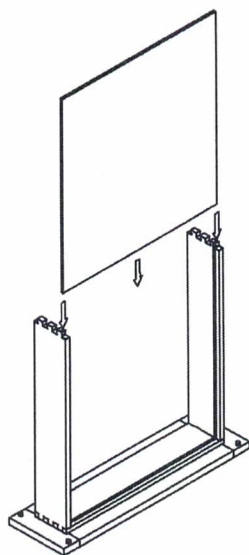


**STEP  
21**

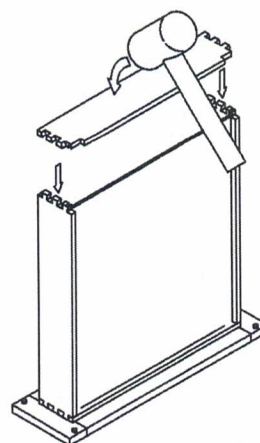


**STEP  
22**

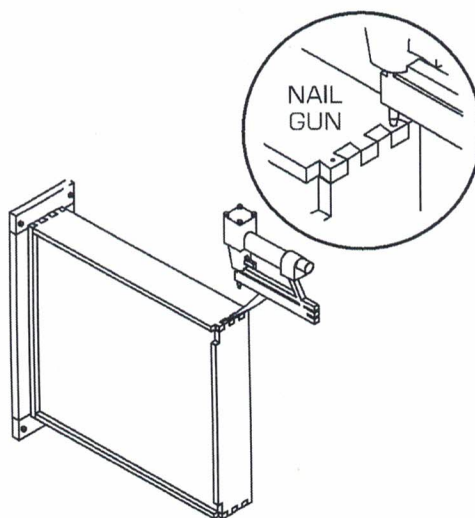


**STEP  
23**

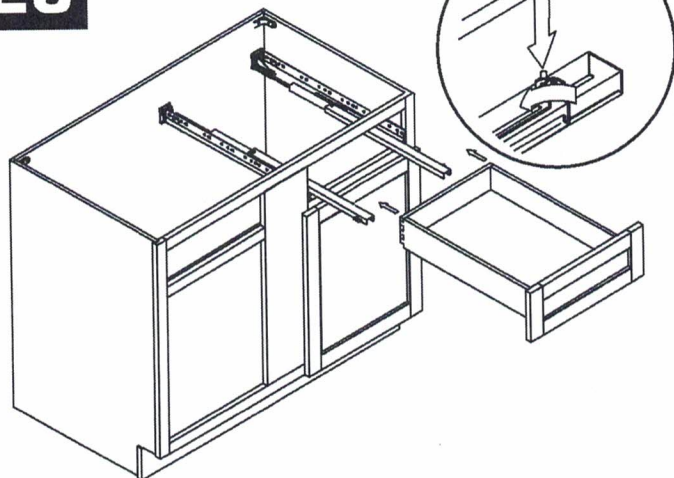


**STEP  
24**

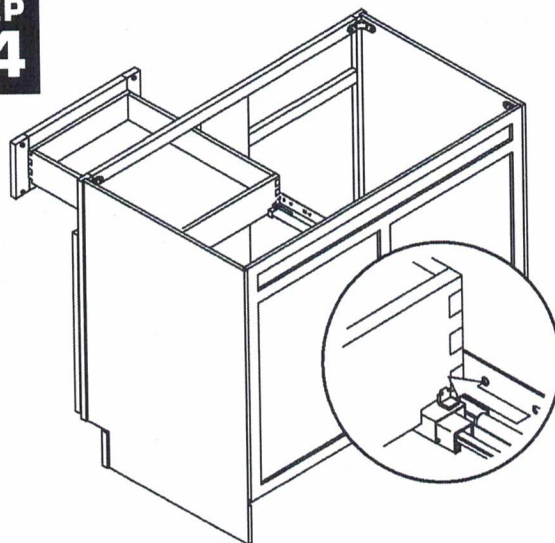

**STEP  
25**


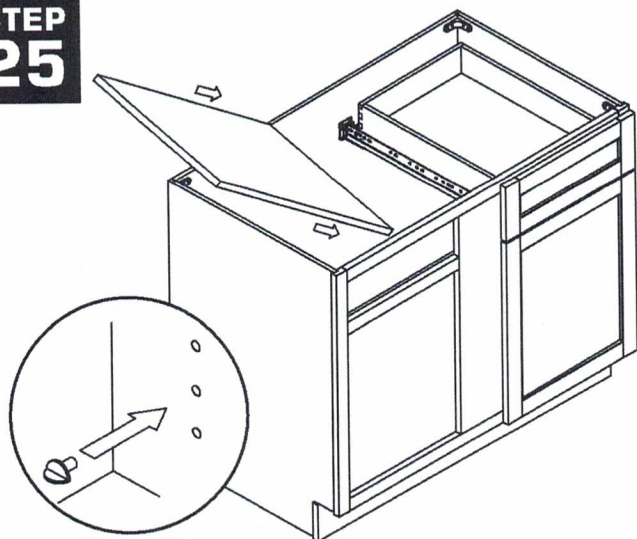


**STEP  
26**

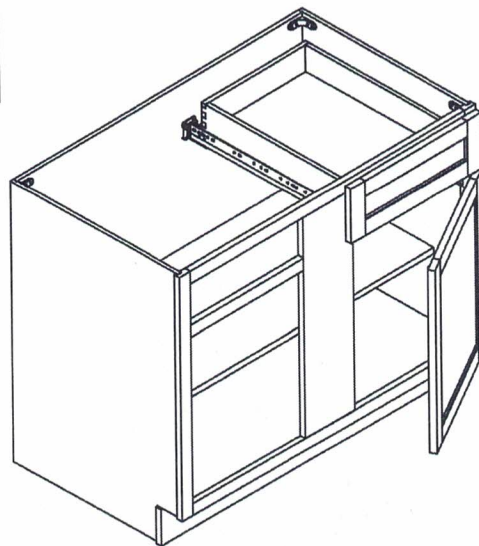




# ASSEMBLING INSTRUCTIONS - BASE 3 DRAWERS

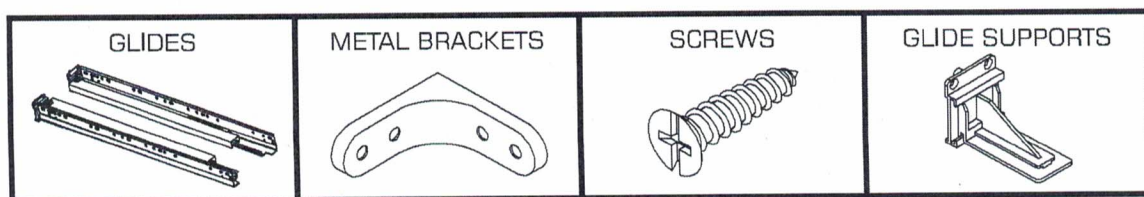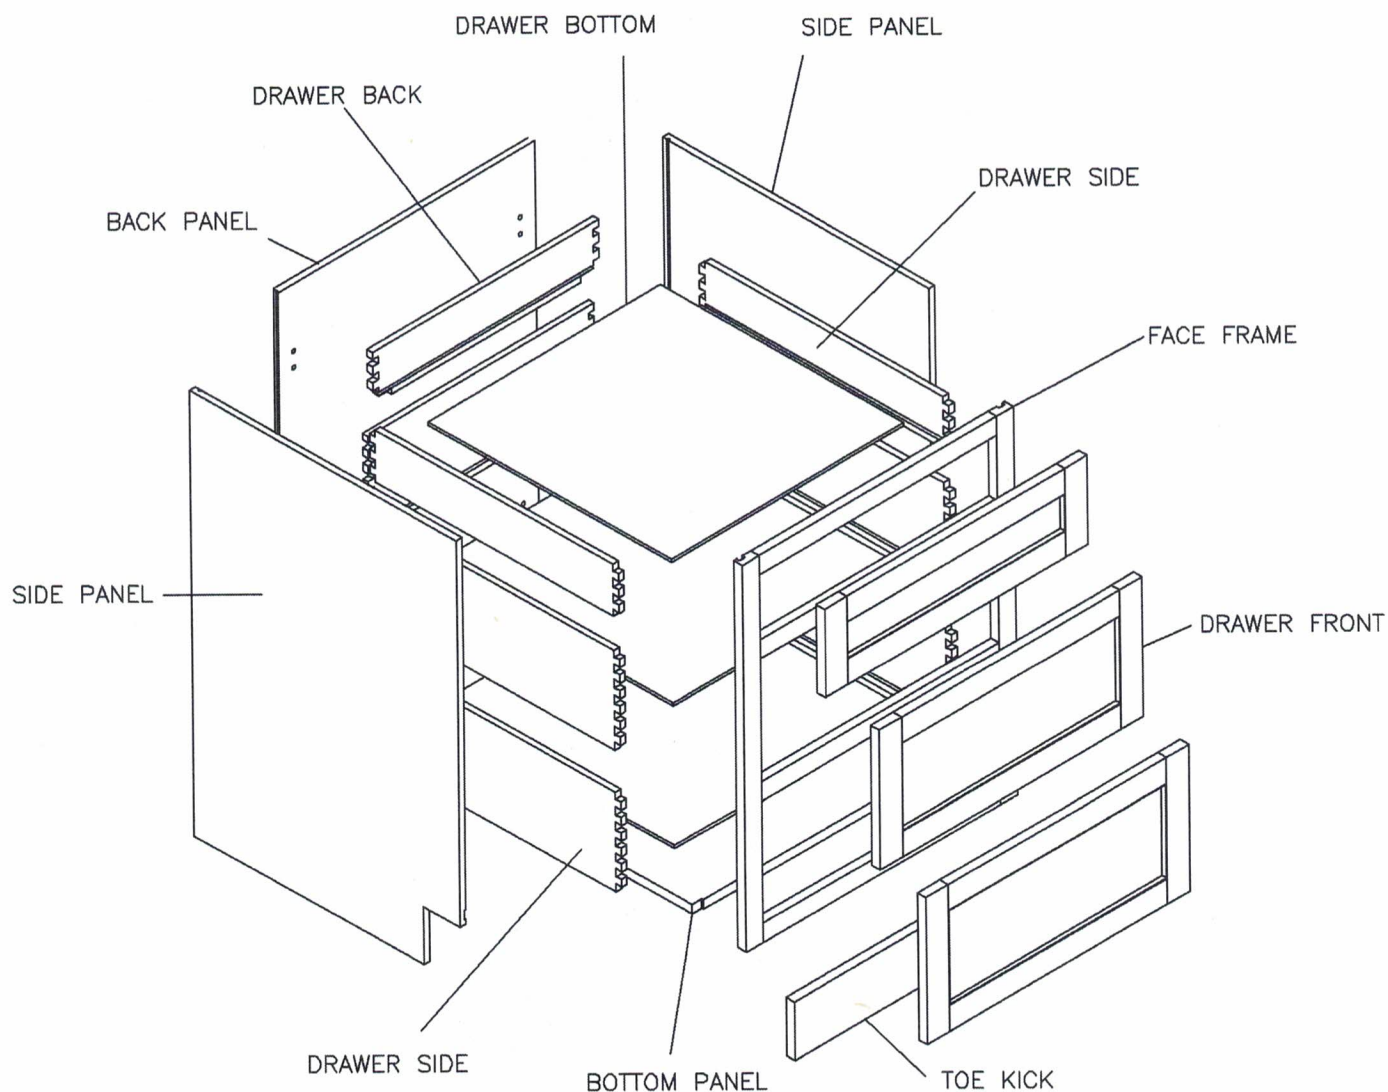


**STEP 1**

WOOD  
GLUE

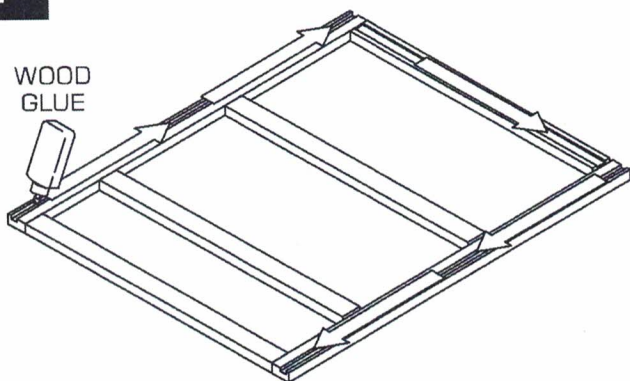


**STEP 2**

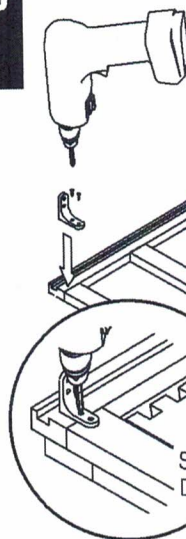


SCREW  
DRIVER

**STEP 3**

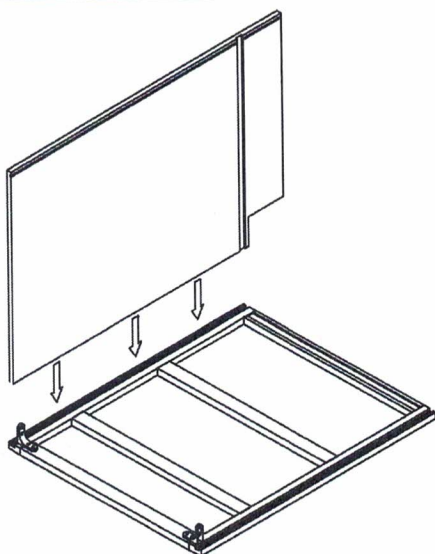


**STEP 4**

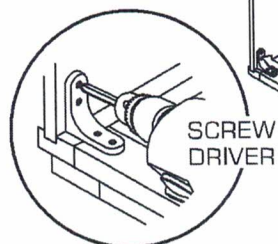


SCREW  
DRIVER

**STEP 5**

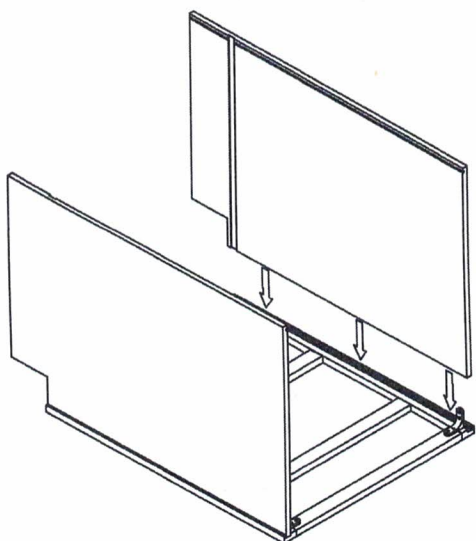


**STEP 6**

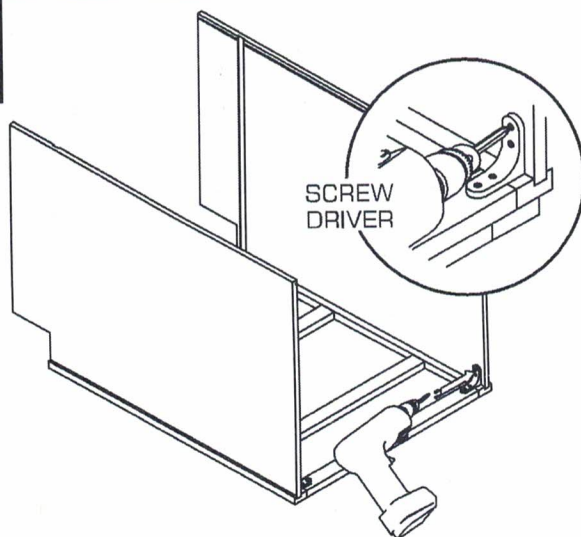


SCREW  
DRIVER


**STEP  
7**

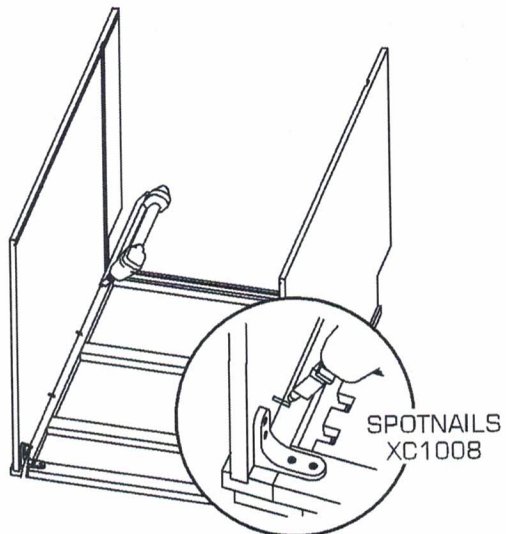


**STEP  
8**

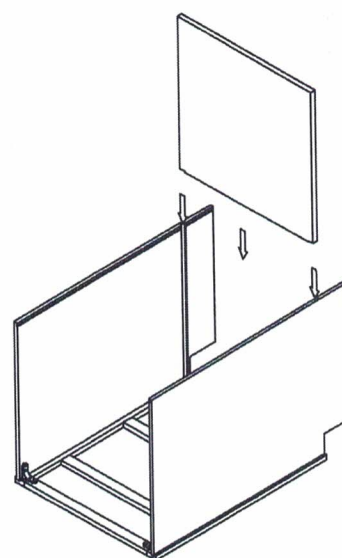


**STEP  
9**

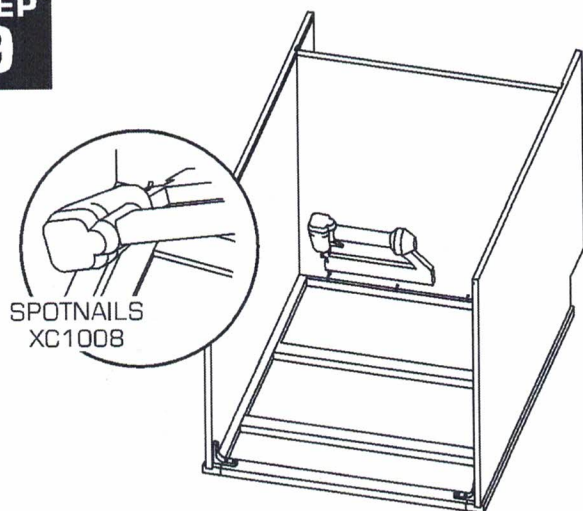

**STEP  
10**

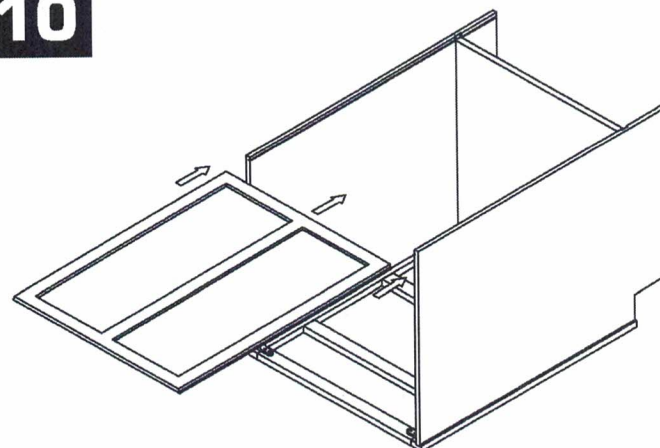


**STEP  
11**

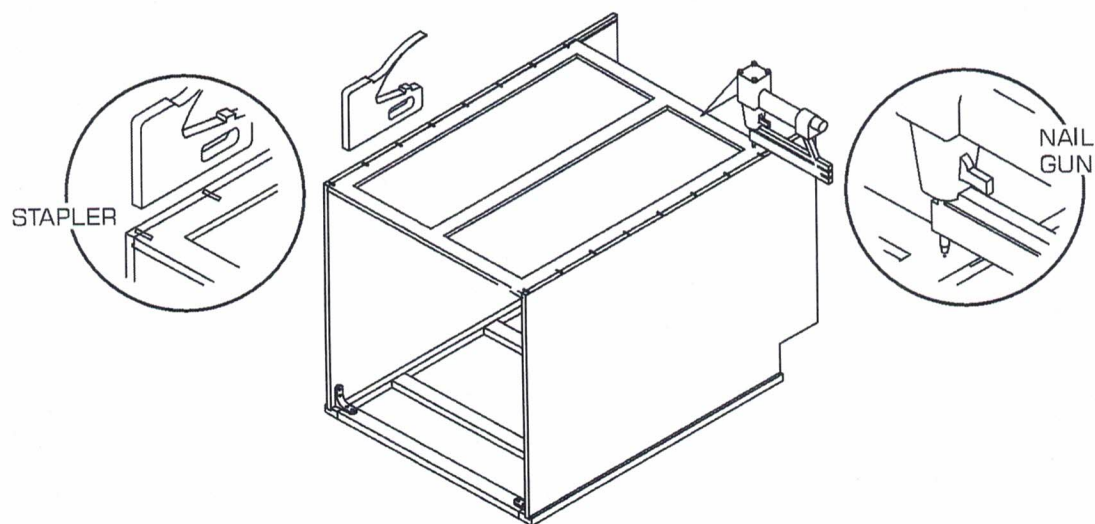





**STEP  
12**

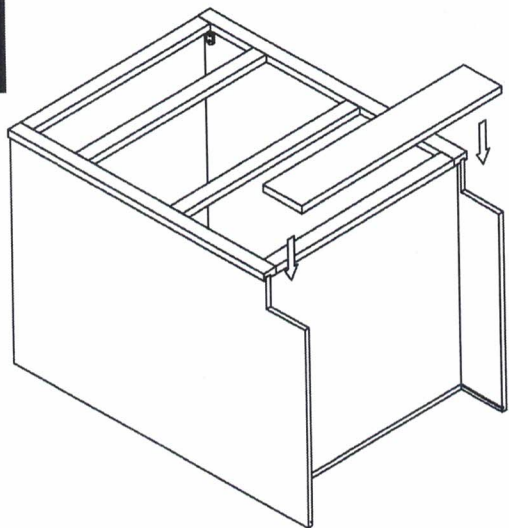


**STEP  
13**

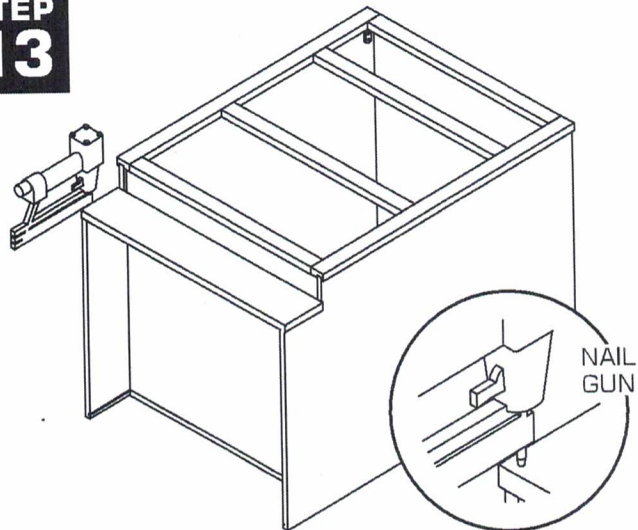


**STEP  
14**

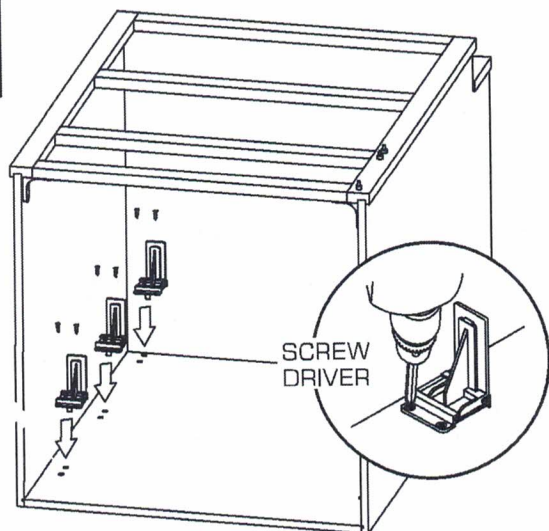


**STEP  
15**

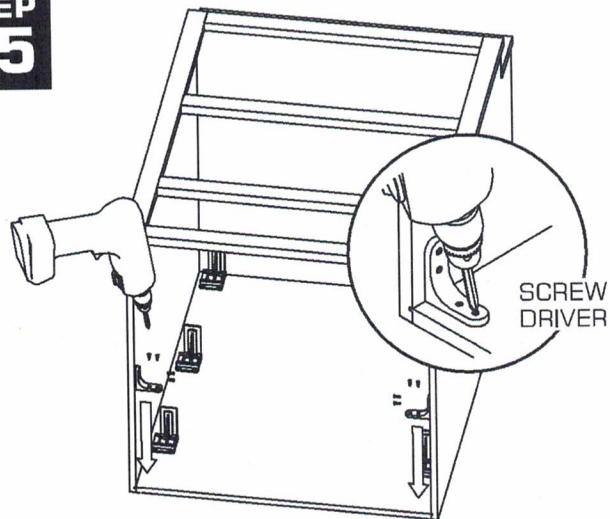


**STEP  
16**

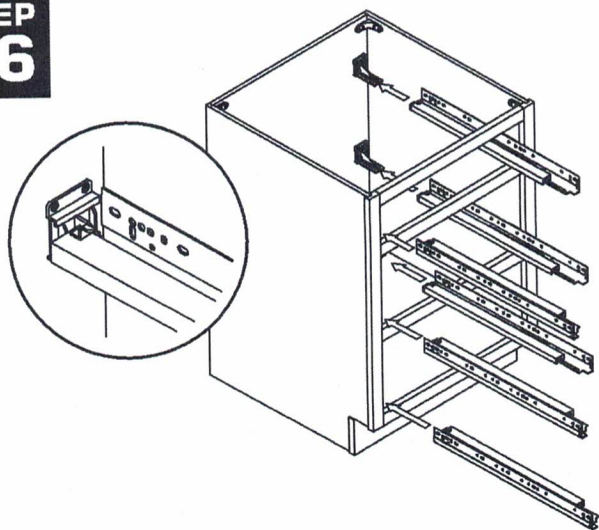


**STEP  
17**

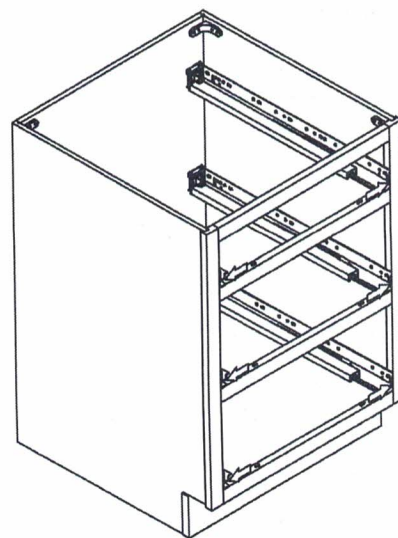


**STEP  
18**

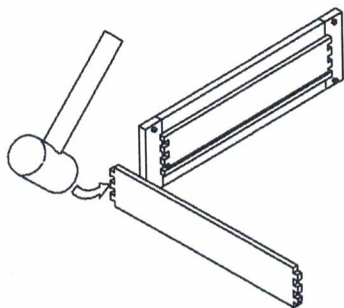


**STEP  
19**

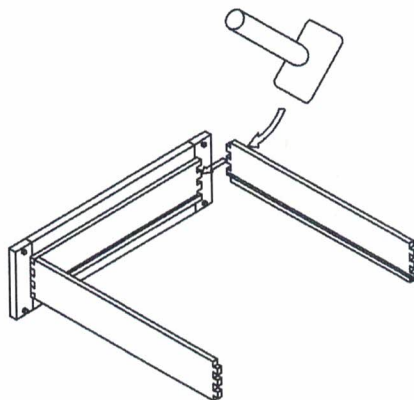


**STEP  
20**

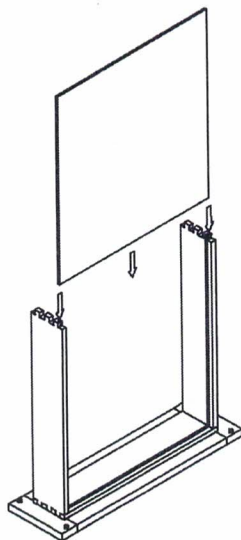


**STEP  
21**

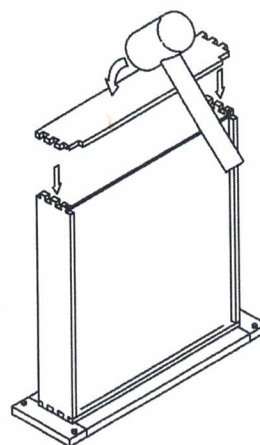


**STEP  
22**

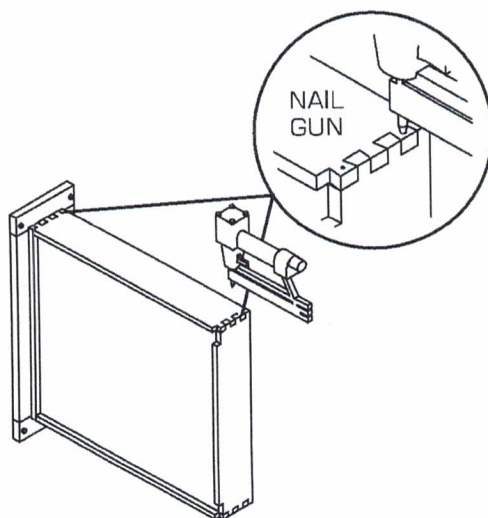


**STEP  
23**

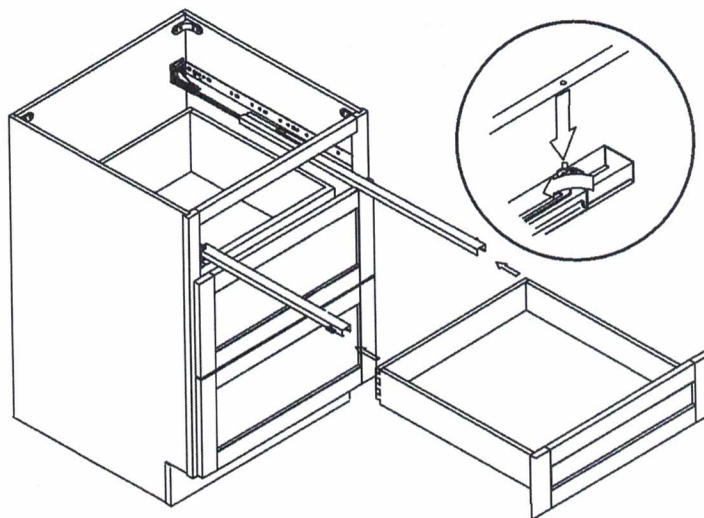

**STEP  
24**



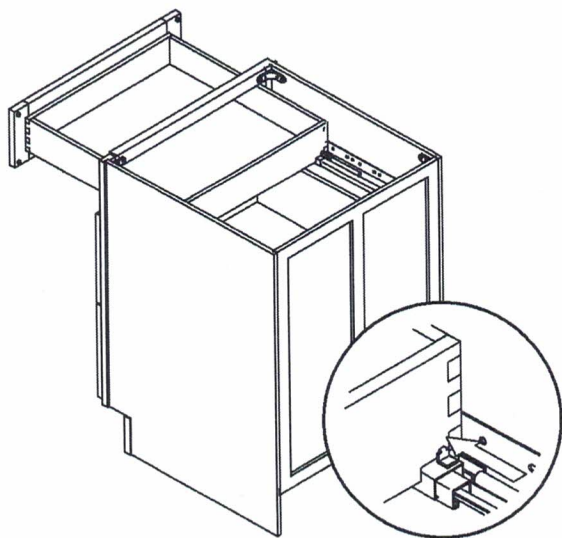


**STEP  
25**

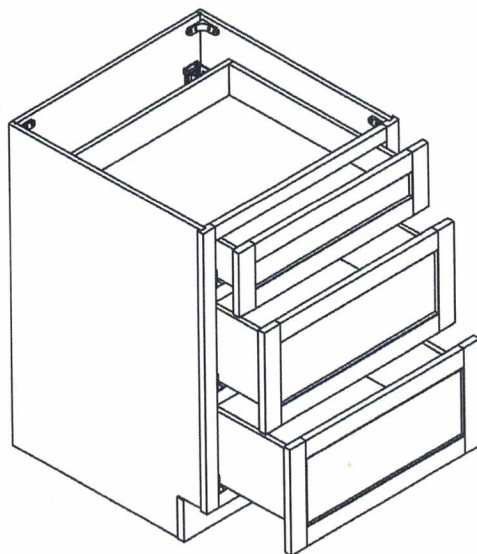




# ASSEMBLING INSTRUCTIONS - WALL CABINET

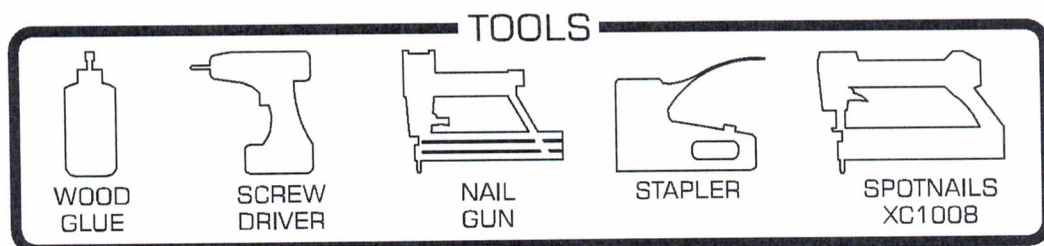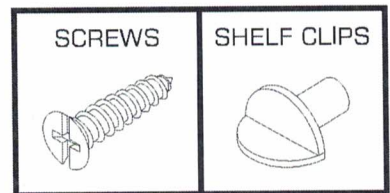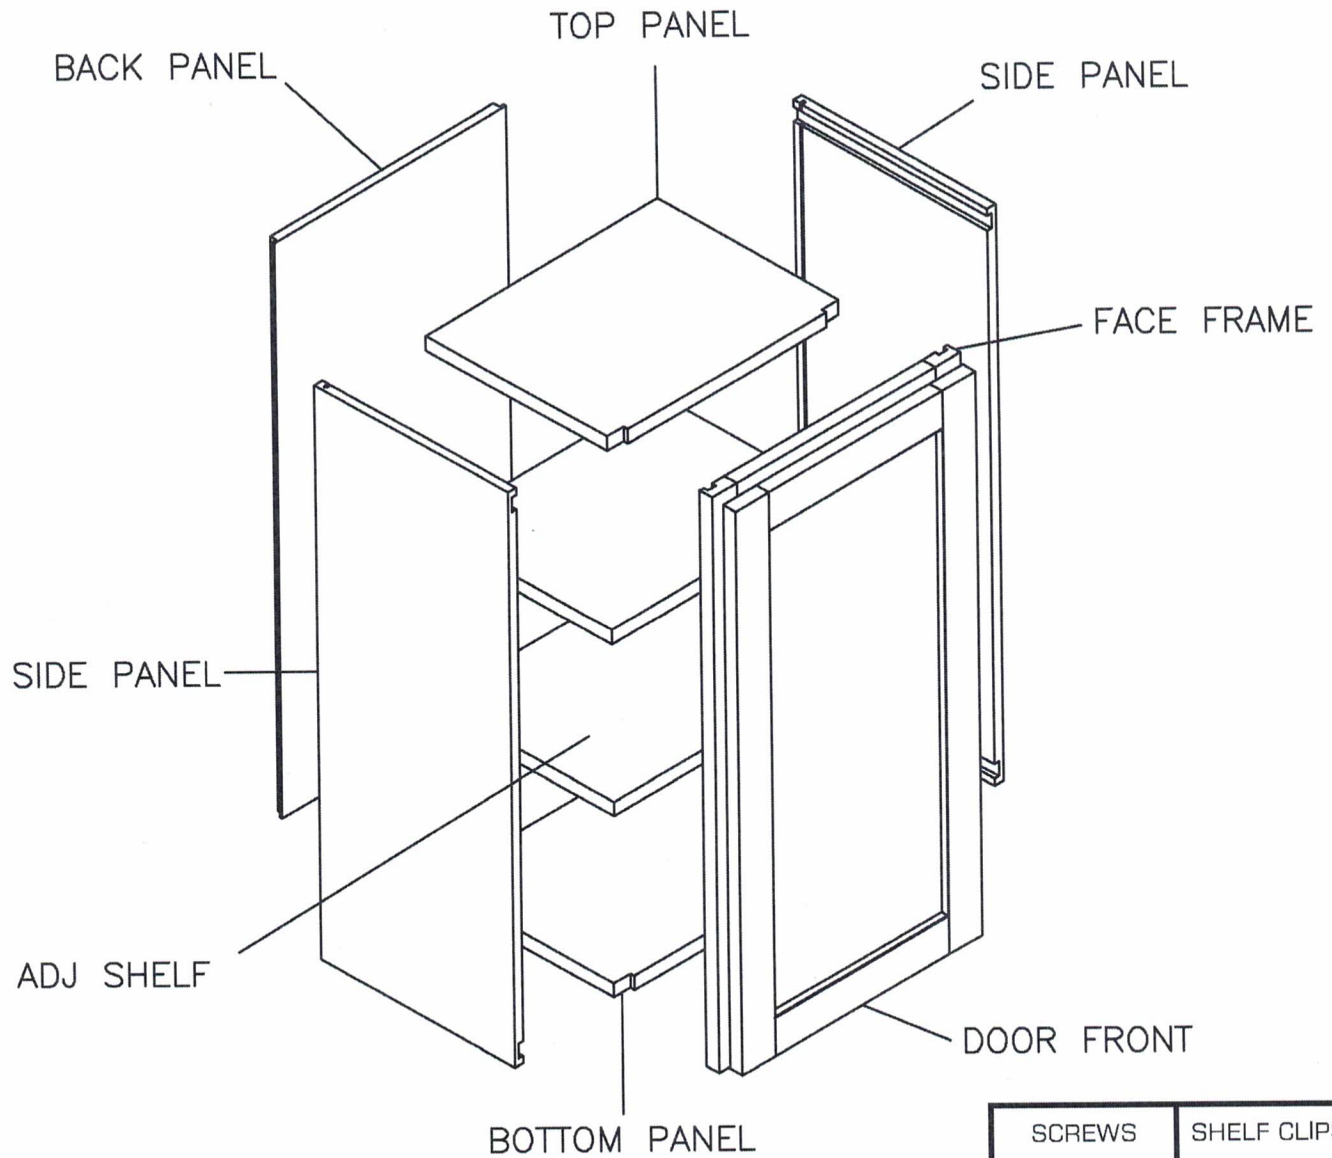





**STEP 1**

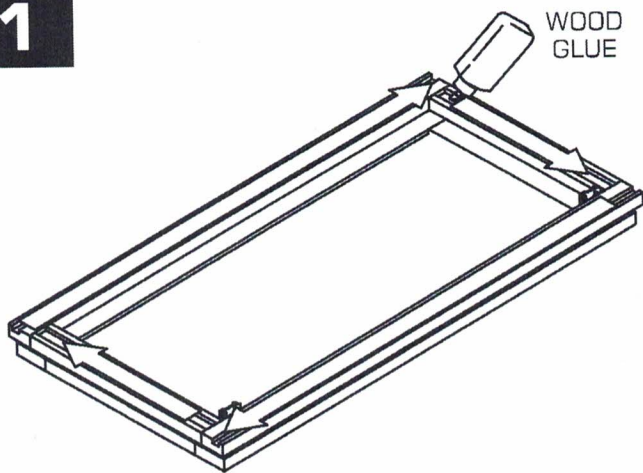


**STEP 2**

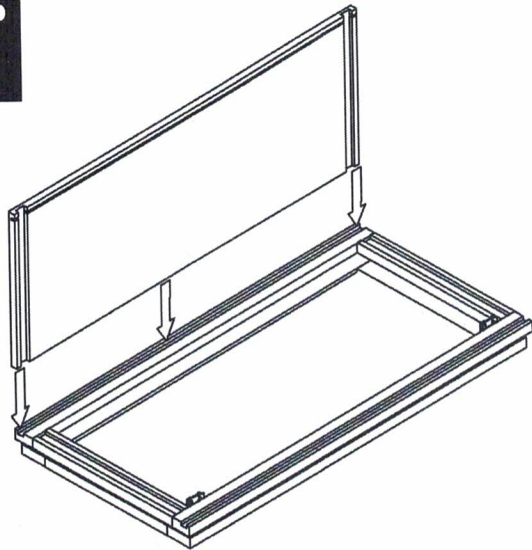


**STEP 3**

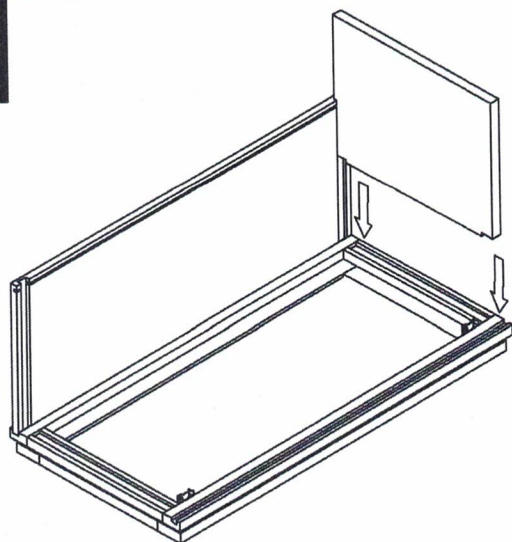


**STEP 4**

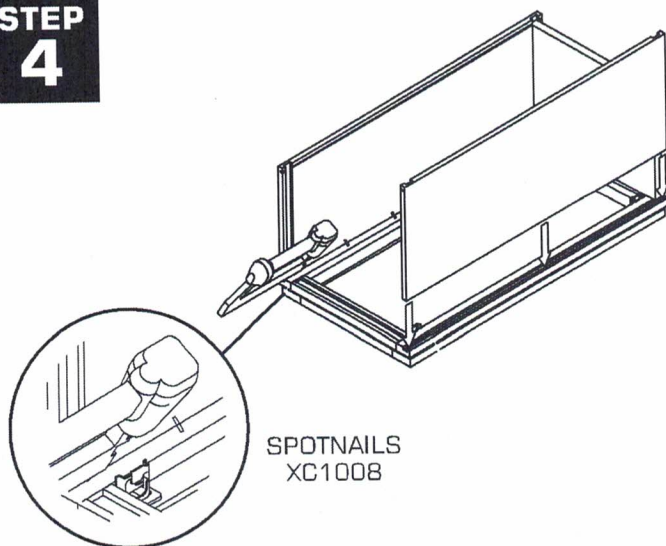

**STEP 5**

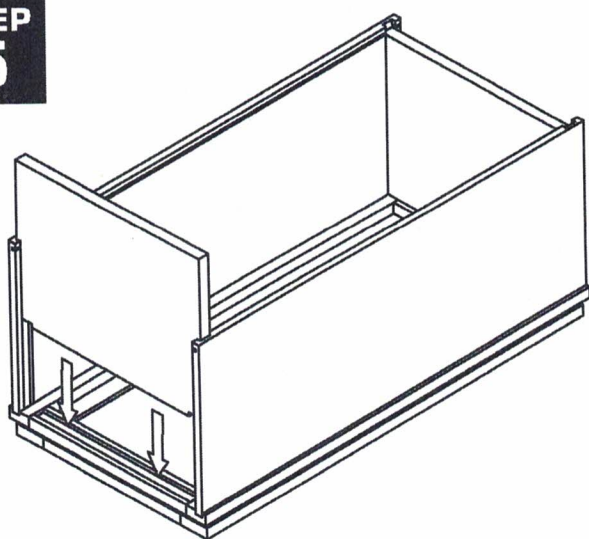


**STEP 6**

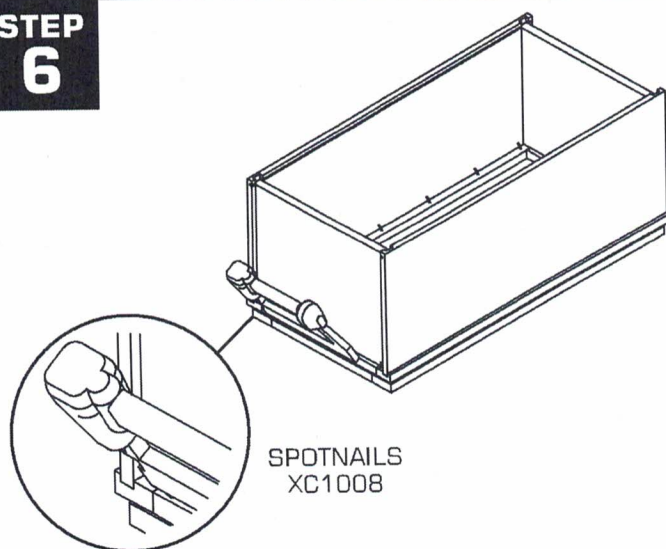




**STEP  
7**

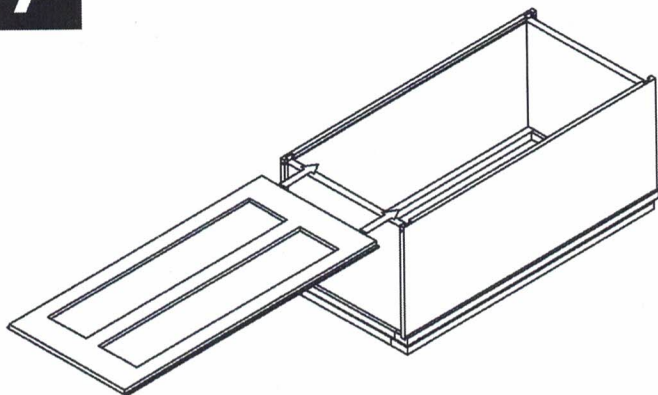


**STEP  
8**

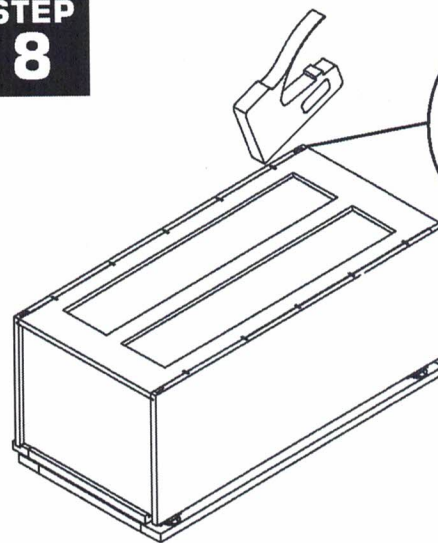


STAPLER

**STEP  
9**

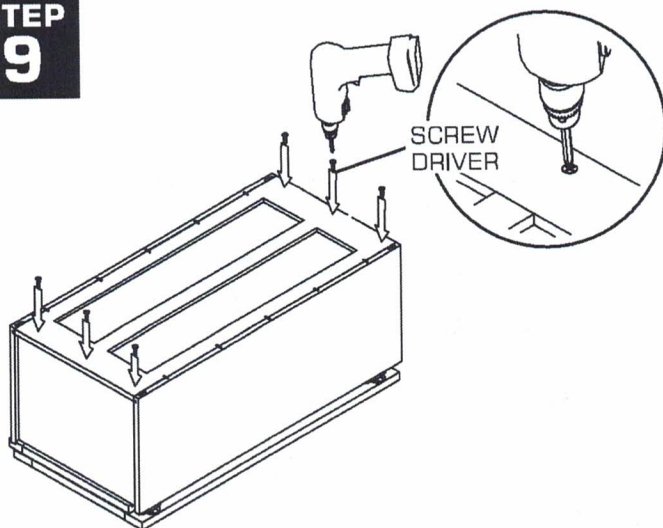


SCREW  
DRIVER




**STEP  
10**

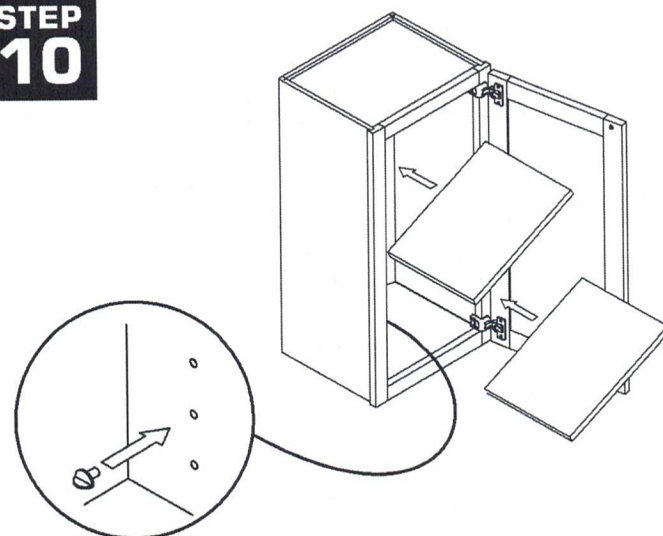


**STEP  
11**

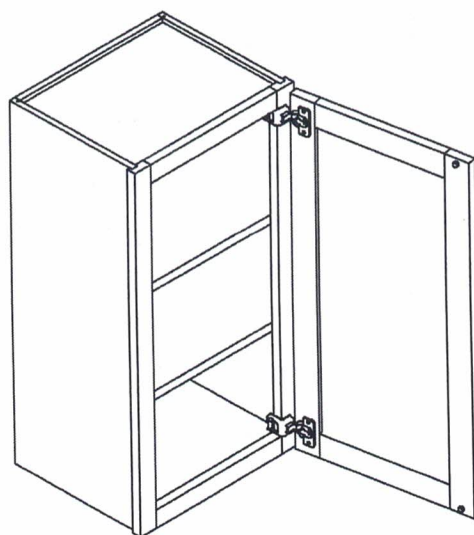


# ASSEMBLING INSTRUCTIONS - WALL DIAGONAL CORNER CABINET

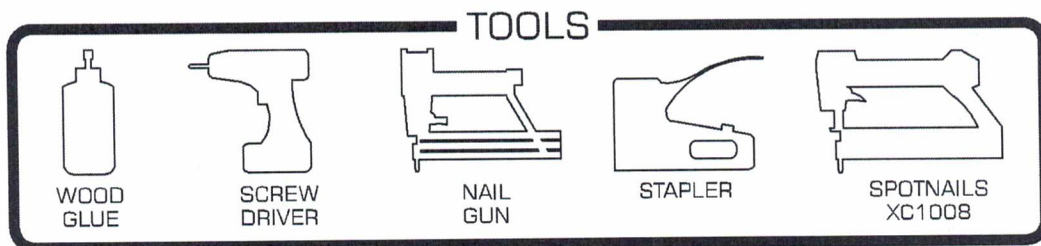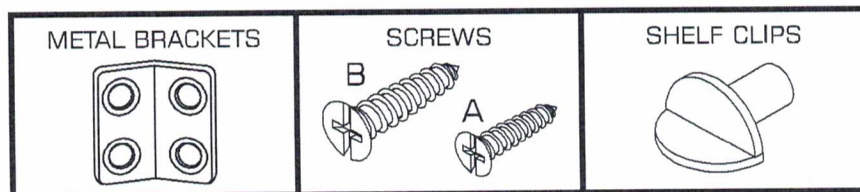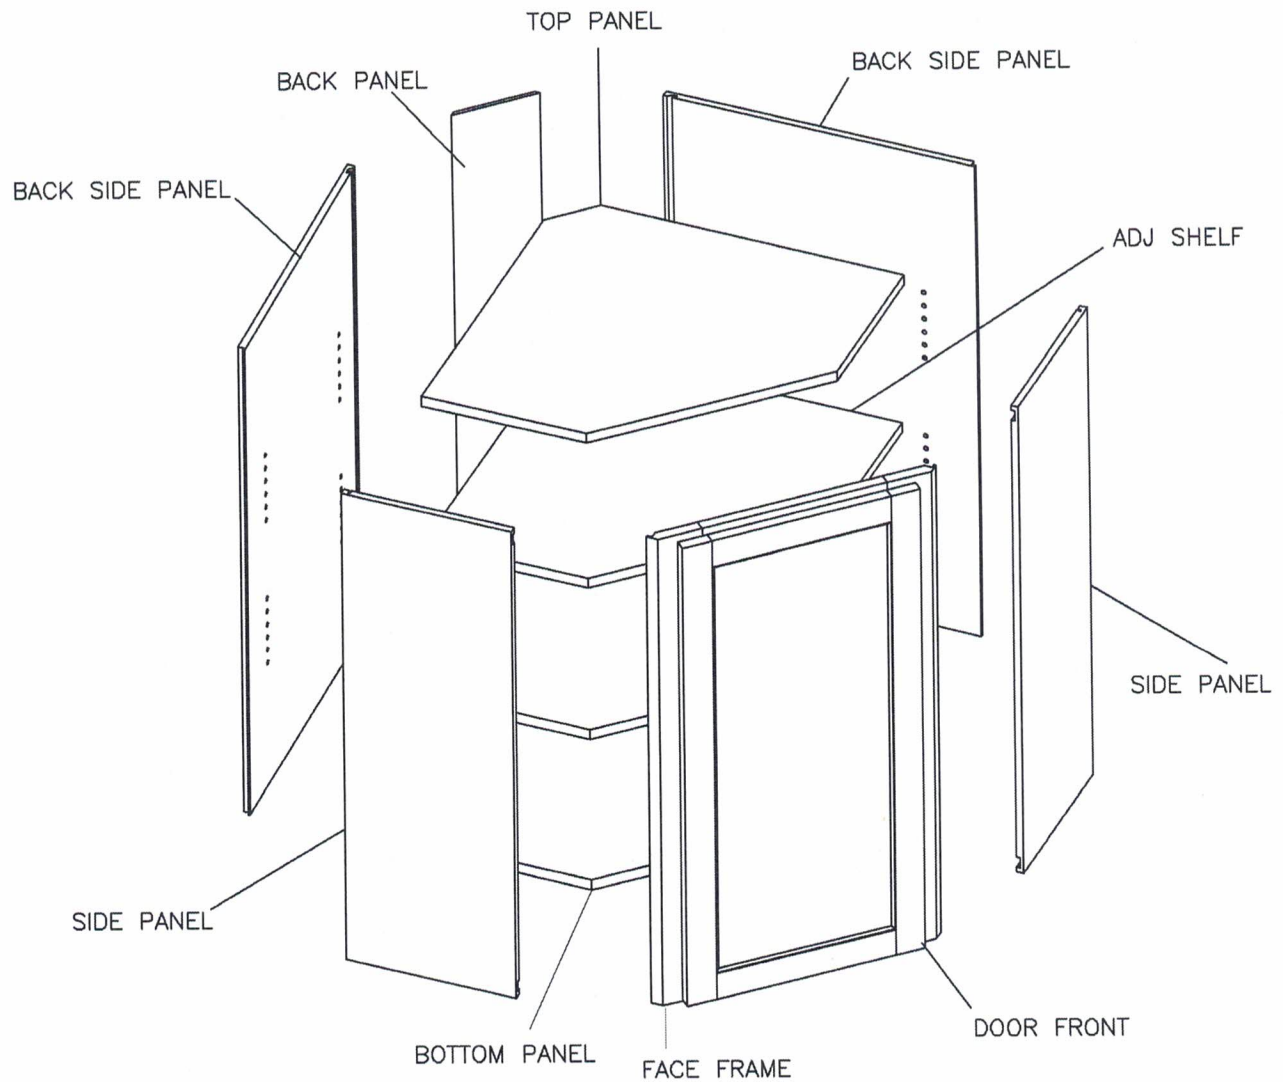


STEP 1

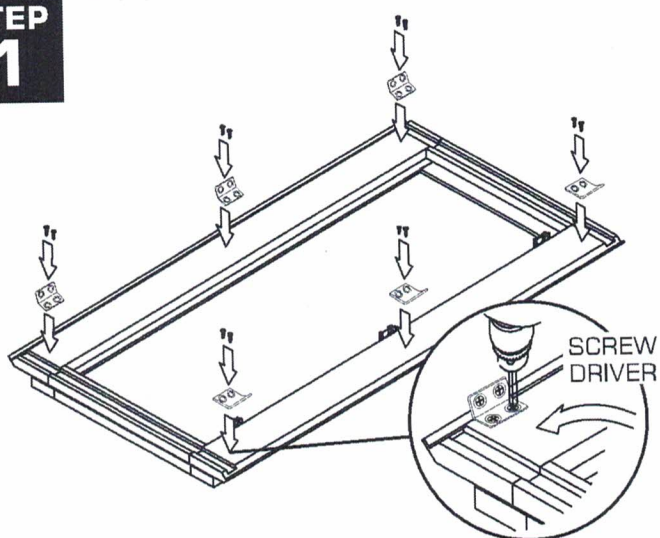


STEP 2

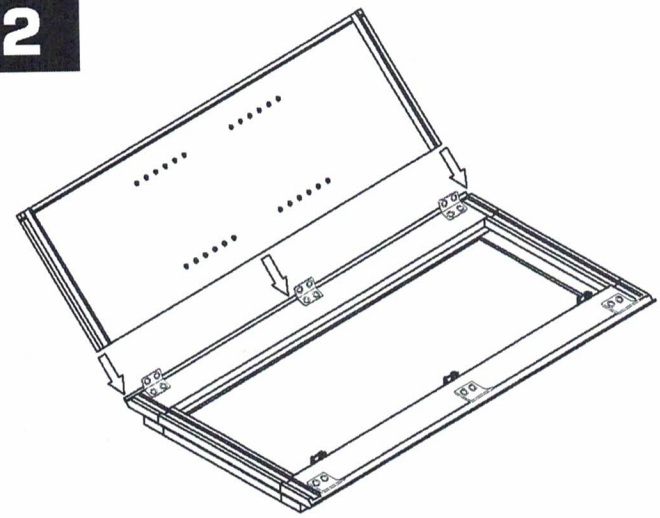


STEP 3

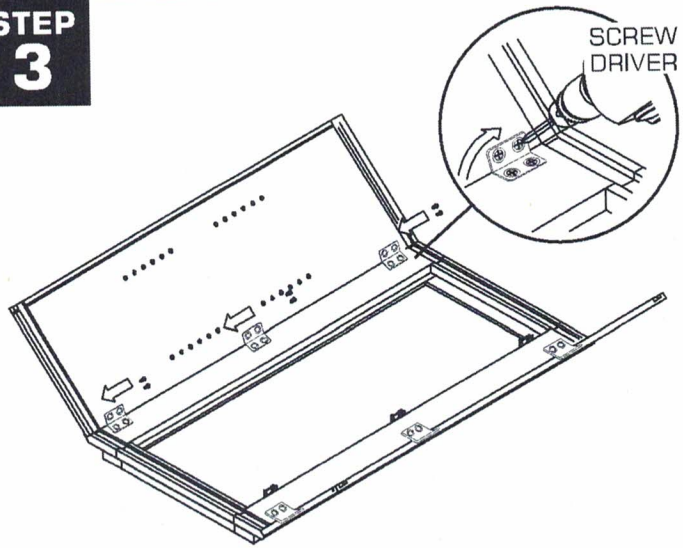


STEP 4

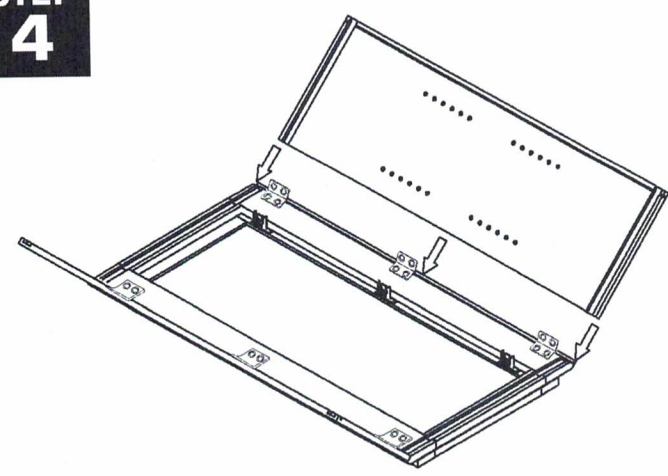

STEP 5

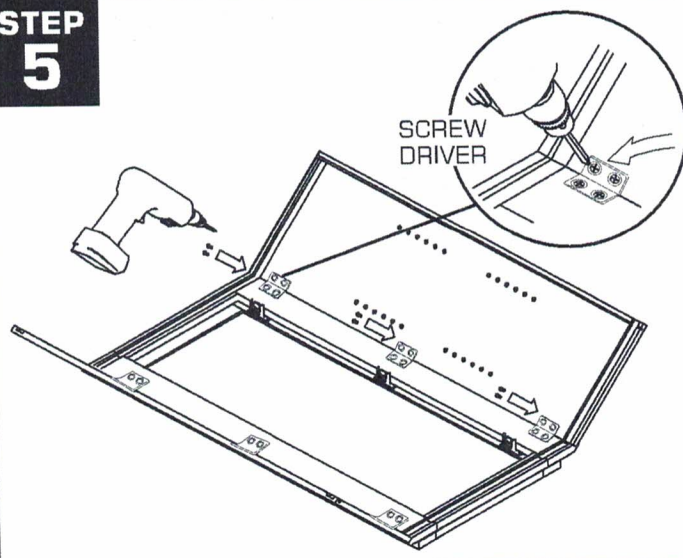


STEP 6

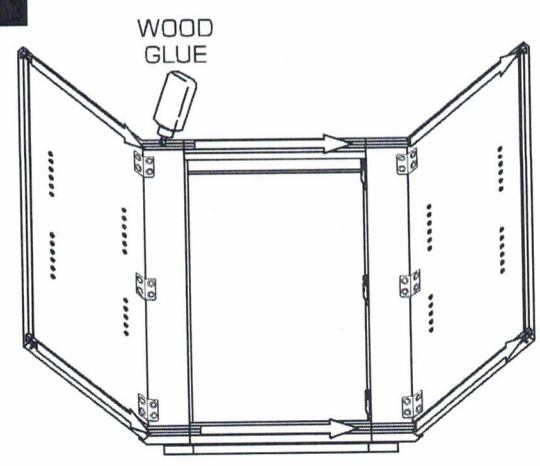





**STEP  
7**

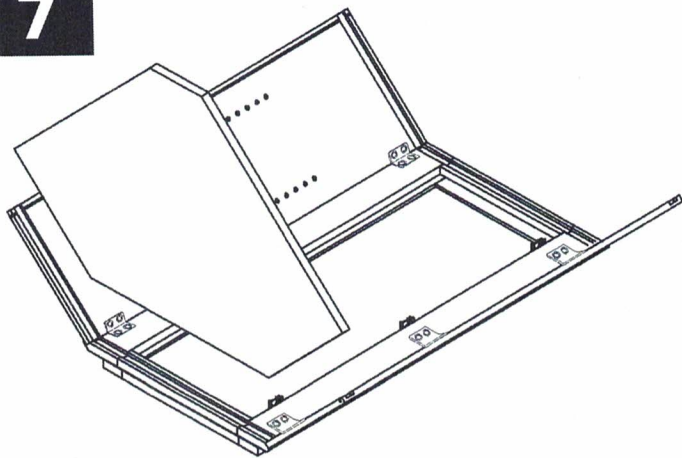


**STEP  
8**

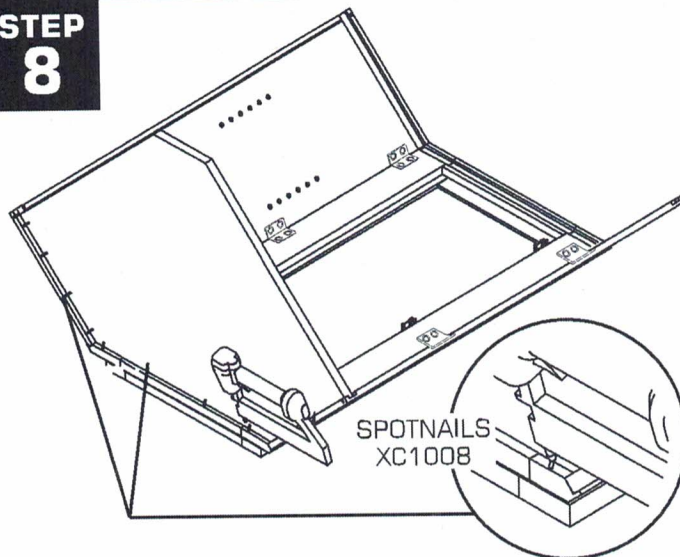


**STEP  
9**

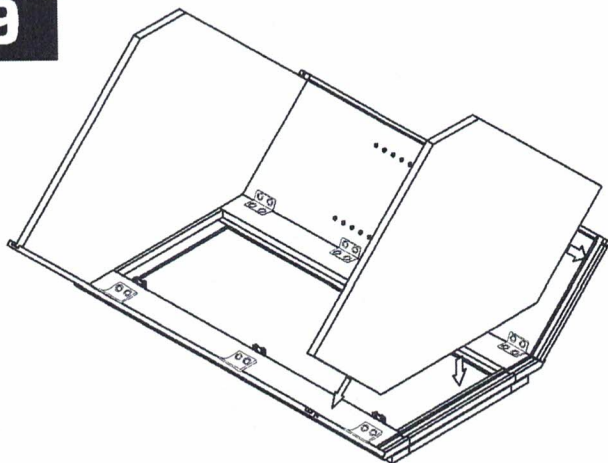


**STEP  
10**

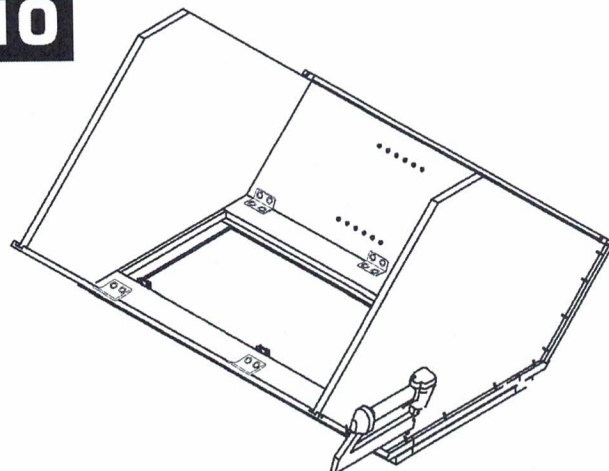


**STEP  
11**

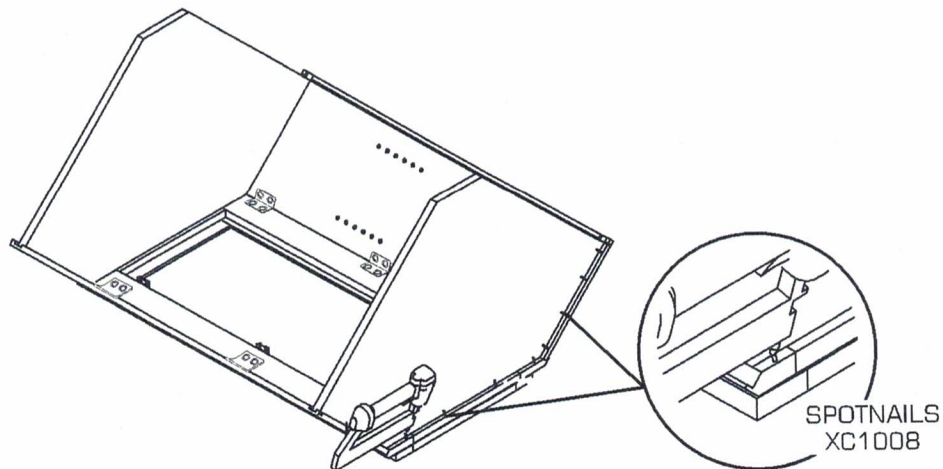


**STEP  
12**

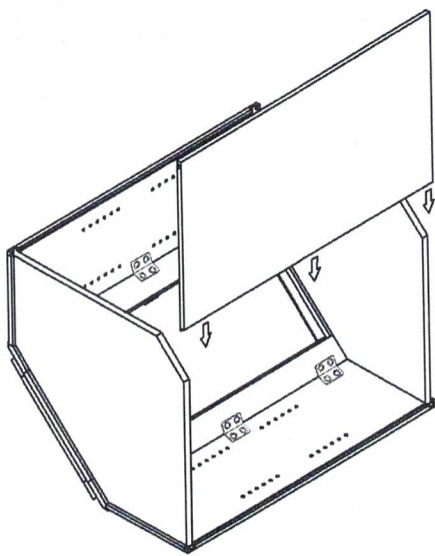


**STEP  
13**

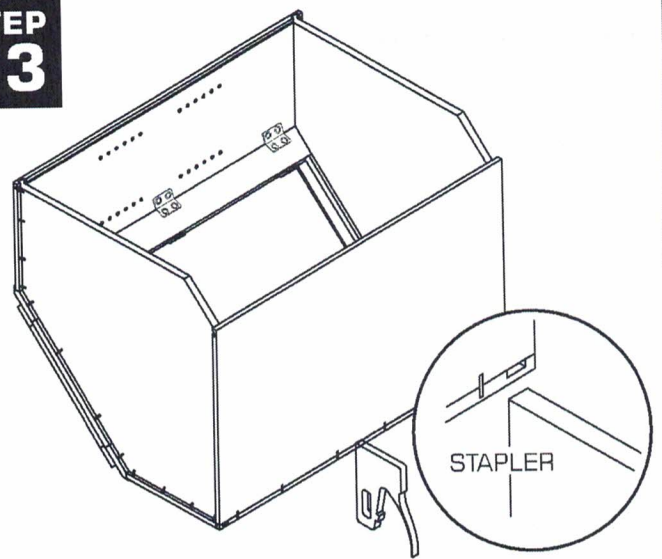


**STEP  
14**

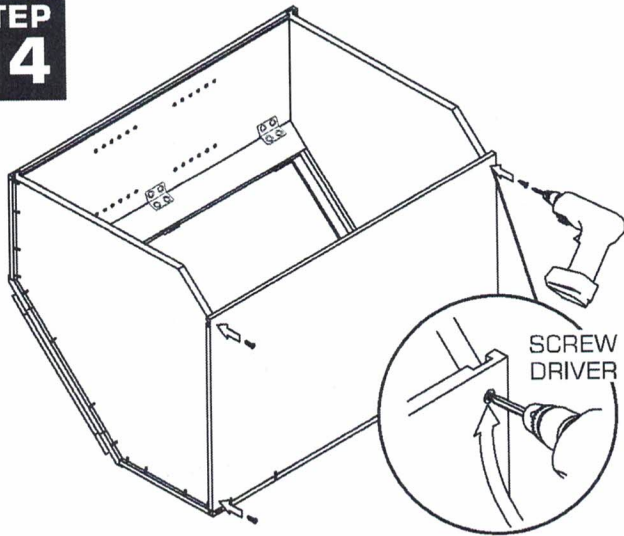


**STEP  
15**

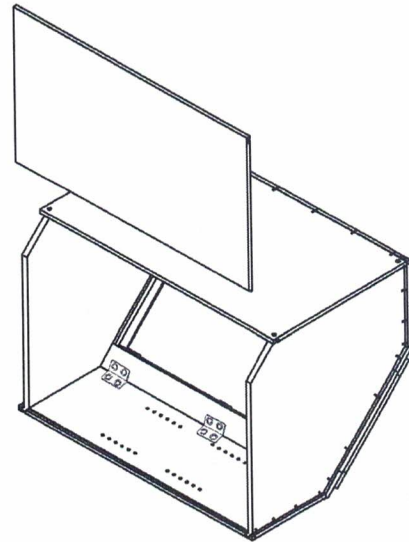


**STEP  
16**

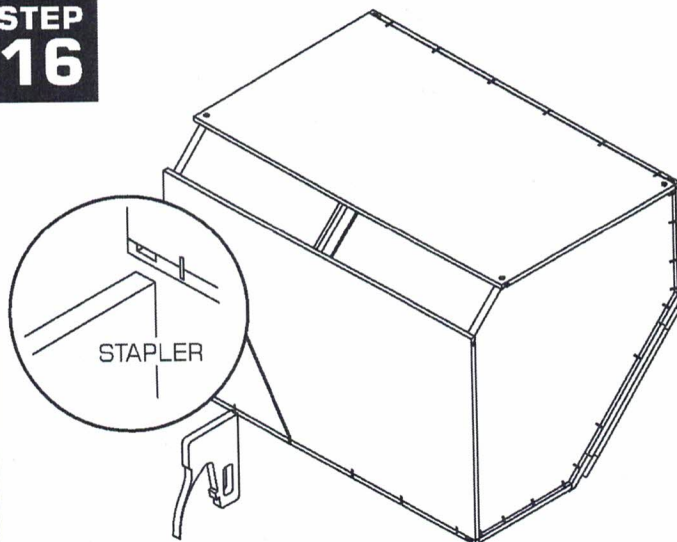


**STEP  
17**

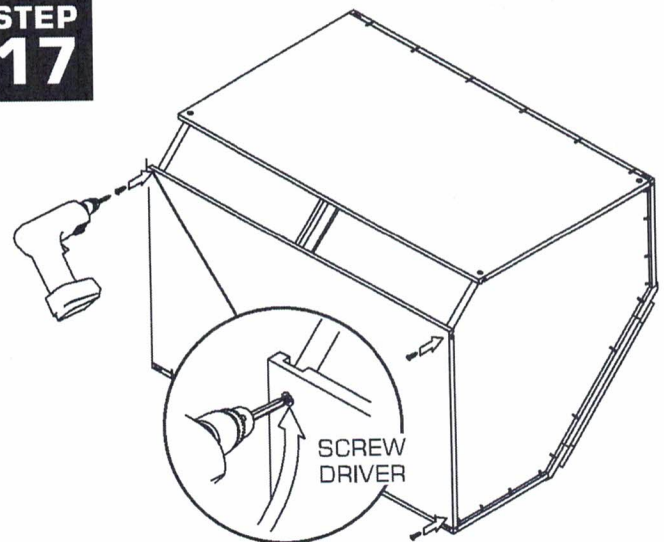


**STEP  
18**

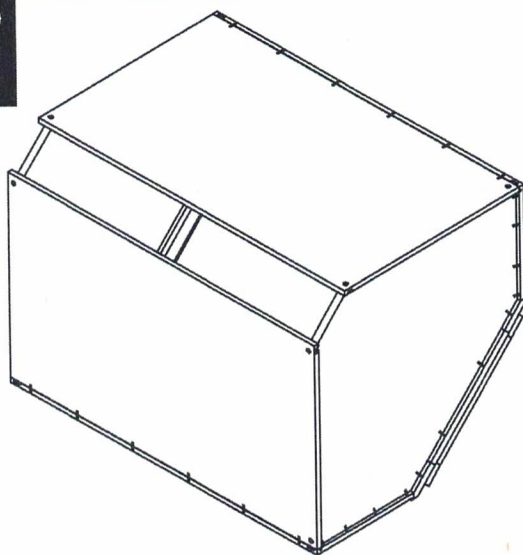


**STEP  
19**

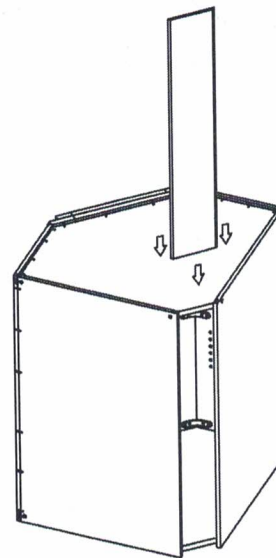


**STEP  
20**

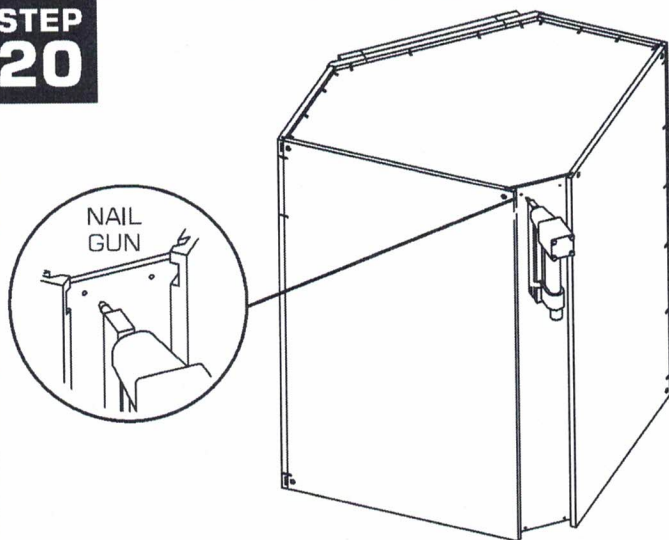

**STEP  
21**

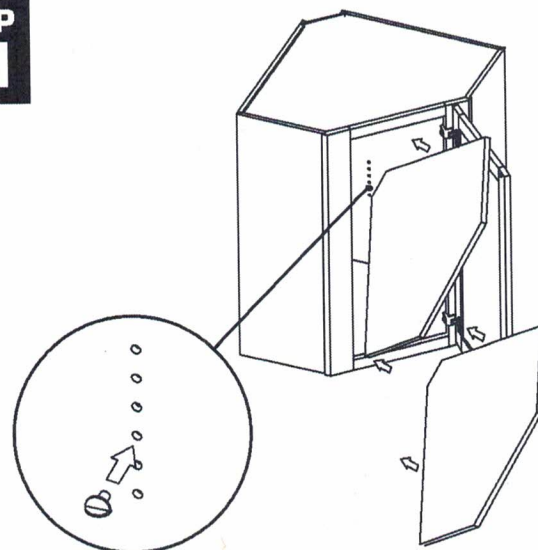


**STEP  
22**

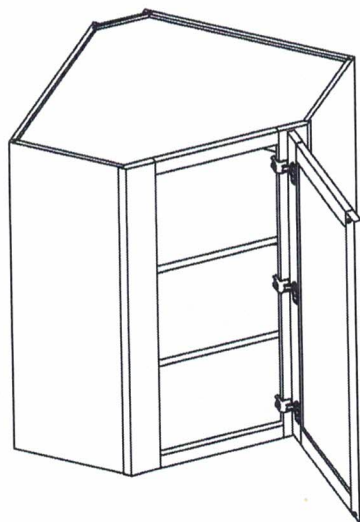



# ASSEMBLING INSTRUCTIONS - TALL PANTRY

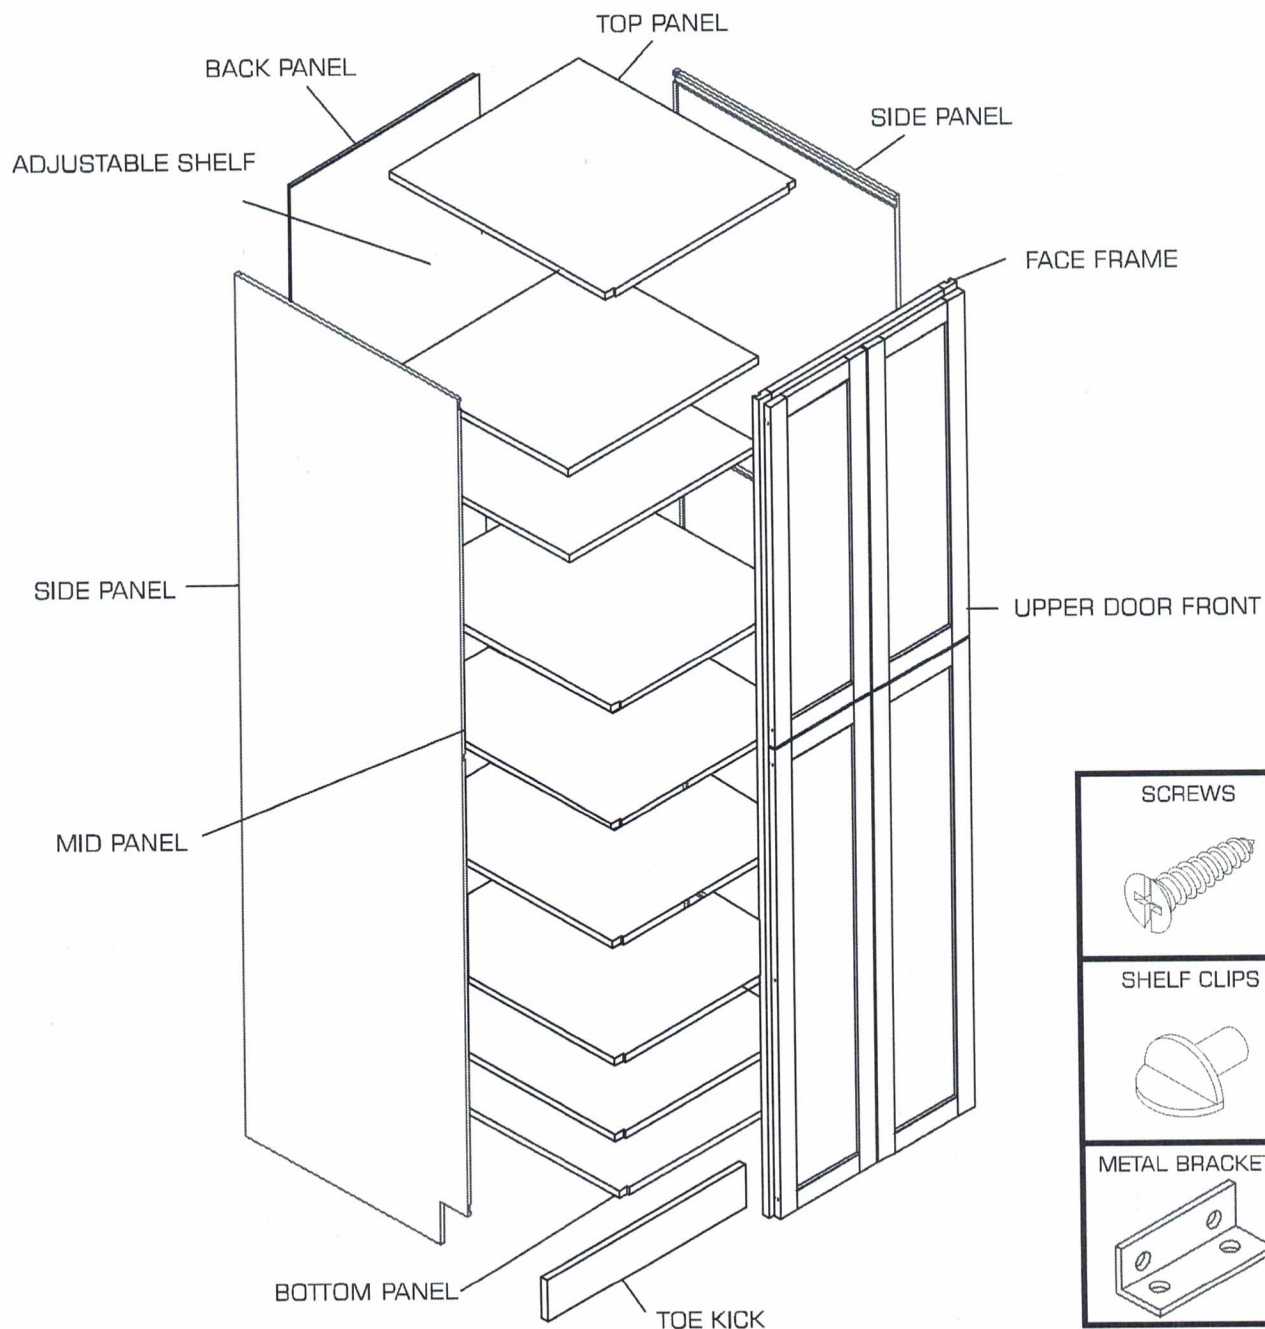

## TOOLS




WOOD  
GLUE




SCREW  
DRIVER




RUBBER  
Mallet

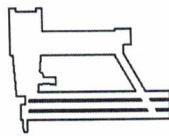

NAIL  
GUN

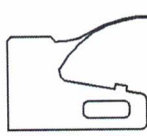

STAPLER

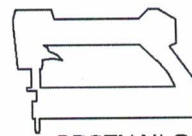


SPOTNAILS  
XC1008


**STEP 1**




**STEP 2**

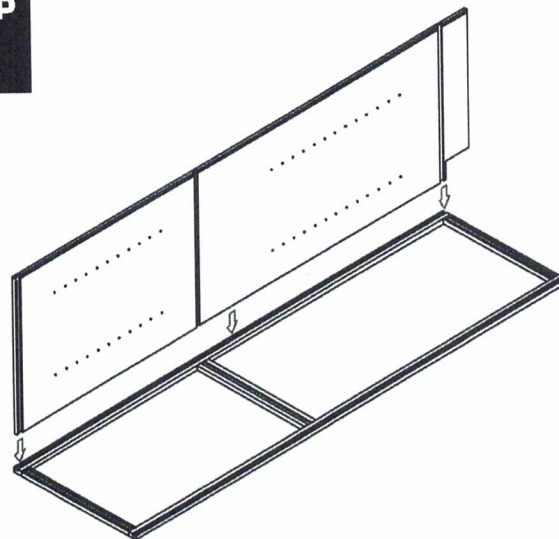


**STEP 3**

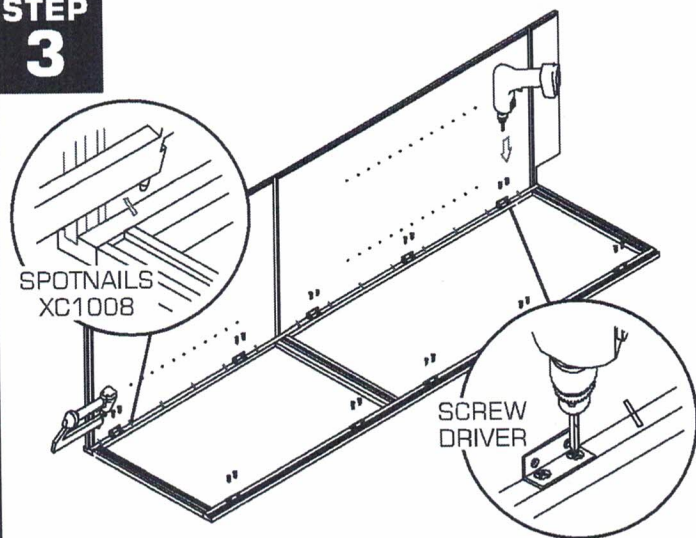


**STEP 4**

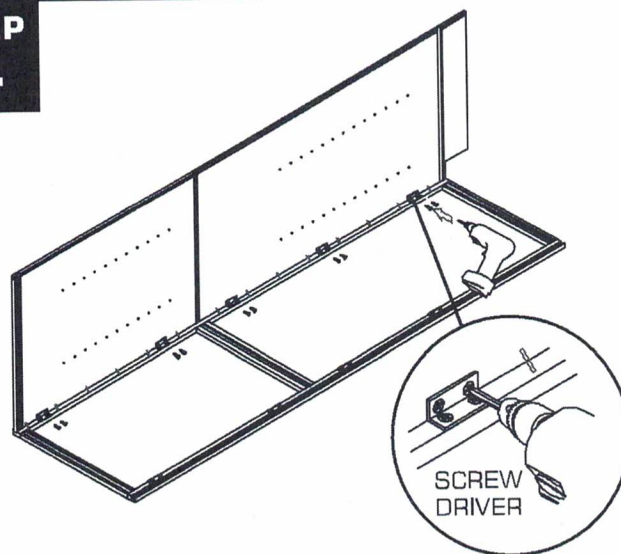


**STEP 5**

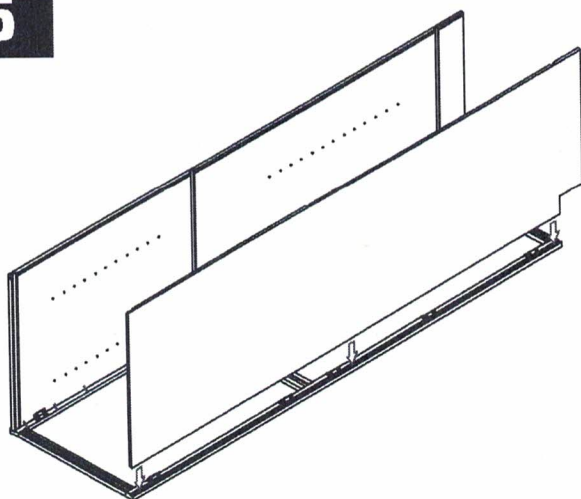


**STEP 6**

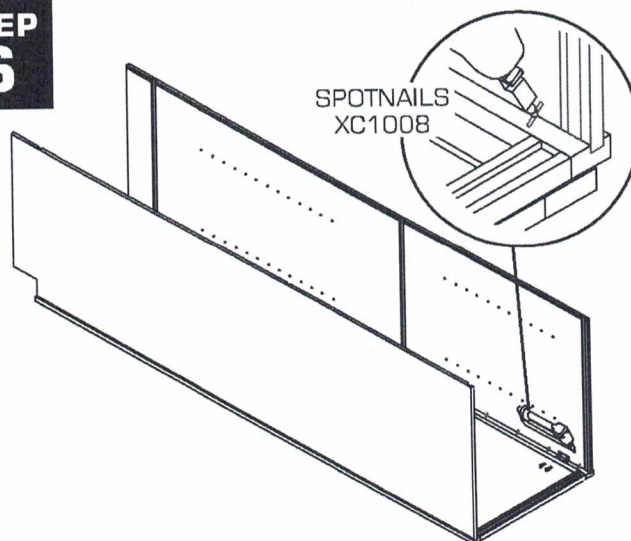


STEP  
7

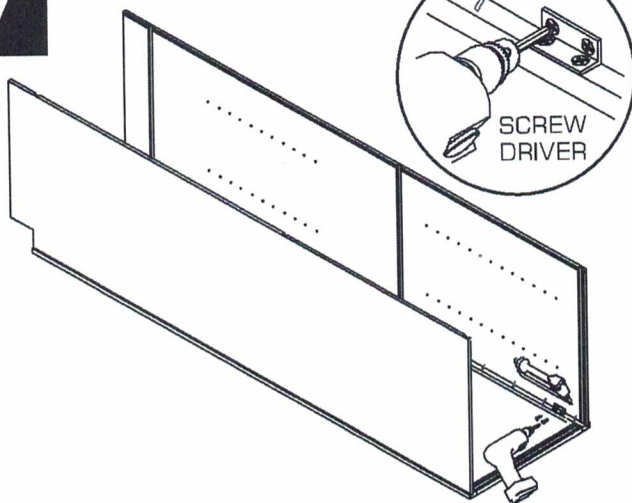


STEP  
8

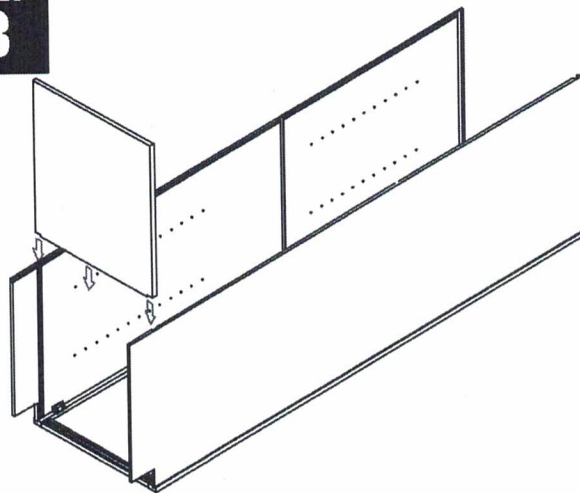


STEP  
9

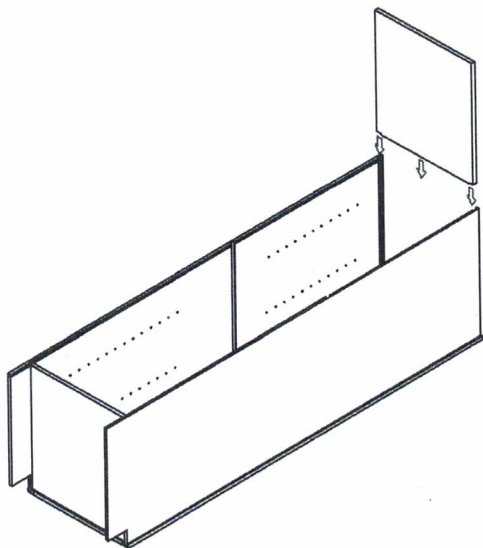

STEP  
10

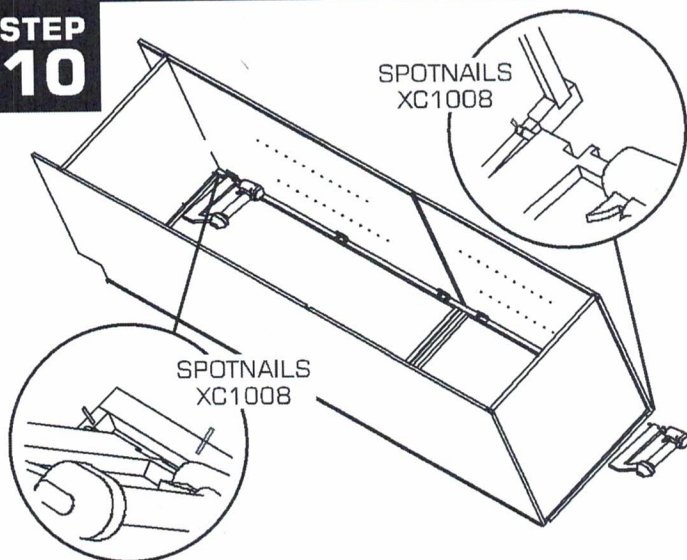


STEP  
11

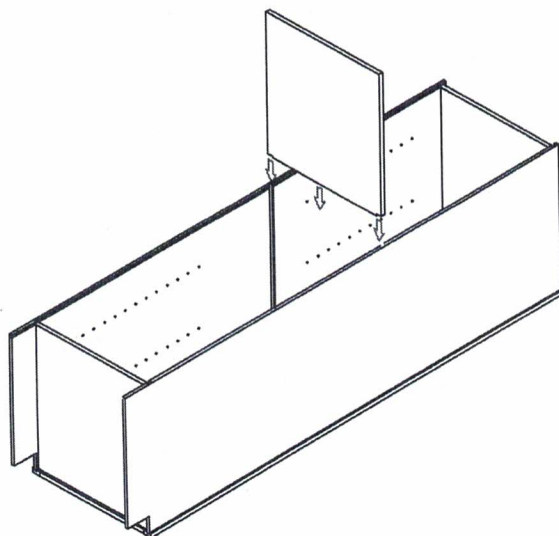





**STEP  
12**

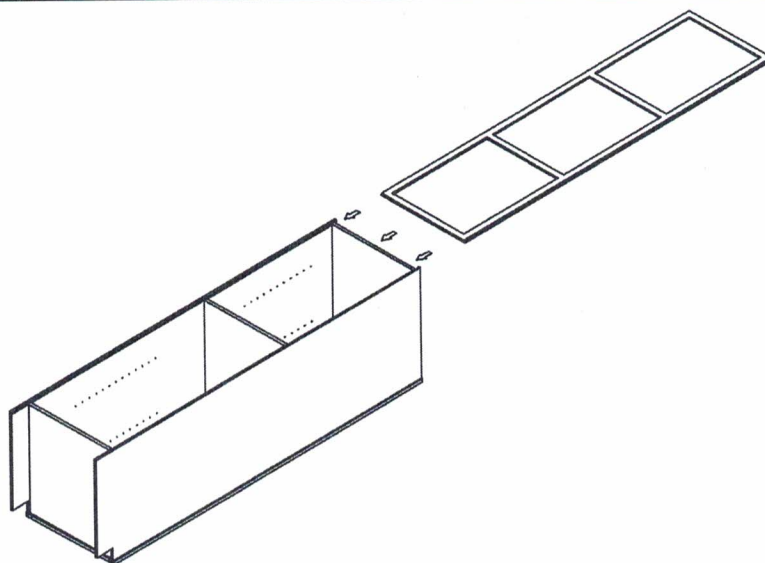


**STEP  
13**

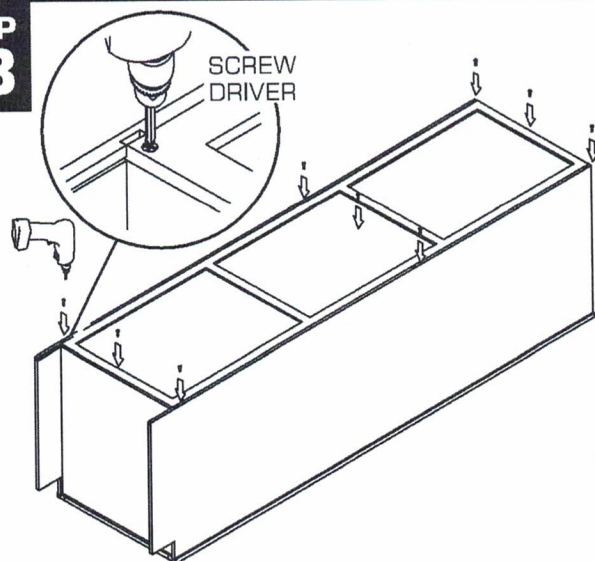


**STEP  
14**

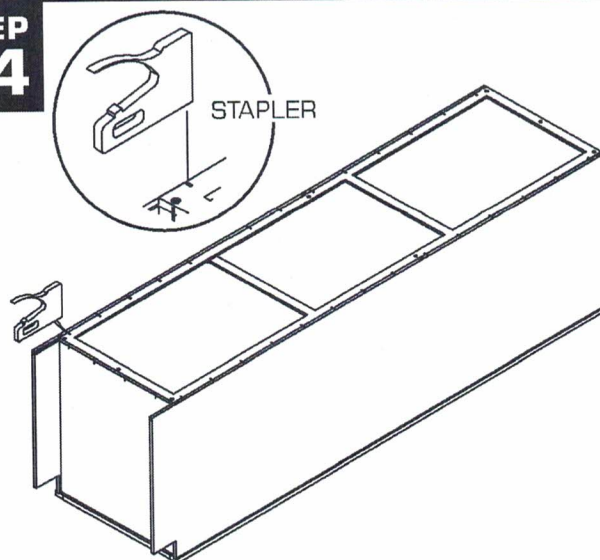


**STEP  
15**

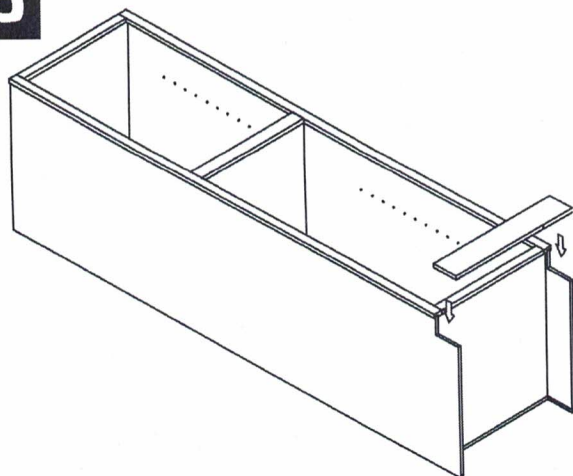


**STEP  
16**

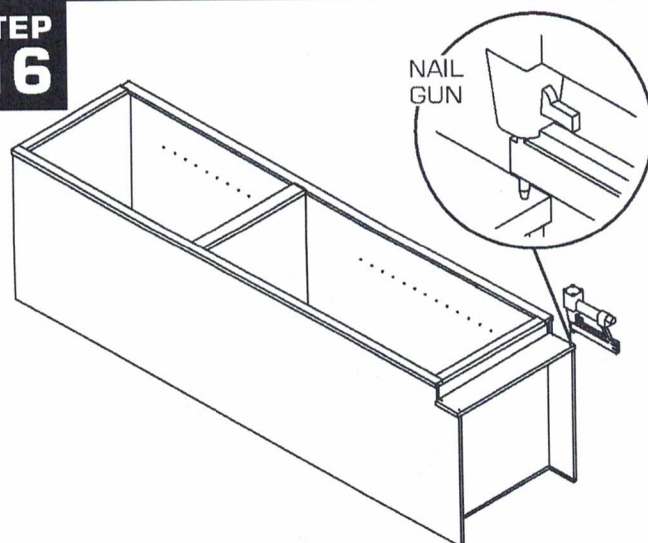


**STEP  
17**

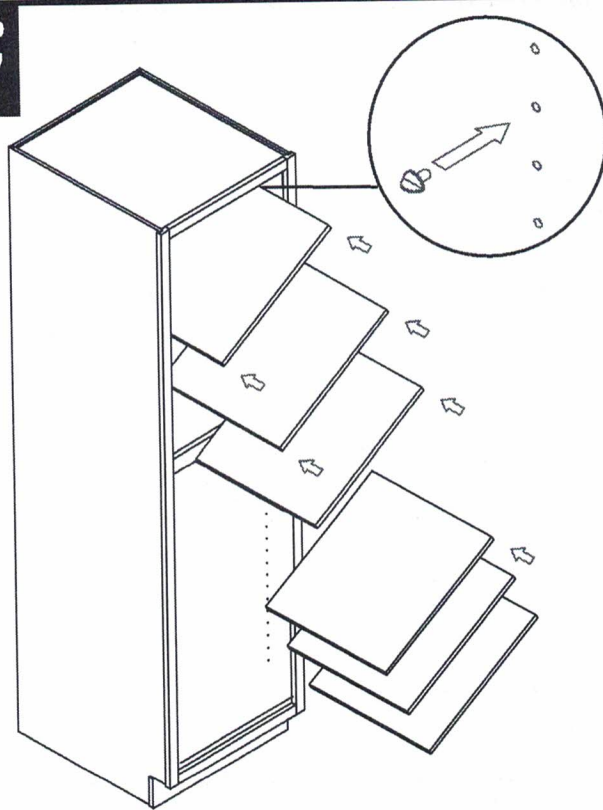


**STEP  
18**

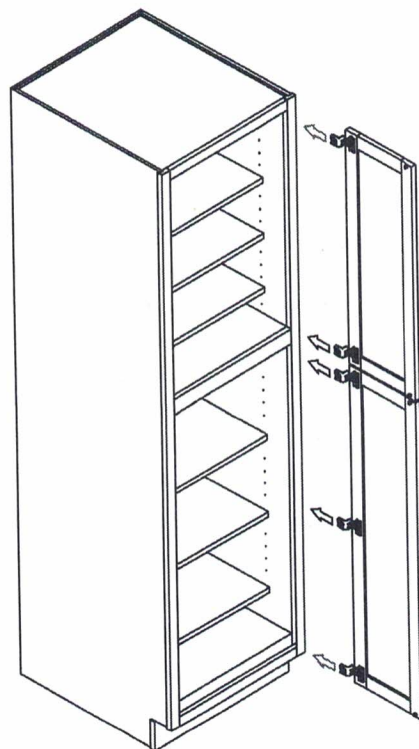


**STEP  
19**

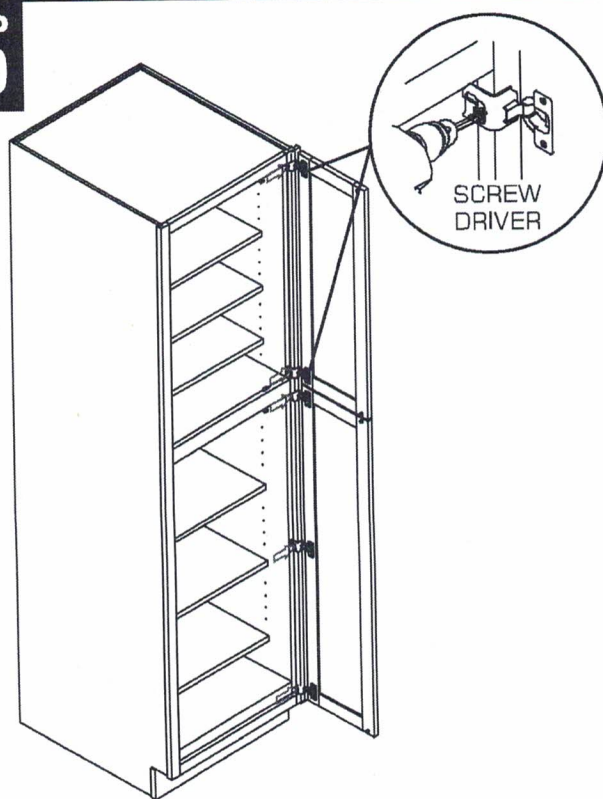


**STEP  
20**

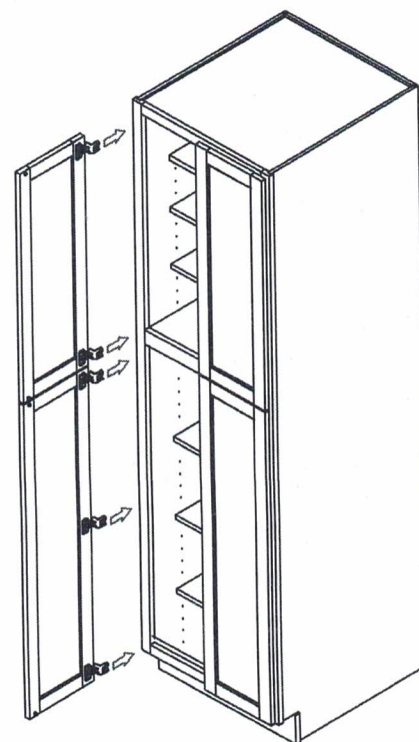

**STEP  
21**


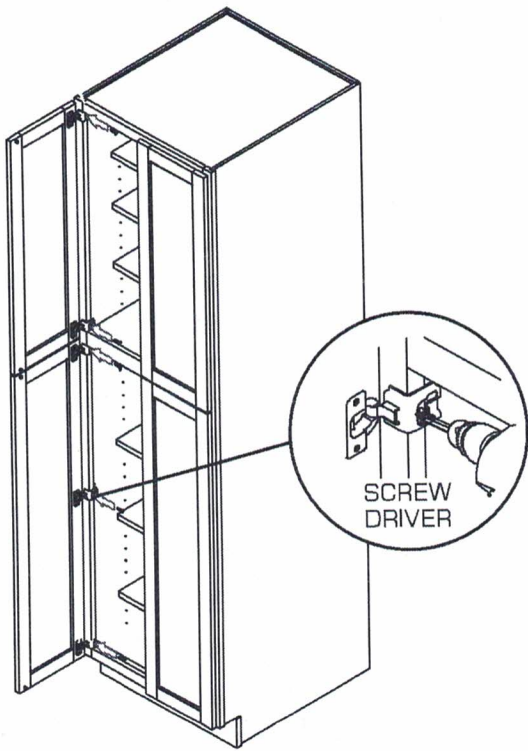


**STEP  
22**

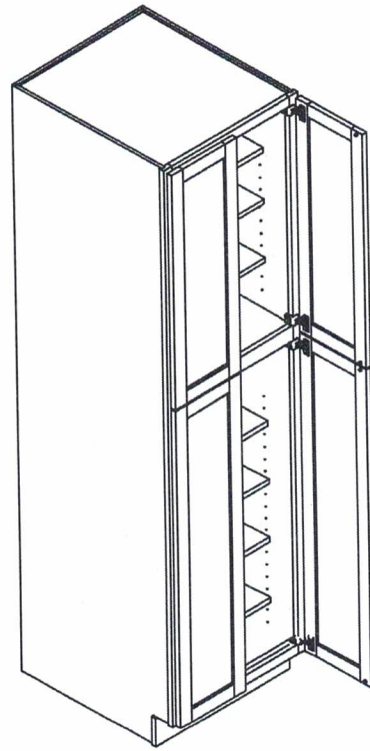





# ASSEMBLING INSTRUCTIONS - OVEN CABINET

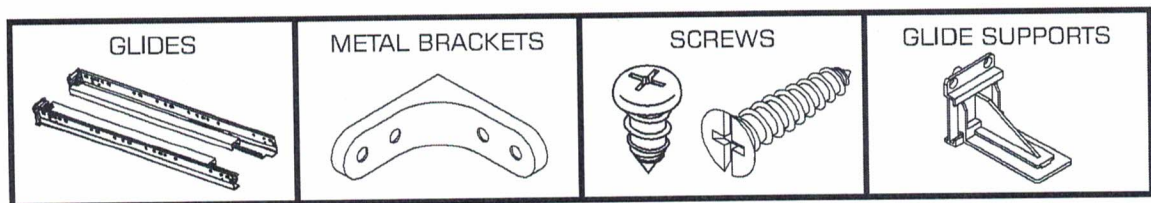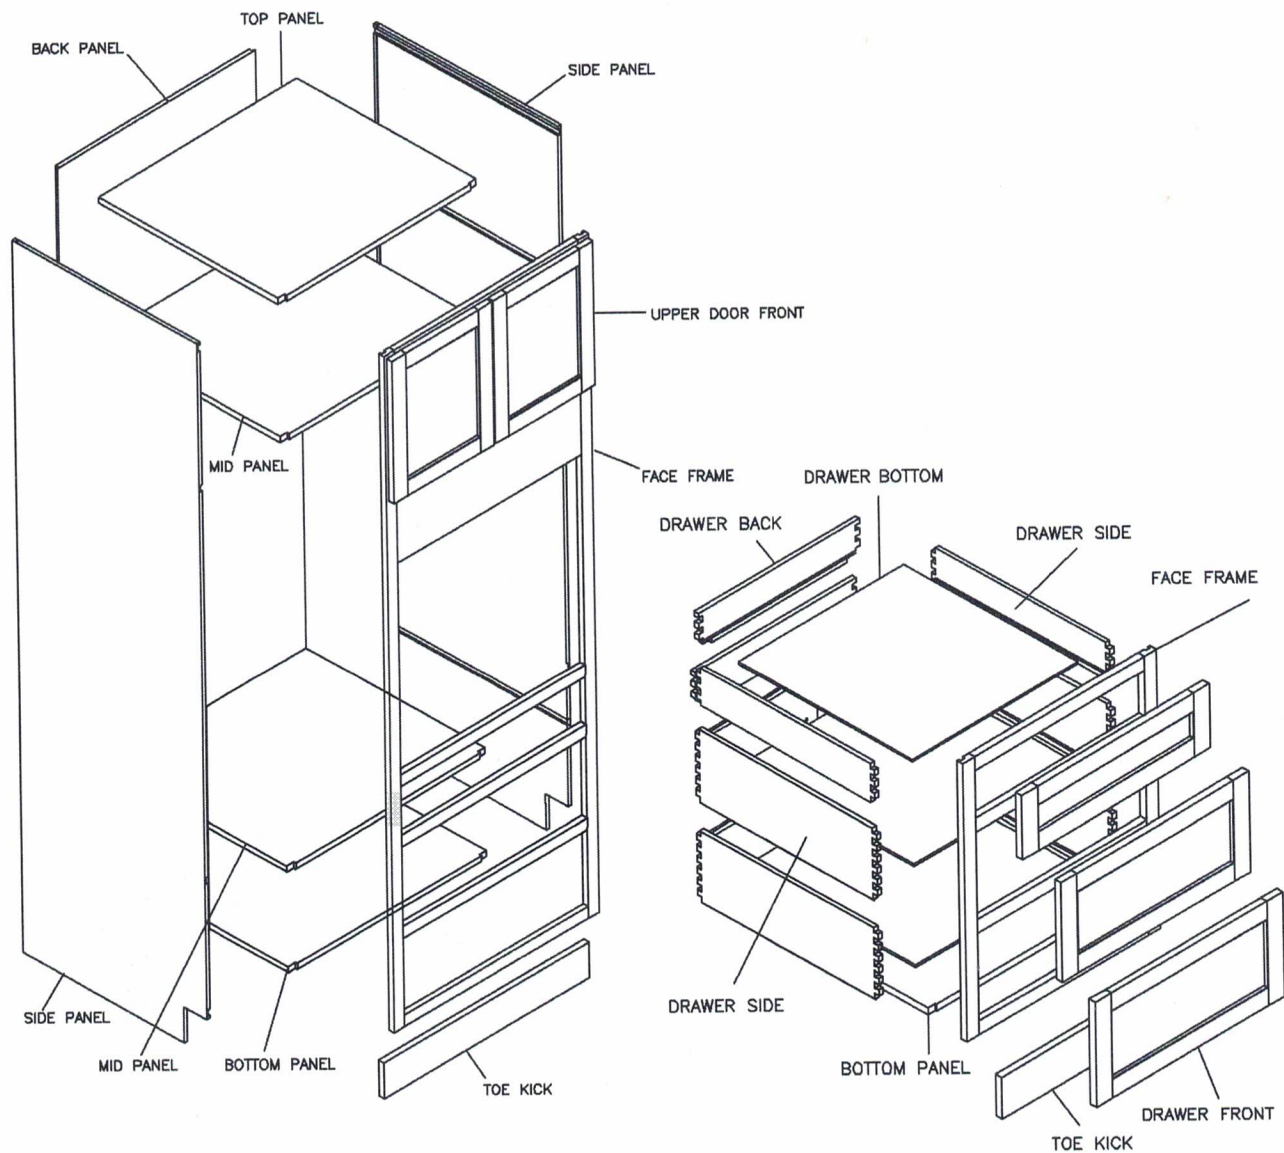


**STEP 1**

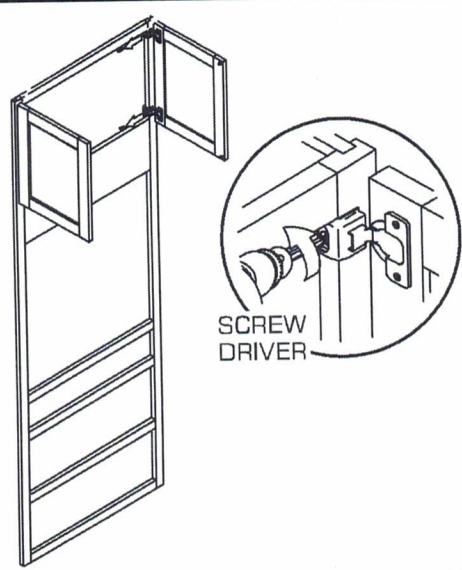


**STEP 2**

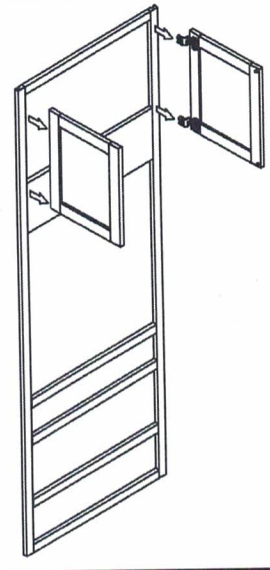


**STEP 3**

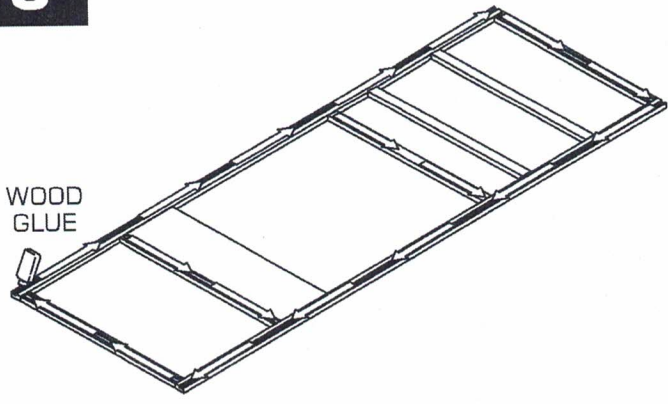


**STEP 4**





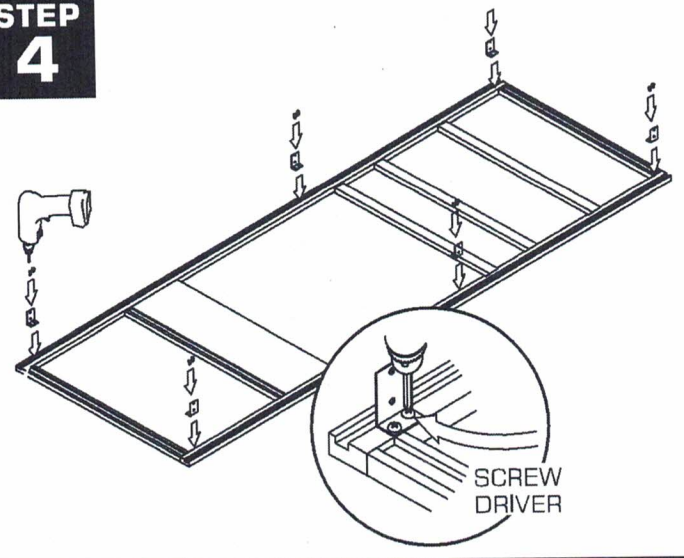


**STEP 5**

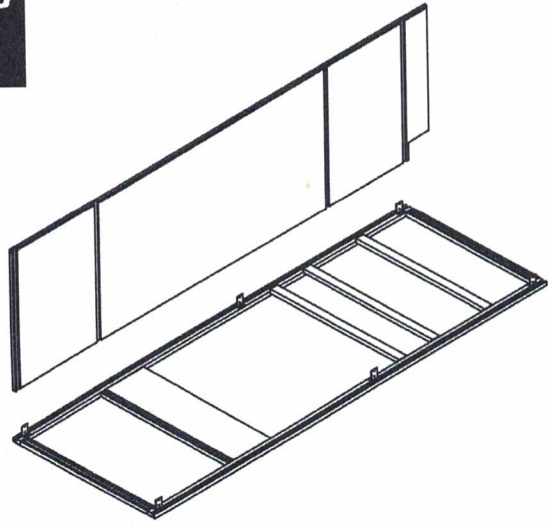


**STEP 6**

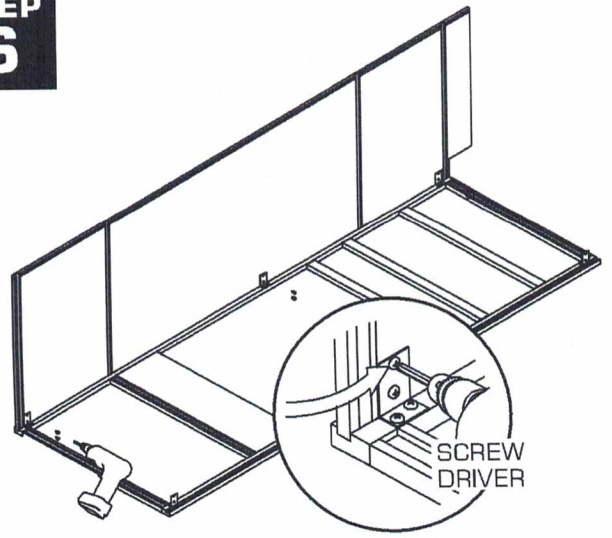

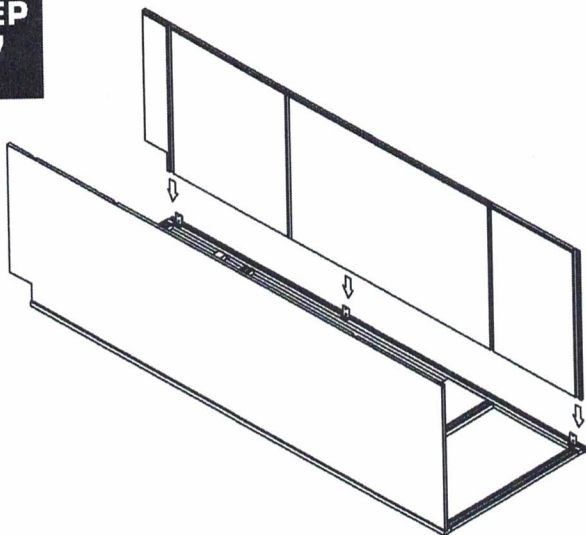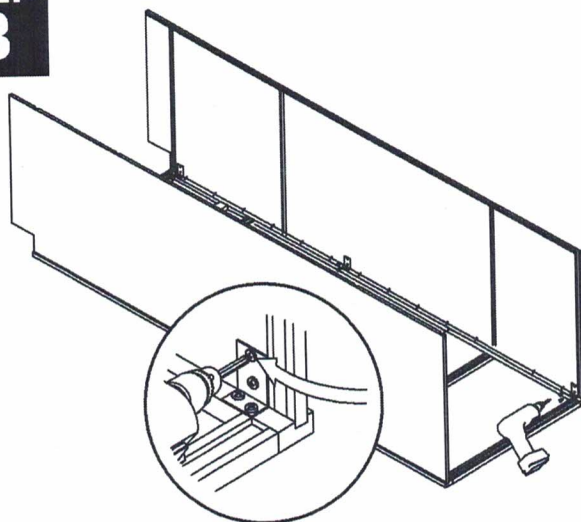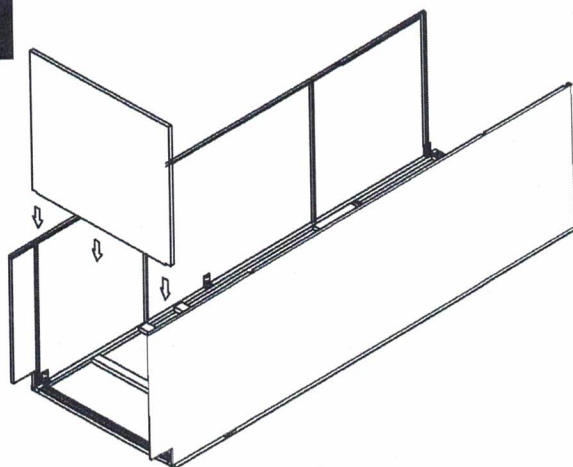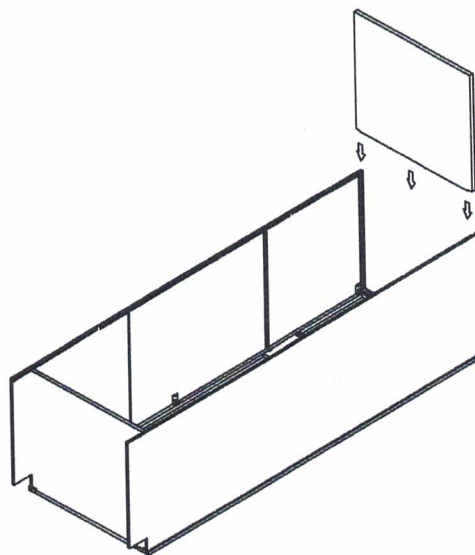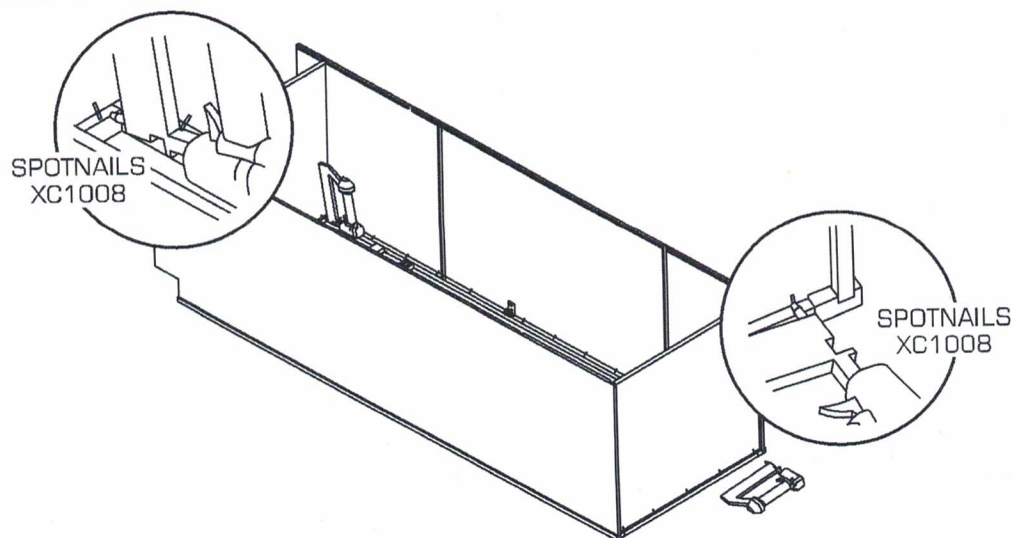
**STEP  
7****STEP  
8****STEP  
9****STEP  
10****STEP  
11**




**STEP  
12**

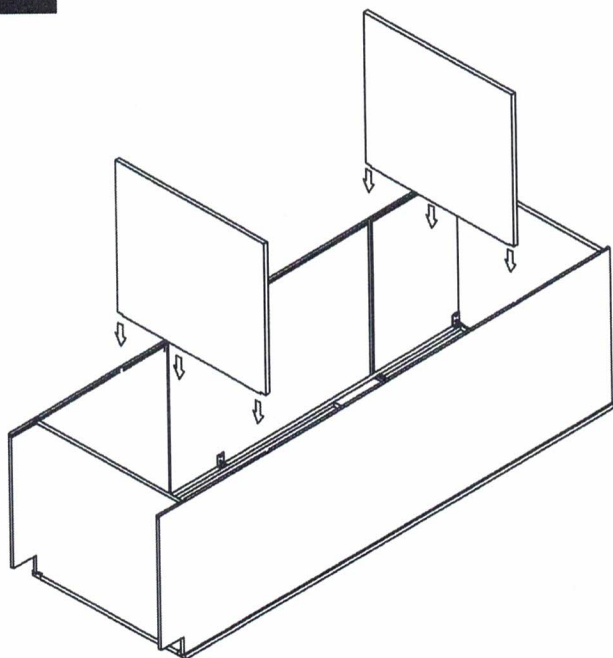


**STEP  
13**

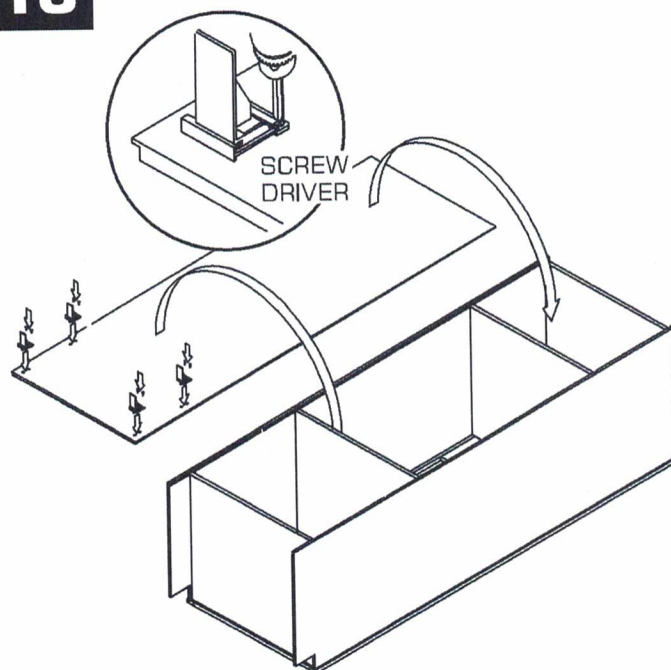


**STEP  
14**

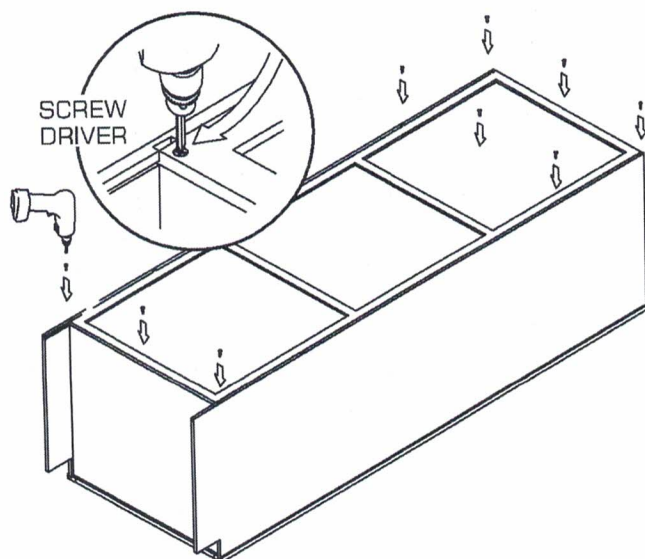


**STEP  
15**

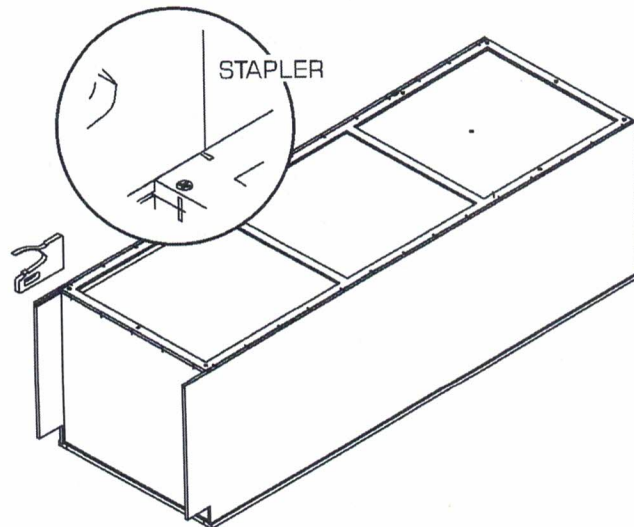


**STEP  
16**

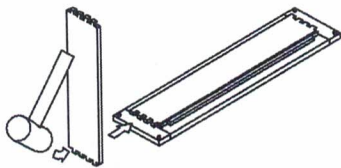


**STEP  
17**

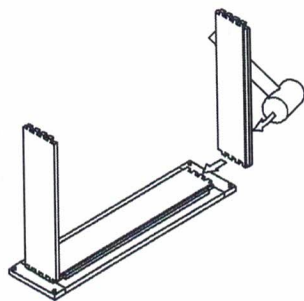


**STEP  
18**

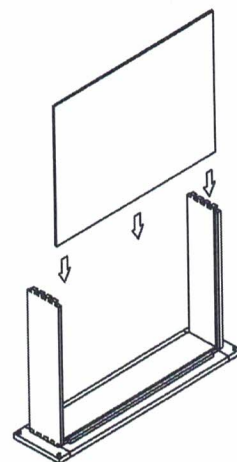


**STEP  
19**

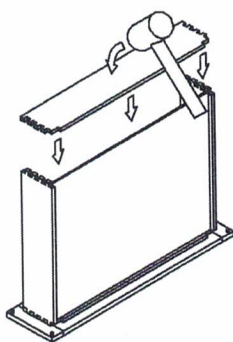


**STEP  
20**

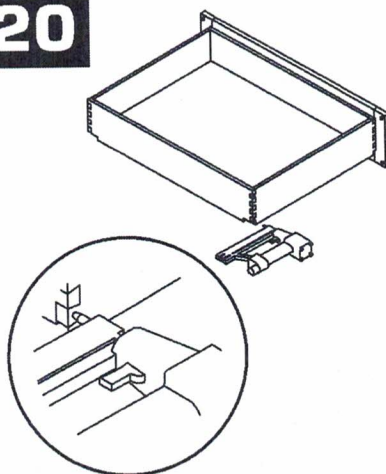


**STEP  
21**

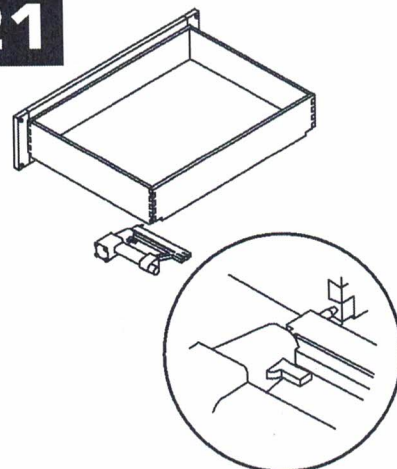


**STEP  
22**

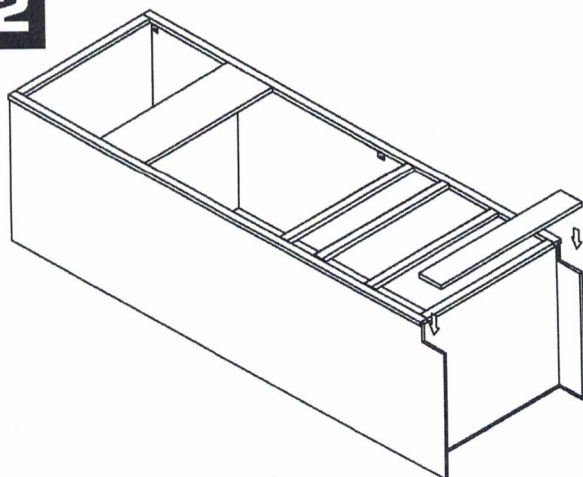


**STEP  
23**

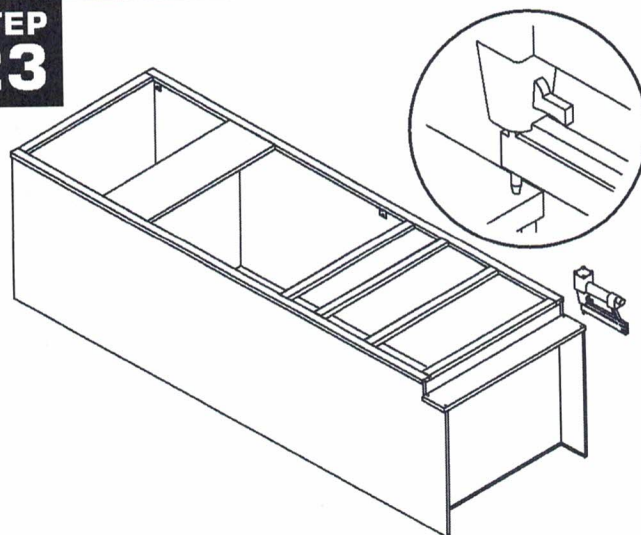

**STEP  
24**

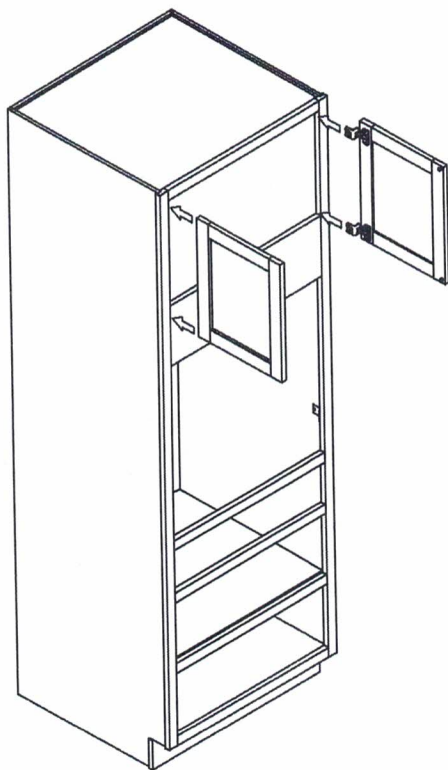


**STEP  
25**

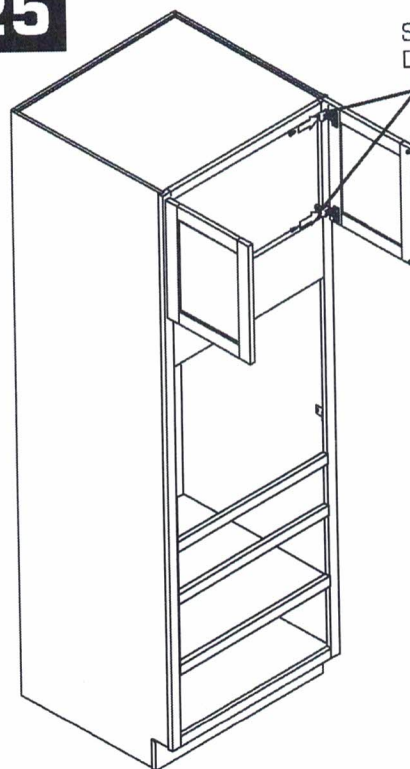


SCREW  
DRIVER

OVEN CABINET

**STEP  
26**




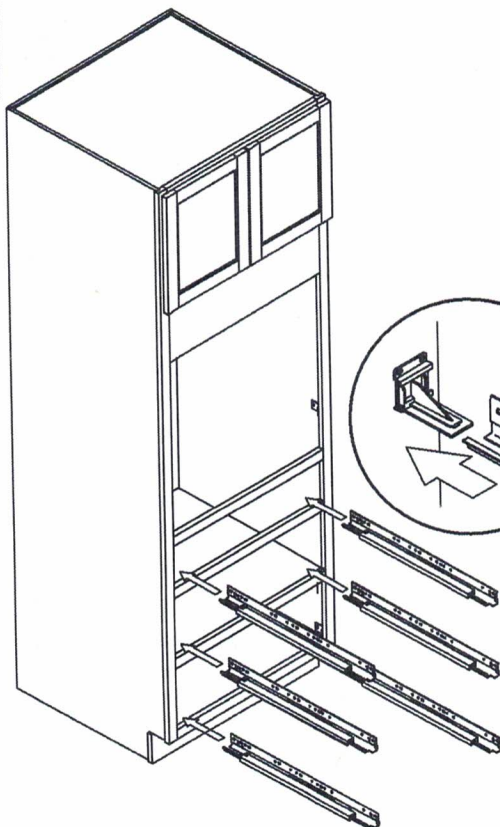


**STEP  
27**



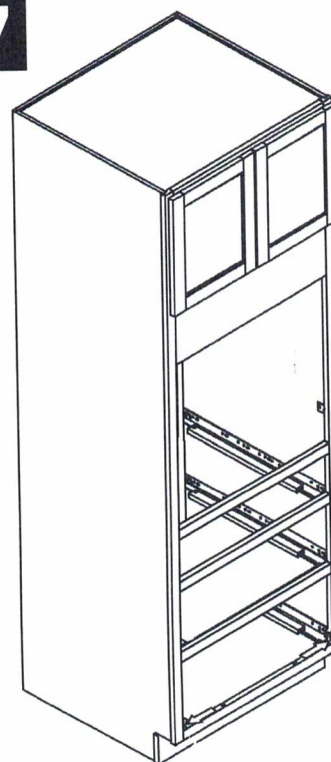


SCREW  
DRIVER

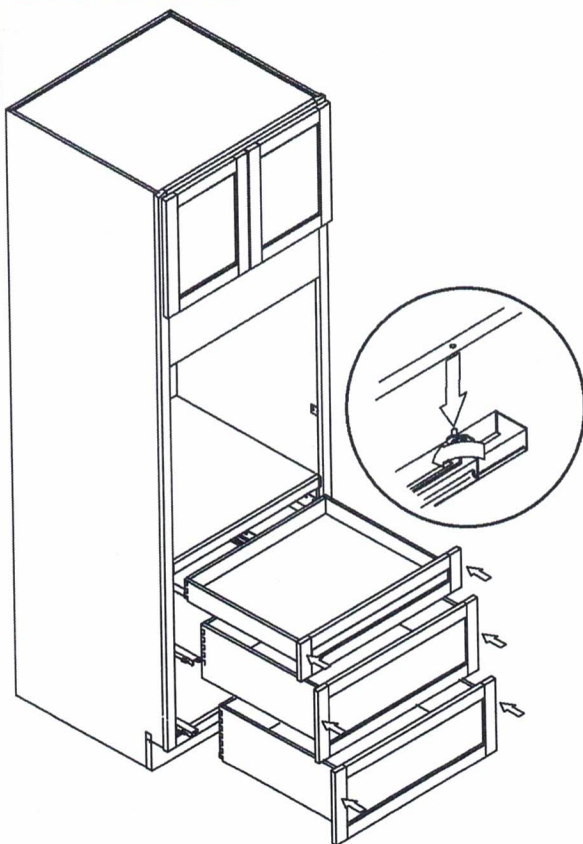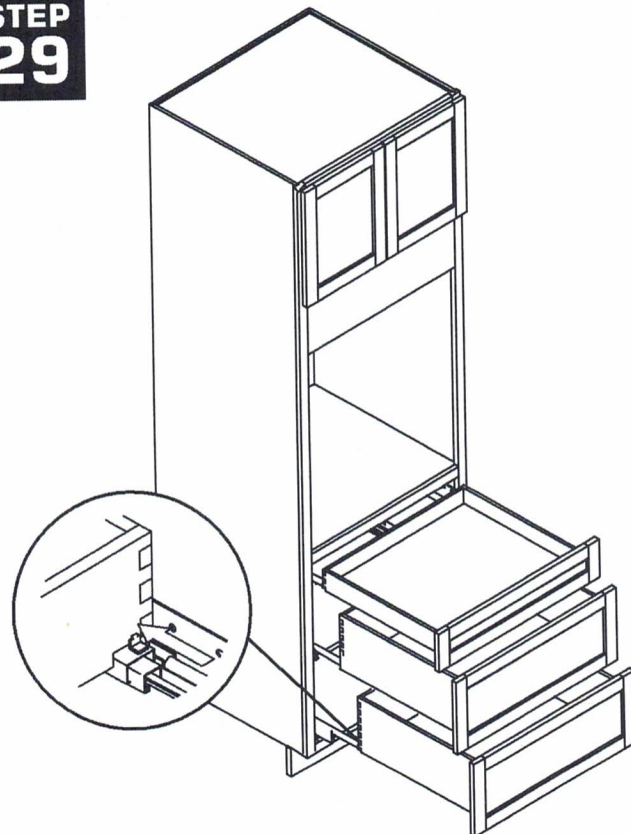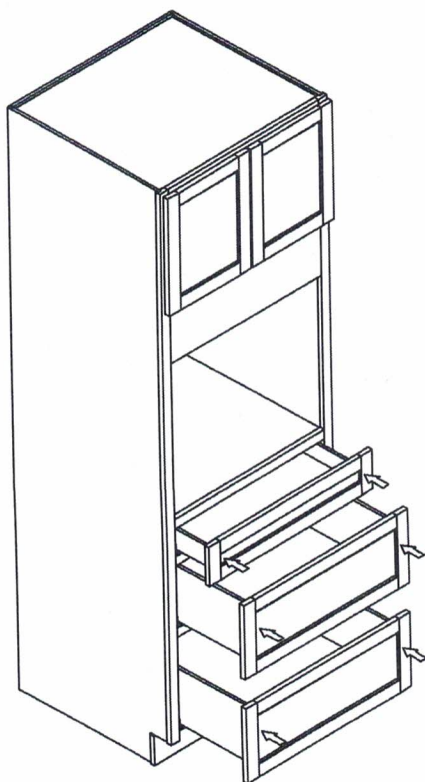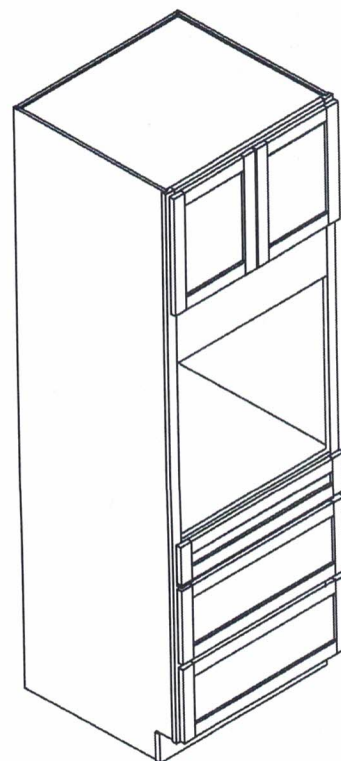


**STEP  
28****STEP  
29****STEP  
30****STEP  
31**

# ASSEMBLING INSTRUCTIONS - VANITY CABINET

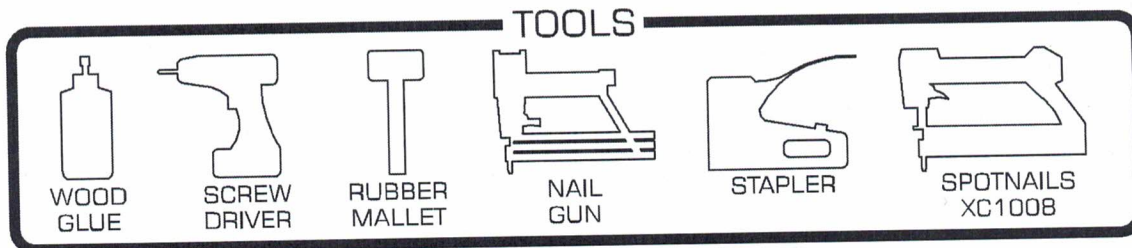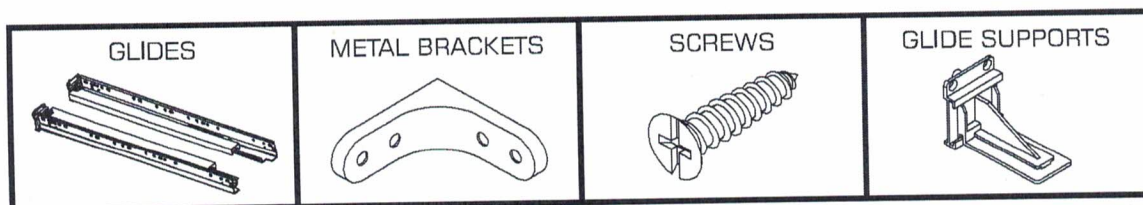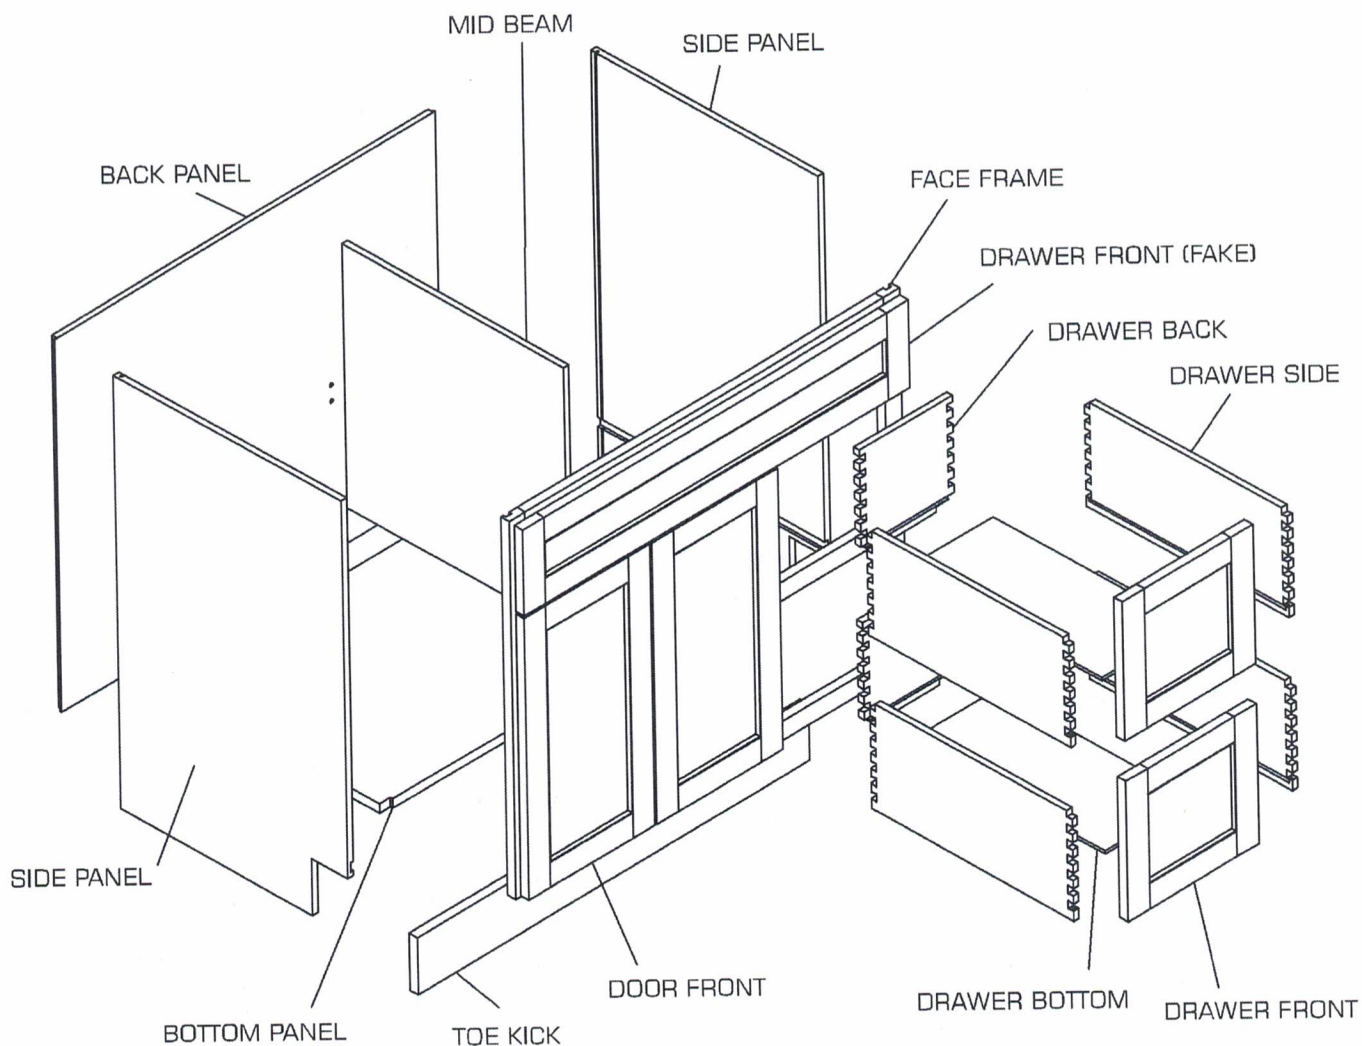





**STEP 1**

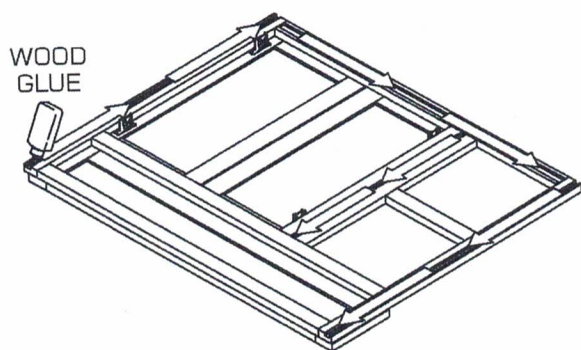


**STEP 2**

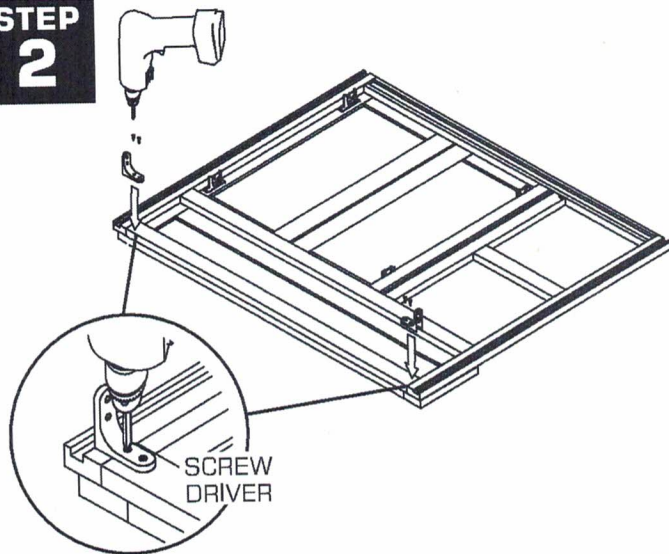


**STEP 3**

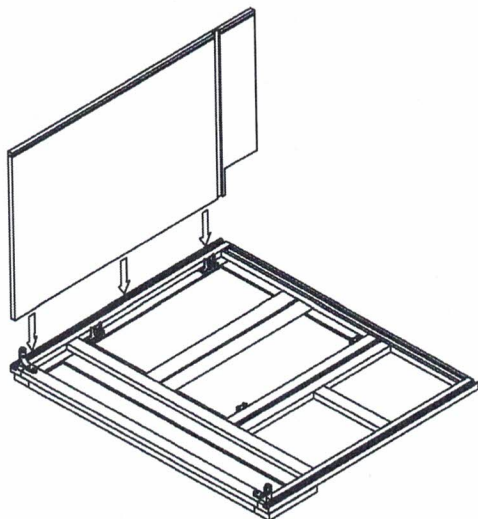


**STEP 4**

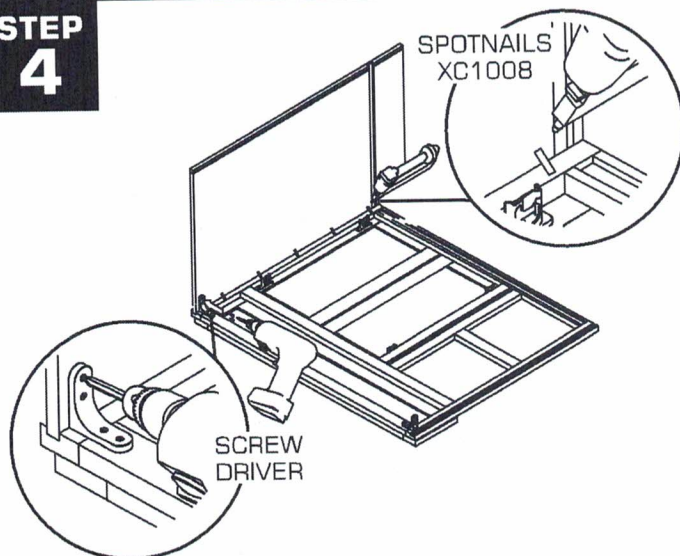

**STEP 5**

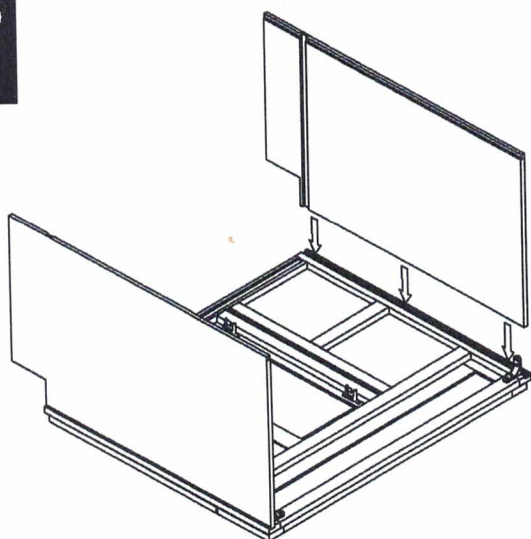


**STEP 6**

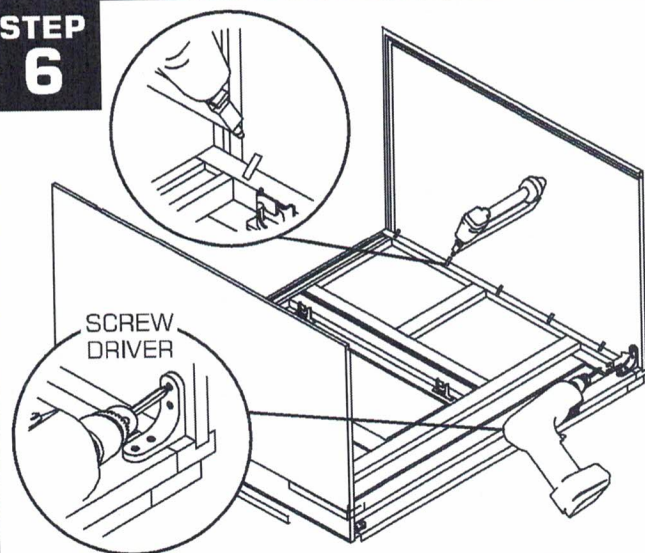





**STEP  
7**

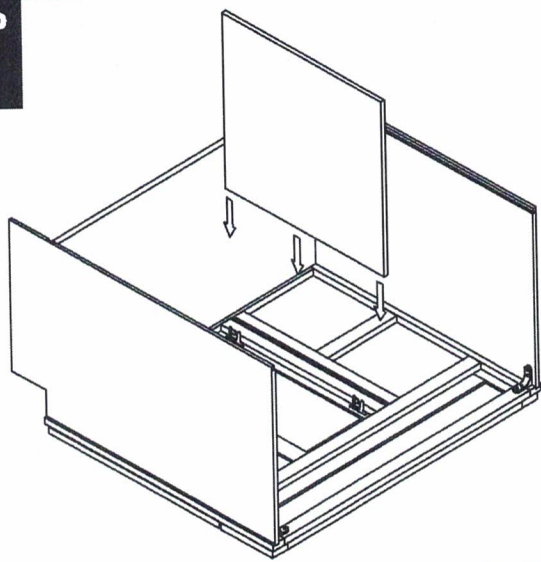


**STEP  
8**

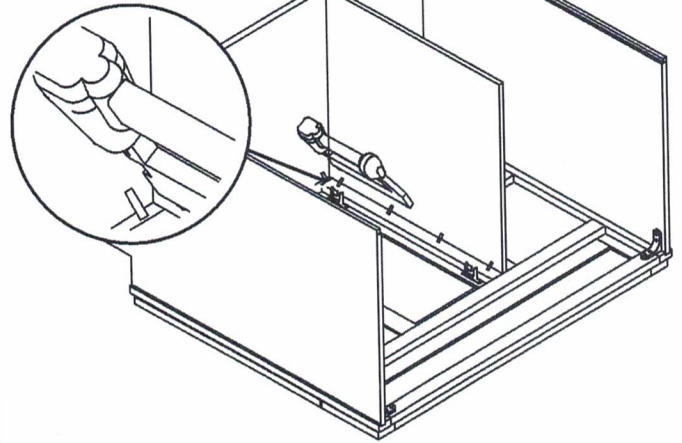


**STEP  
9**

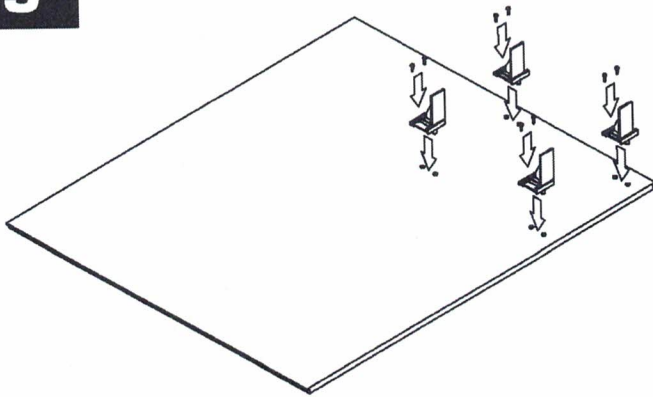


**STEP  
10**

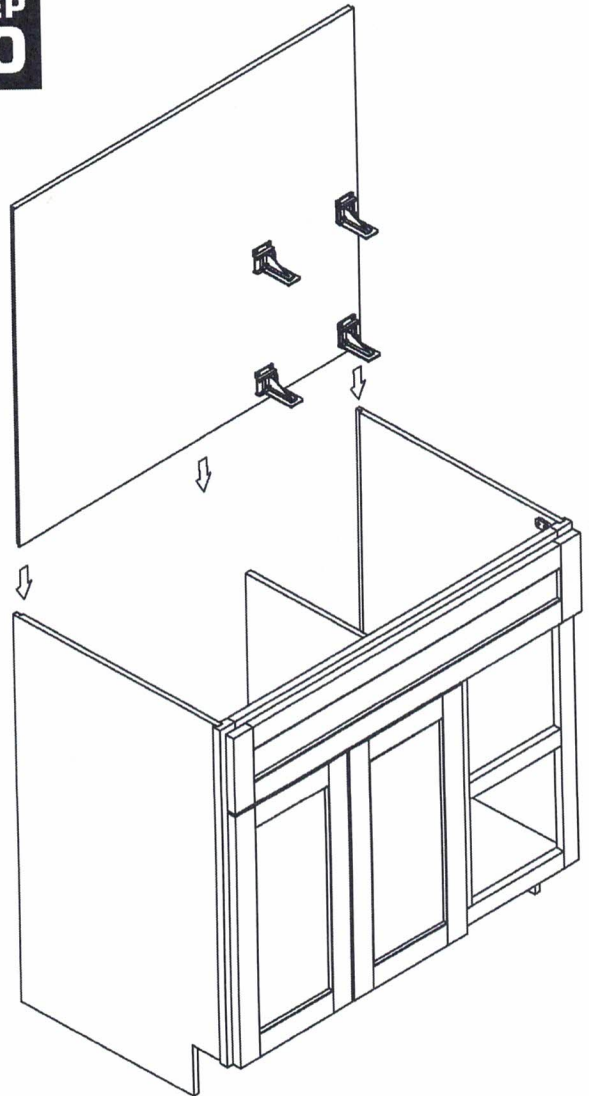


**STEP 11**

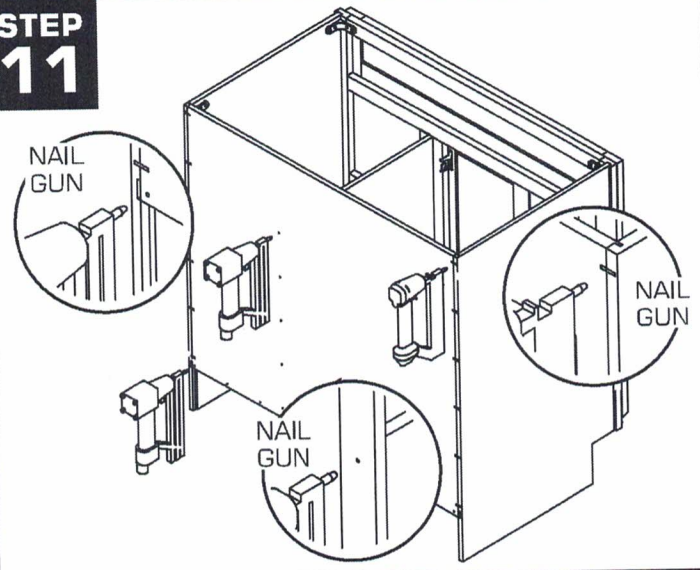


**STEP 12**

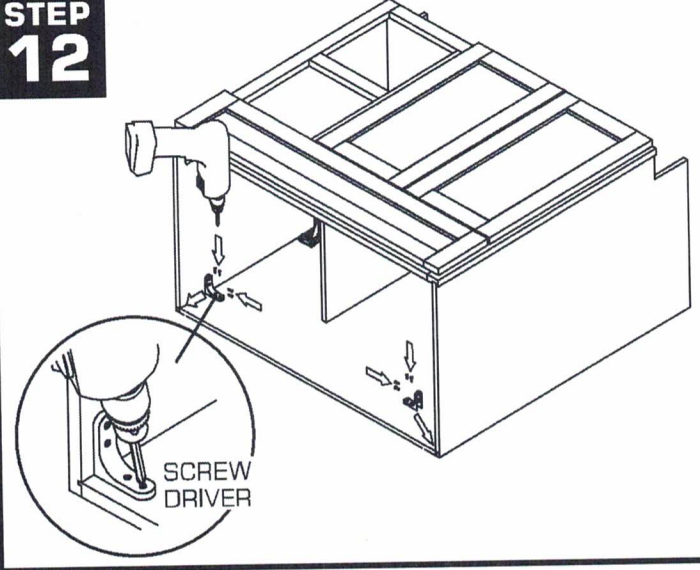


**STEP 13**

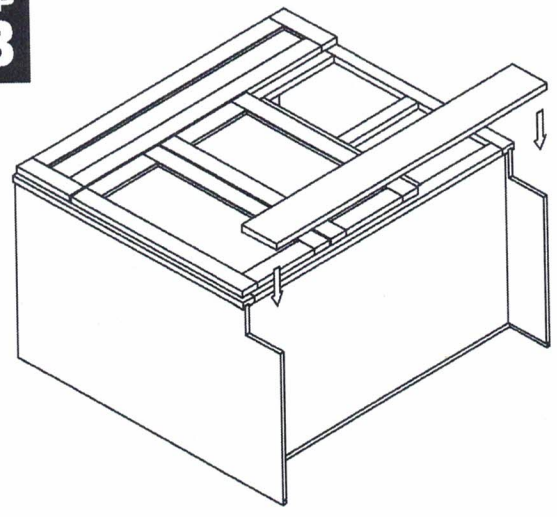


**STEP 14**

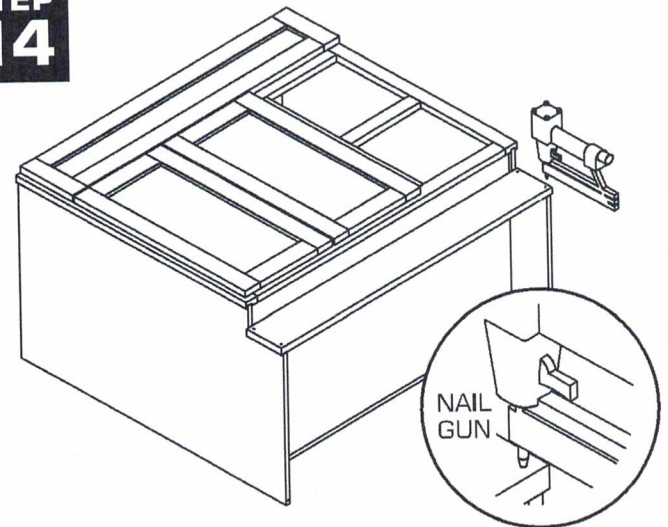


**STEP 15**

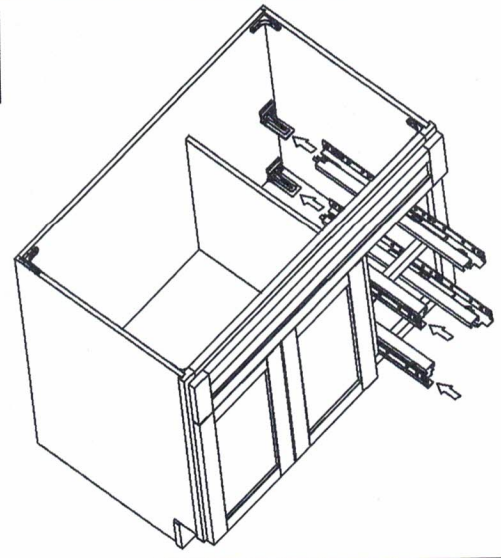


**STEP 16**

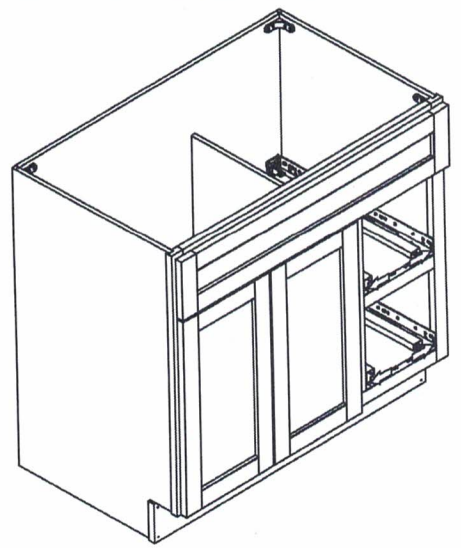


**STEP  
17**

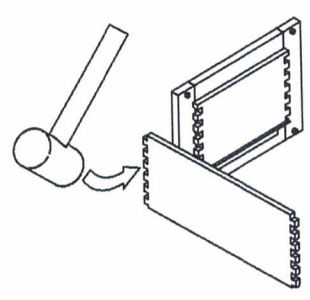


**STEP  
18**

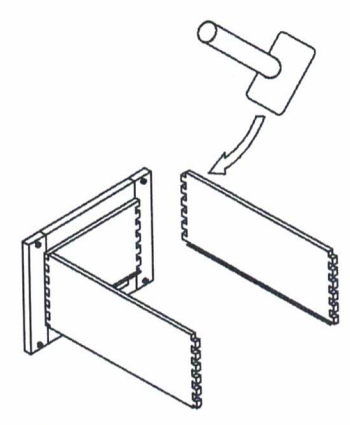


**STEP  
19**

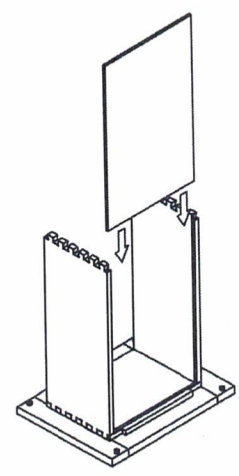

**STEP  
20**

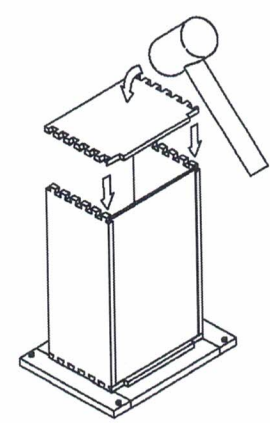


**STEP  
21**

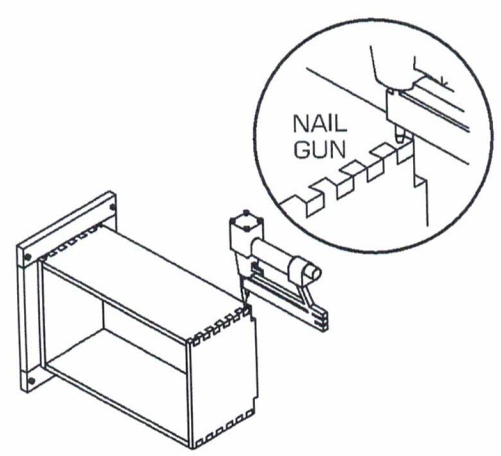




**STEP  
22**

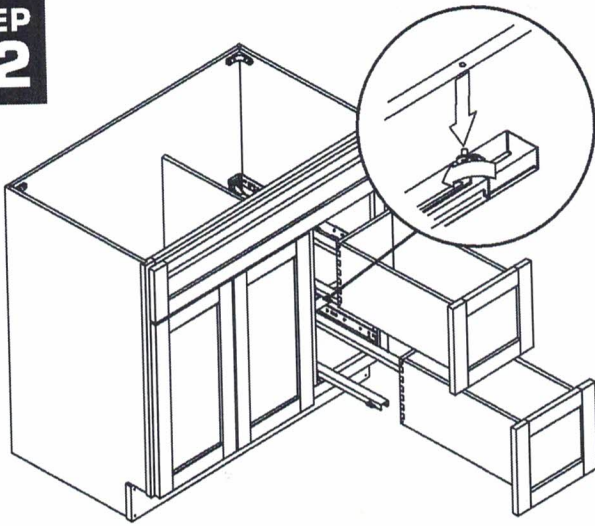

**STEP  
23**

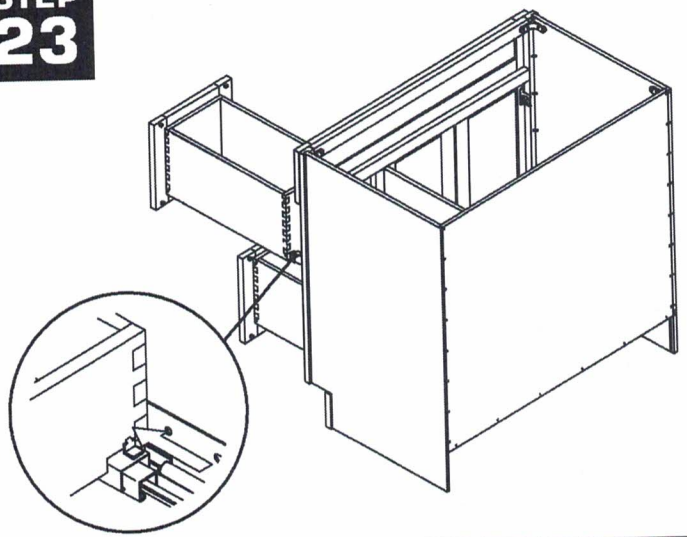

**VANITY CABINET**

**STEP  
24**

